




Quick Step Guide





How To Determine If The Lamp Requires Replacement?

After 30 seconds of turning on the TV The POWER LED and LAMP LED rapidly blink together at the same time. You may call an Authorized JVC service facility to replace the lamp or you can replace the lamp on your own. Go on to the next page for more information.

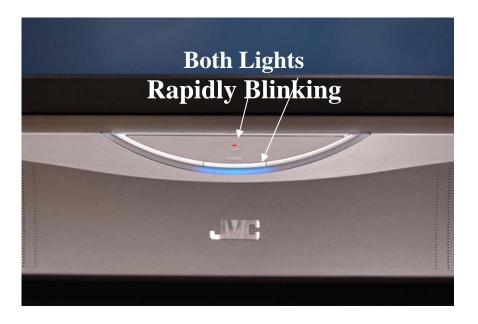





How To Obtain A Replacement Lamp?

Option 1

To Obtain The Closest Authorized JVC Service Facility To Replace The Lamp:

Please visit: www.jvc.com and click on the Service Center Locator link Enter your zip code and model number or select Television-DILA Proj TV

Option 2

If You Choose To Replace The Lamp Yourself:

You can only use part numbers TS-CL110U or TS-CL110UAA

If the TV is out of warranty, you can purchase a replacement lamp at our accessory store. Please visit: www.jvc.com and click on the Accessory Store link. If the TV is still within warranty, you can call our Customer Care Center at: 1-800-252-5722. If you choose to replace the lamp yourself please proceed to the instructions

on the following pages.

		Address 🕘 http://www.jwcservice	.com/store/ProductDetail.asp?Part=TS-0L1100		💌 🛃 Co un	dei
			ESSORY STORE	about VC	1 200 glokal 200 sunramer 200 profess	tierr
		JVC > Accessory Store				_
1		Control for Accession inside - Instituction analysis - Instituction and - Instituction - React in - Instituction - React in - Instituction -	TS-CLILOUAA Sub of TS-CL110U 199.00		Used with models: H0-522575 • H0-522595 • H0-612575 H0-612595 H0-612595	
product c Idio	ategory	Accessory Categories Battery Recycling Fingerer	Availability: In Stock	Iamp returns your unit to like-new	HD-012896 HD-706306 HD-506366 HD-596786 ₩	
	DILA Proj TV	Computer		the proper lamp replacement proce		
oducts	·	Computer Accessories				
<u>^</u>	LCD TV Carry-in	- **	Don't be d	lisappointed TRUST ONLY CER	TIFIED 3VC ACCESSORIES!!	
<u> </u>	LCD TV In-Home	Video Remote Controls				
	•	Tabes - DVD R R/O Ram				
	Plasma TV	Battories				
	Proj TV CRT	Power Adapters D-VHS Movine				
		viden Lights / Flash				
Z	tip TV<25	Carrying begs/Cases Rain Jackets/Marine Cases				
	TV 25-31	Wide Angle/Telephote Lens				
	TV 22 AND ADOVE	Memory Cards/Readers Satellite Dish				
	TV 32 AND ABOVE	Tripods				
		and the second				



uct Category

the product type
Select the
Audio
Digital Av

Mobile F

Tel

Reset

tion

ither

dress: City: State: **Option 2**



Before You Start



Caution:

Although you will find the process to change the lamp to be very simple, please read the warnings on this page and go through each of the following pages step by step.

Caution:

It is very important that you NEVER TOUCH THE GLASS SURFACE OF THE LAMP. Touching the glass surface will deposit oils from your hand onto the lamp surface. When the lamp heats up to its operating temperature, the oil will cause a difference in temperature on the lamp surface that will likely cause the lamp to break.

Caution:

Under operating conditions, THE LAMP WILL GET EXTREMELY HOT AND WILL CAUSE SEVERE BURNS IF TOUCHED.

Caution:

Before attempting to replace the lamp, make sure the TV has completely run through its cooling cycle. Turn the power off and wait until the Lamp LED blinks very slowly and turns off completely.

Caution:

Unplug the TV. If you feel any warmth as you place your hand near the lamp, DO NOT TOUCH IT. Wait until the lamp has completely cooled before attempting to replace it. After turning the power off, wait at least 1 hour.

Caution:

NEVER attempt to replace the lamp with the TV plugged into a wall outlet. Attempting to replace the lamp with the TV plugged in could lead to a severe electrical shock.

Caution:

DO NOT DROP the used lamp. The inside of the lamp is under pressure. Dropping or other hard shock could cause the lamp to shatter.

Caution:

ALWAYS recycle the used lamp. Because the lamp contains a small amount of mercury, it cannot be thrown away with regular trash. Follow the recycling instructions included with the Lamp Replacement Kit.



Step 1 of 13



Turn Off The TV.


Press the POWER button on the remote control or TV front panel.

Warning: Although turning off the TV allows the lamp to cool, it does not mean that the lamp will immediately be cool enough to handle safely. Please wait at least one hour before proceeding to replace the lamp.





Step 2 of 13

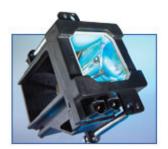

Unplug The TV.

Disconnect the power cord from the AC outlet. Make sure that the LAMP LED light has stopped blinking before you unplug the TV. Never attempt to replace the lamp with the TV plugged in.









Locate The Lamp Cover.

The Lamp cover is located on the left side of the TV towards the back.









Remove The Lamp Cover.

To access the lamp you will need to remove the lamp cover. You can use a coin or screwdriver to turn and loosen the screw. Once fully loosened you can remove the cover.









Loosen The Screws Holding The Lamp.

Using a Philips head type screwdriver, loosen the two screws fastening the lamp.










Remove The Old Lamp.

Remove the lamp by raising the handle and gently pull the lamp straight out.







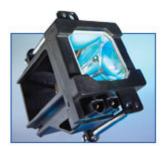

Install The Replacement Lamp.

Holding the handle attached to the replacement lamp, slide and push the replacement lamp straight into the lamp housing area.










Tighten The Screws Holding The Lamp.

Confirm the lamp is placed in the lamp housing evenly. Using a Philips head type screwdriver, tighten the two screws fastening the lamp.







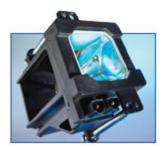

Re-insert And Tighten The Lamp Cover.

Re-insert the lamp cover and tighten the screw of the lamp cover. Please ensure that it is securely fastened. NEVER turn on the TV if this door is not securely closed.









Plug Back Into The AC Outlet.

Plug the power chord into the AC outlet.





of 13



Turn ON The TV.

Press the POWER button on the remote control or TV front panel. Confirm that the New Lamp and TV are working properly by waiting for the picture to appear.









Reset The Lamp Timer.



Press the MENU button

To LAMP TIMER RESET

To Enter

The following message will appear.

PRESS OK TO RESET THE LAMP TIMER.

CLOCK / TIMERS	8
▲ PREVIOUS	
SET CLOCK)	
LAMP TIMER RESET)	

▼NEXT PAGE \$SELECT +> OPERATE MINIE EXIT

m

Press the OK button while the above message appears on the monitor screen.

THE LAMP TIMER IS RESET SUCCESSFULLY.

The lamp timer has now been reset.

 


Step 13 of 13



Properly Dispose Of Your Old Lamp.

Refer to the manual that came with your replacement lamp. If you have any questions please visit





This product has a High Intensity Discharge (HID) lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information, please contact your local authorities, or the Electronics Industries Alliance: http://www.eiae.org