

XVN410B Firmware Update Procedure

PLEASE READ THROUGH ALL STEPS FIRST



- Turn on the DVD Player (Press power on the DVD player)
- Open the tray and insert the upgrade disc in tray then close it
- The front display will show "Read"
- When front display changes to "UP" press the UP key on the remote control
- The entire screen becomes blue, and upgrading starts.

Your TV Screen will look something like this

Upgrade application initializing	
While upgrading (blue screen)	

Do not touch, move or unplug the power of the DVD player or press any buttons on the remote control during this process.

- The tray will open up.
- Remove the upgrade disc and <u>wait</u> for the standby light to turn RED (under JVC logo) when this happens the upgrade has been completed.
- Press the power button on the DVD player (the tray will close)
- Press the cancel button on the remote control
- Open the tray and insert a DVD to confirm operation