

 
JVC

HR-XVC14B/15S DVD Player/Video Cassette Recorder Tuner-Free Recording Operation

QUICK START GUIDE


Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>

Included Accessories

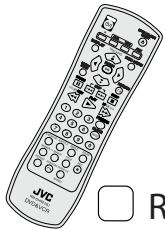

Remote control

 "AAA" battery x 2
(For remote control)




Video cable



Audio cable




 Easy Connection For Playback Only(DVD/VHS) INSTRUCTIONS →pg. 10

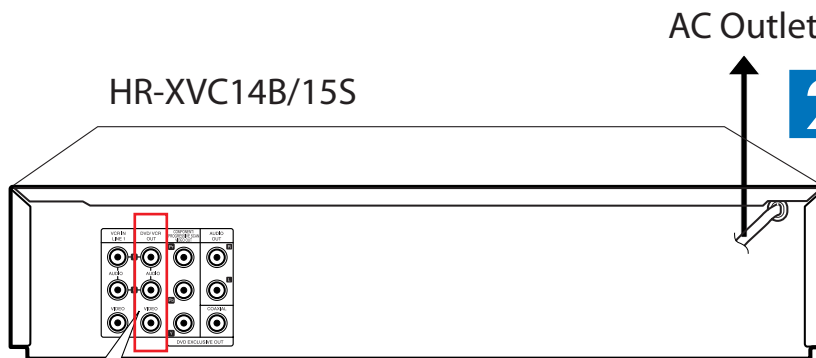

AC Outlet

 2 Plug to the AC outlet.

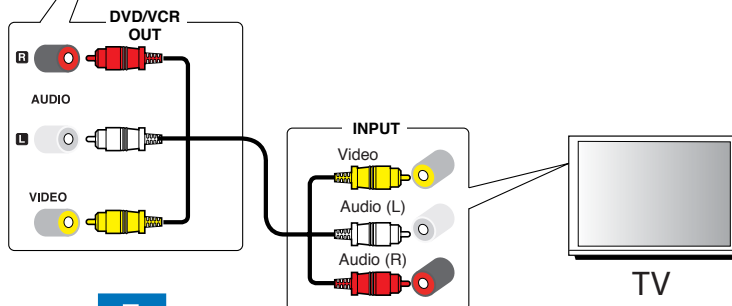


1 Connect with your TV

3 After connections, Power On.

Easy Connection For Playback(DVD/VHS) & Recording(VHS)

 INSTRUCTIONS → pg. 11

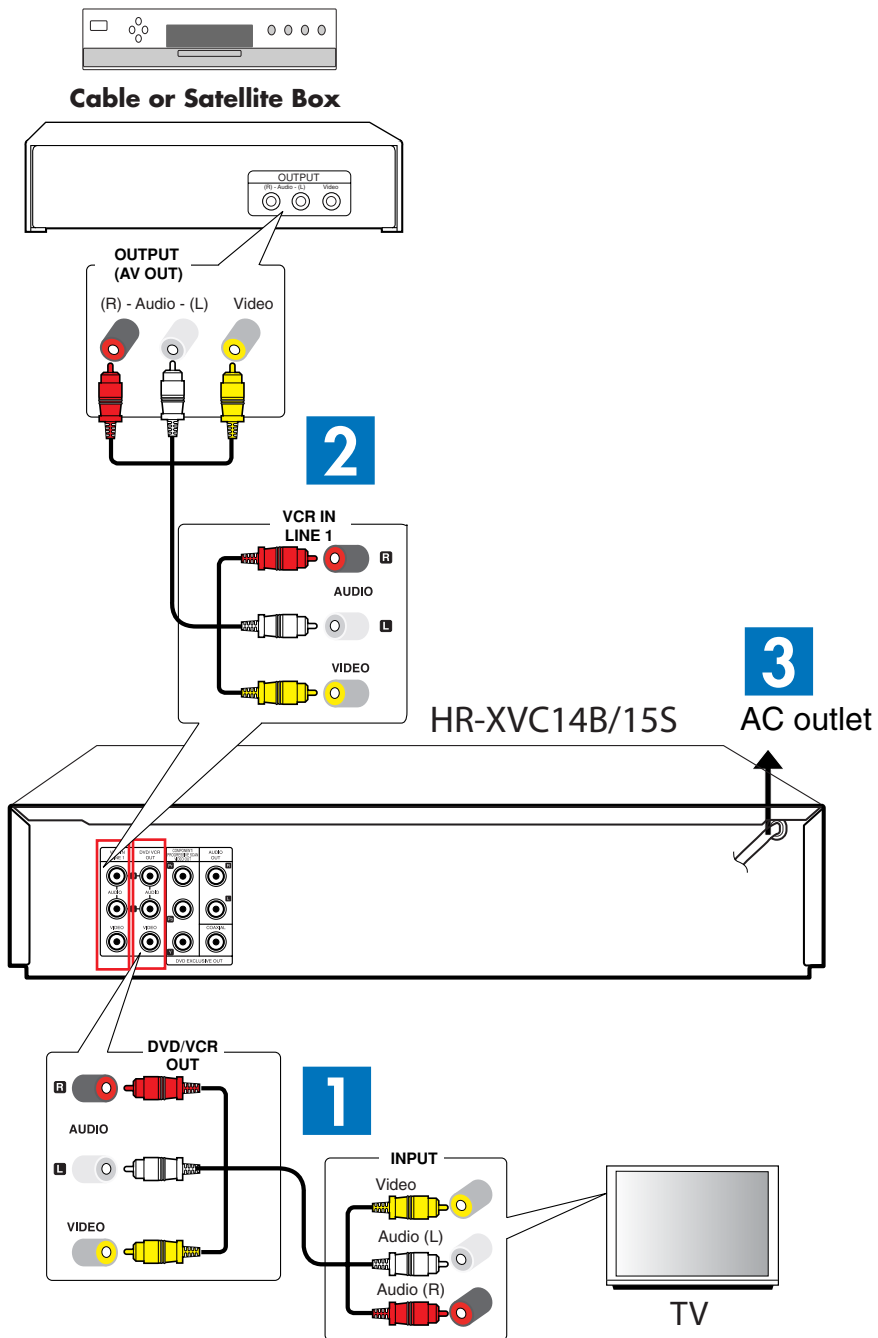

4

 
After connections, Power On.

Note: Please keep HR-XVC14B/15S power on to watch TV program.

Manual Clock Set Up

INSTRUCTIONS


→ pg. 13

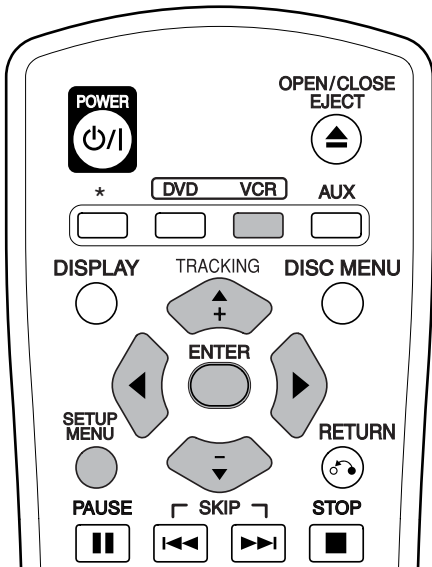

Select "Month"



 
Select "Day"

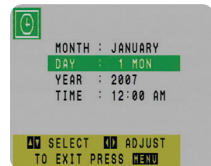


Select "VCR"



 
Select "Year"

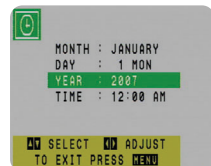

Select "SETUP MENU"

 

Select "Time"

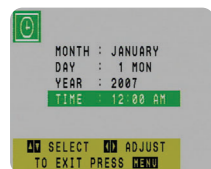 

Select "CLOCK"



"SETUP MENU"



Note: Need "Clock Set Up" at the beginning & end of "Summer Time".

BASIC PLAYBACK

INSTRUCTIONS

→ pg. 18, 24

DVD

Select "DVD"

1



 
 
Start Playback

2




Stop Playback

3

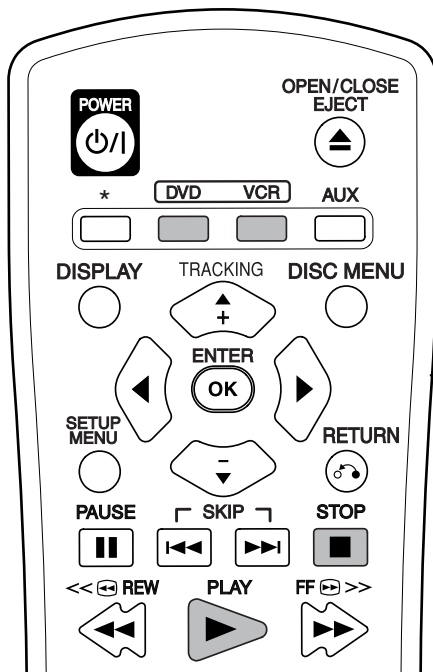

Select "VCR"

 1




Start Playback

2



Stop Playback

 3



Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, CD-R, Video CD, Audio CD

BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 19

Check! VHS Tape Inserted!!

Select "VCR"

1



Select Input
(Line 1/2)

2



 
Select Mode

3





Start Recording

4

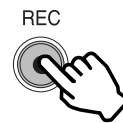

Stop Recording

  
5

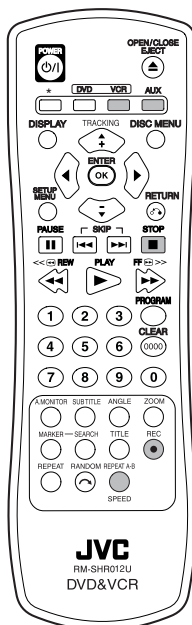

JVC
RM-SHR012U
DVD&VCR

TIMER RECORDING (Manual Timer Programming)

 
INSTRUCTIONS
→ pg. 20

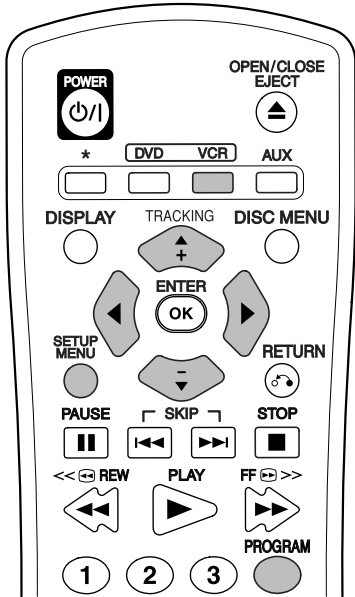

Check! VHS Tape Inserted!!


Select "DAY"

 5

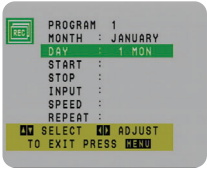


Select "START"

 6

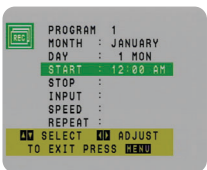

Select "STOP"

 7

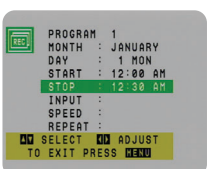

Select "VCR"

1

Select "INPUT"

8



 
"PROGRAM" MENU

2



Select "SPEED"

9

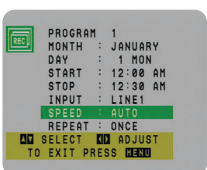


Select "PROGRAM No."

3




Select "REPEAT"

 10

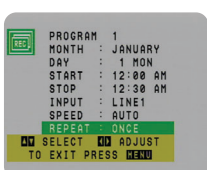

Select "MONTH"

 4

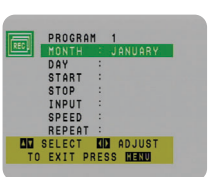

"SETUP MENU" Finish

11

Timer-Link Recording

 
INSTRUCTIONS

→ pg. 21



Timer Link

Check! VHS
Tape Inserted!!

Note: Timer-Link works by using the timer function of most Cable/Satellite Boxes. Please check whether your current box has a "Timer" function.



  Note: Timer-Link doesn't work, if Cable/Satellite Box keeps a "Screen Saver" in "Power Off". If so, please use "Manual Timer Programming"

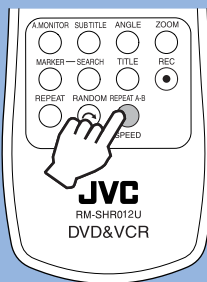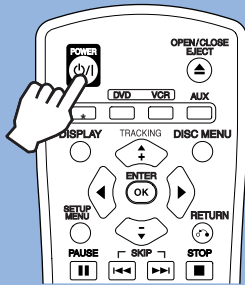


1 Set Up Timer
of Cable/Satellite Box

2 Power Off
Cable/Satellite Box

3 Power Off
HR-XVC14B/15S
after set record speed.

 (Front of Unit)

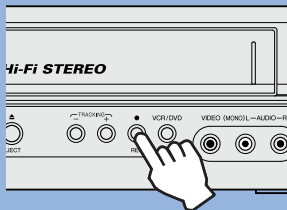

Note: If the Timer-Link "On", "TIMER/TIMER LINK" indicator blinks on the JVC deck's display window.

 


4 Hold "REC" Button
for 3 seconds

1. When your Cable/Satellite Box is powered on by the timer function, HR-XVC14B/15S is also powered on and starts to record (It takes about 1 seconds) automatically.
2. When your Cable/Satellite Box is powered off using the timer function, HR-XVC14B/15S also stops recording (It takes about 3 seconds) and then powers off automatically.

Timer-Link mode: Deactivate

(Front of Unit)

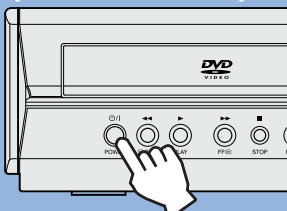

This operation makes "Timer-Link" been off after finishing Timer-Link record. If you keep "Timer-Link" on, you don't need this step.

5 Power On
HR-XVC14B/15S