

STEREO HEADPHONES

HA-NC100-J/C



For Customer Use :
Enter below the Model No. and Serial No.
which is located on the back of battery cover.
Retain this information for future reference.

Model No. _____

Serial No. _____

INSTRUCTIONS

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

Headphones

1. For your safety...

- Never use the headphones when driving a car, motorcycle, or bicycle. This could result in an accident.
- Pay close attention to traffic around you when using the headphones while walking. Not doing so could result in an accident.
- Be careful not to turn the sound volume up too high when using the headphones. Your hearing can be damaged by listening to sounds at excessive volume for long periods.
- Do not disassemble or modify the headphones.
- Do not allow inflammables, water or metallic objects to enter the headphones.

2. Avoid using the headphones...

- in places subject to excessive humidity or dust
- in places subject to extremely high (over 40°C or 104°F) or low (under 0°C or 32°F) temperatures

3. DO NOT leave the headphones...

- in direct sunlight
- near a heater

4. To protect the headphones, DO NOT...

- allow them to get wet
- drop them or shake them against hard objects.

- Be careful not to add power that exceeds the headphones' input capacity. This may result in distorted sound and could damage the oscillation board.
- Grasp and pull the plug firmly to disconnect the headphone. Do not pull on the cord.

Thank you for purchasing this JVC product.

Before you begin operating this unit, please read the operating instructions carefully to be sure you get the best possible performance. If you have any questions, consult your JVC dealer.

FEATURES

1. **Noise Canceling Function** reduces ambient noise* in airplanes, buses, trains, etc. as well as ventilation hum in rooms for enhanced listening enjoyment even at low volume levels.

* Mainly reduces low-frequency noise of 1,500Hz or lower; not designed to eliminate all noise.


2. **High Quality Sound** is yours to enjoy as this closed-type stereo headphones feature a large 36mm driver unit.

3. **Automatic Wind-up Cord System** prevents cord tangling for more convenience and listening pleasure.




PARTS LIST

- ① Headband
- ② Slider
- ③ Earpad
- ④ Housing
- ⑤ Retractable Cord
- ⑥ Rewind Switch
- ⑦ Battery Cover
- ⑧ Power Switch
- ⑨ Operation Indicator
- ⑩ Cord Housing

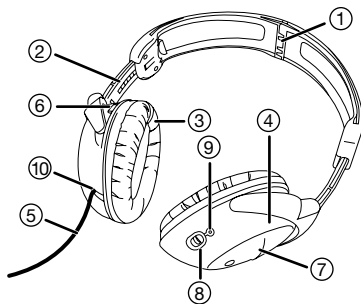

BATTERY INSERTION

1. Slide open the battery cover on the right housing.
2. Insert the provided battery, matching the \oplus and \ominus . Press in on \ominus end first and down on \oplus end.
3. Close the battery cover.

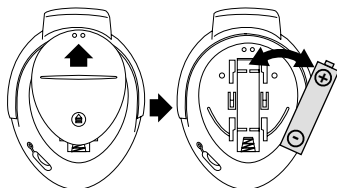

Changing the Battery

The battery should be changed when the Operation Indicator fades or does not turn on. The Noise Canceling Function becomes less effective as the battery wears down so make sure to replace the battery as necessary to maintain the proper performance of the headphones.

NOTES: Misuse of battery could result in leakage. This could cause a fire or explosion.

To prevent this, pay special attention to the following points:

- Be sure to insert the battery with correct positive \oplus and negative \ominus polarities.
- Do not heat, disassemble or short-circuit battery and never dispose of battery by throwing them in a fire.
- Read the caution displayed on the battery when in use.

SPECIFICATIONS

English

Frequency response:	10Hz — 22,000Hz
Noise cancellation frequency range:	40Hz — 1,500Hz
Noise reduction:	more than 12 dB at 300Hz
Sensitivity:	100dB/1mW (when ON), 103dB/1mW (when OFF)
Input impedance:	36 Ω (when ON), 64 Ω (when OFF)
Power supply:	AAA battery (DC 1.5V) x 1
Battery life*:	approx. 25 hours** (using Manganese AAA battery), approx. 50 hours** (using Alkaline AAA battery) <i>*Varies on operating conditions. **Without ambient noise.</i>
Cord length:	0 — 1.5m (4.9ft) (with L type stereo miniplug)
Mass:	200g (7.06oz) (incl. cord and battery)
Accessories:	carrying pouch x 1, AAA battery (R03) x 1, dual plug adapter (for in-flight use) x 1


Design and specifications subject to change without notice.

USING THE HEADPHONES

1. When the power is OFF, the headphone operates without noise canceling function.
2. When the power is ON, the headphone operates with noise canceling function.
3. Rewind the cord and turn the power ON to use the noise canceling function like an ear plug (e.g. while sleeping on airplane or train)
 - Select the appropriate plug adaptor that fits in the airplane headphone plug.

FOLDING THE HEADPHONES


1. Push up the slider on both ends.
2. Place the earpads together.
3. Fold the housing at both ends and push up from the bottom.

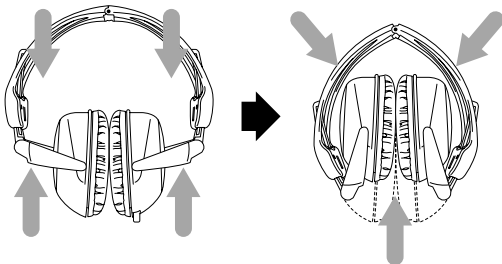

HOW TO PULL-OUT/REWIND THE CORD

Pull out: Slowly pull out the cord to the desired length. Maximum cord length is 4.9ft (1.5m); stop pulling when the cord end mark appears.

Rewind: Remove the headphones, fold it up, and then slide the rewind switch. (To prevent accidents, the headphone is designed not to rewind when it is in use or while wearing it.)

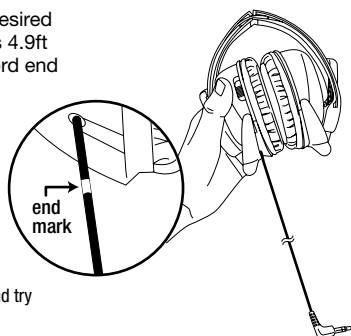

- If the cord doesn't wind in completely, pull it out and try rewinding again.