


# JVC

DR-MV7S

**JVC IS HERE TO HELP!**  
TOLL FREE: 1(800)252-5722  
<http://www.jvc.com>



# QUICK START GUIDE

## Check Accessories

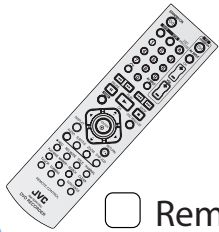

Remote control

  "AAA" battery x 2  
(For remote control)



RF cable




Video cable




Audio cable

## Connection Without Cable Box Or DBS Receiver

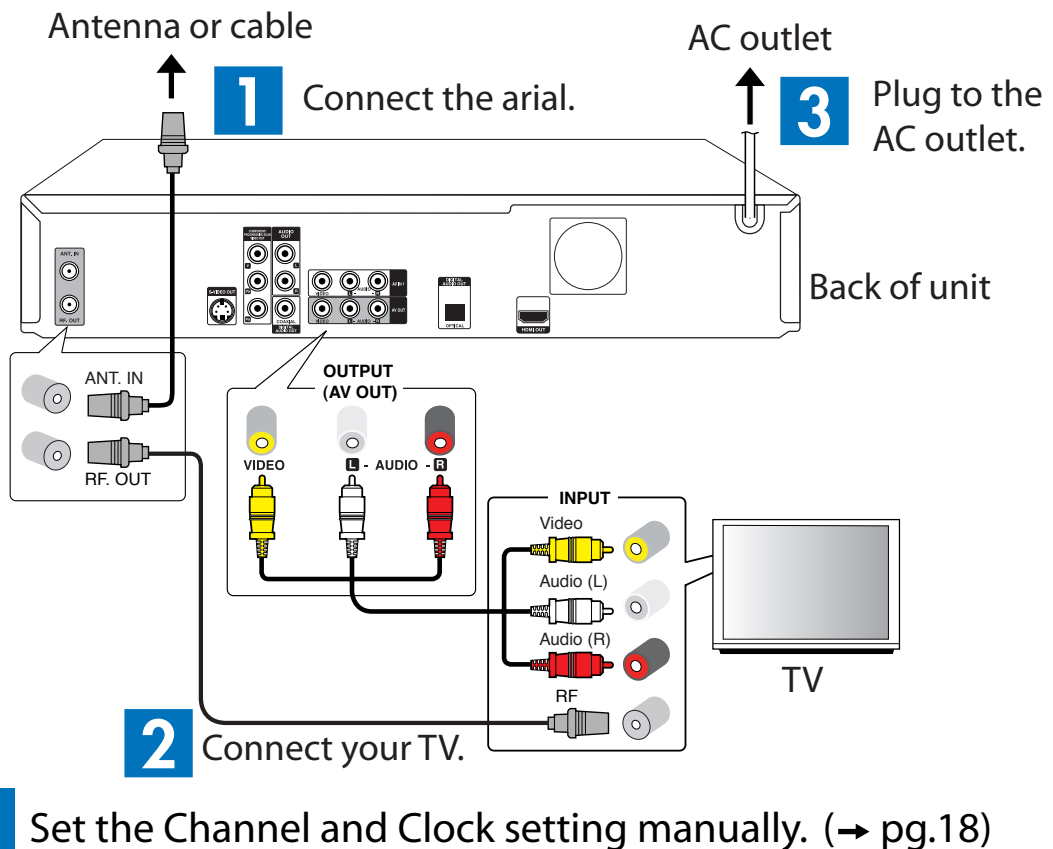


## Connection With Cable Box Or DBS Receiver (When your TV has only audio/video connectors)

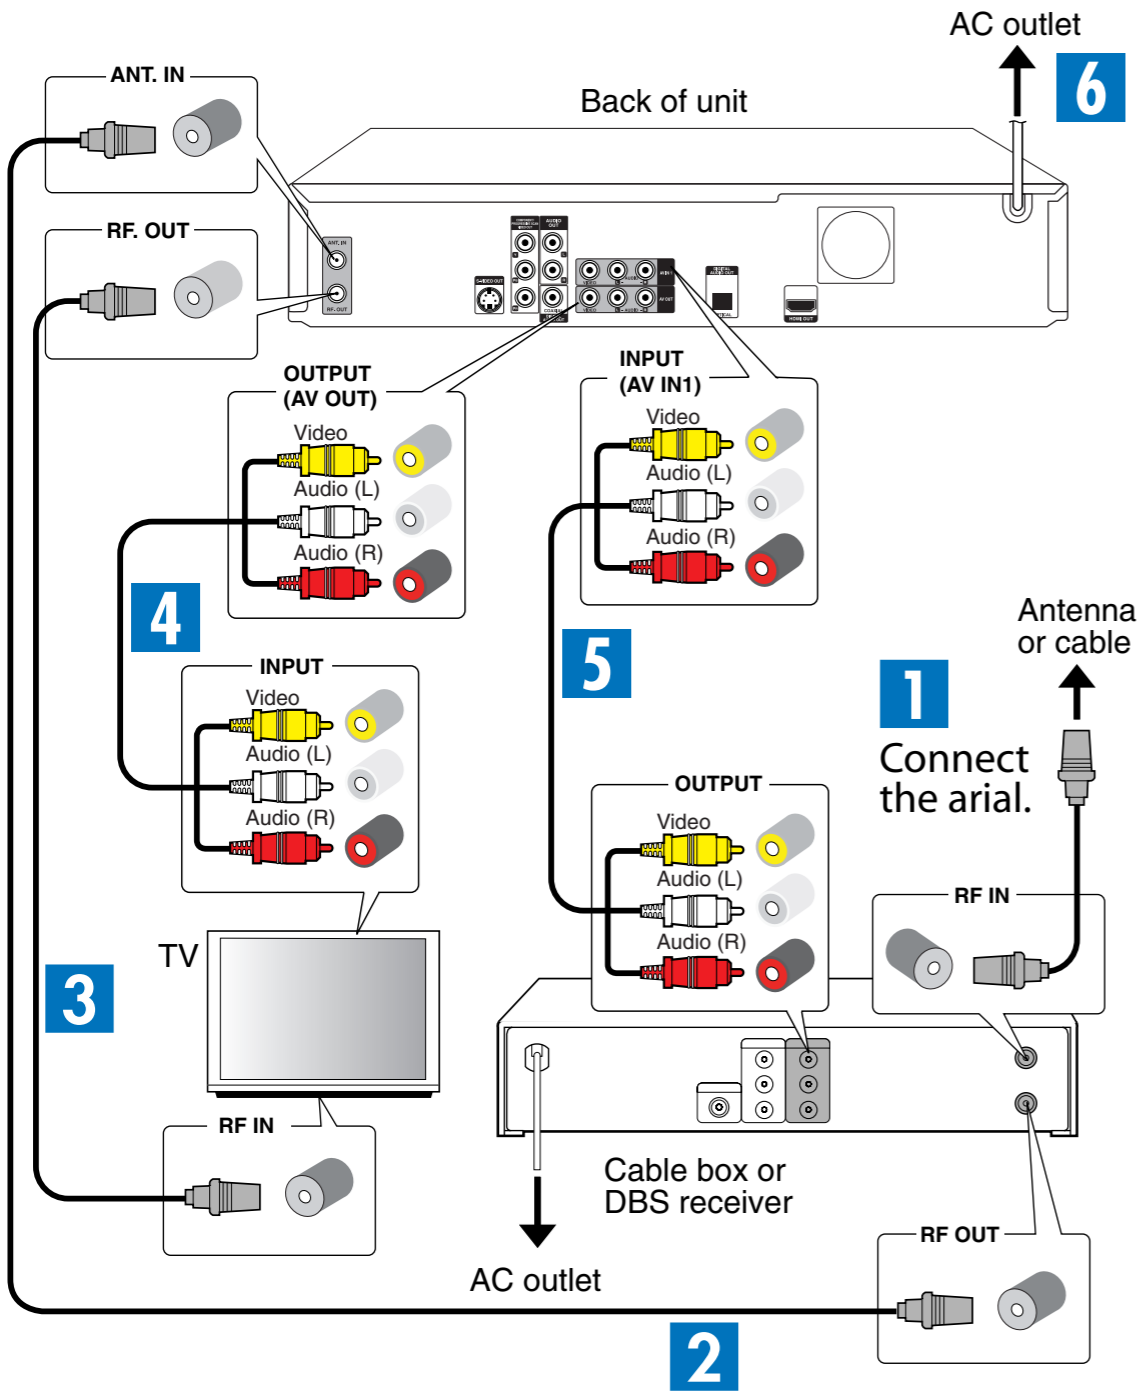

**7** Set the Channel and Clock setting manually. (→ pg.18)

## Connection With Cable Box Or DBS Receiver (When your TV has component video connectors)

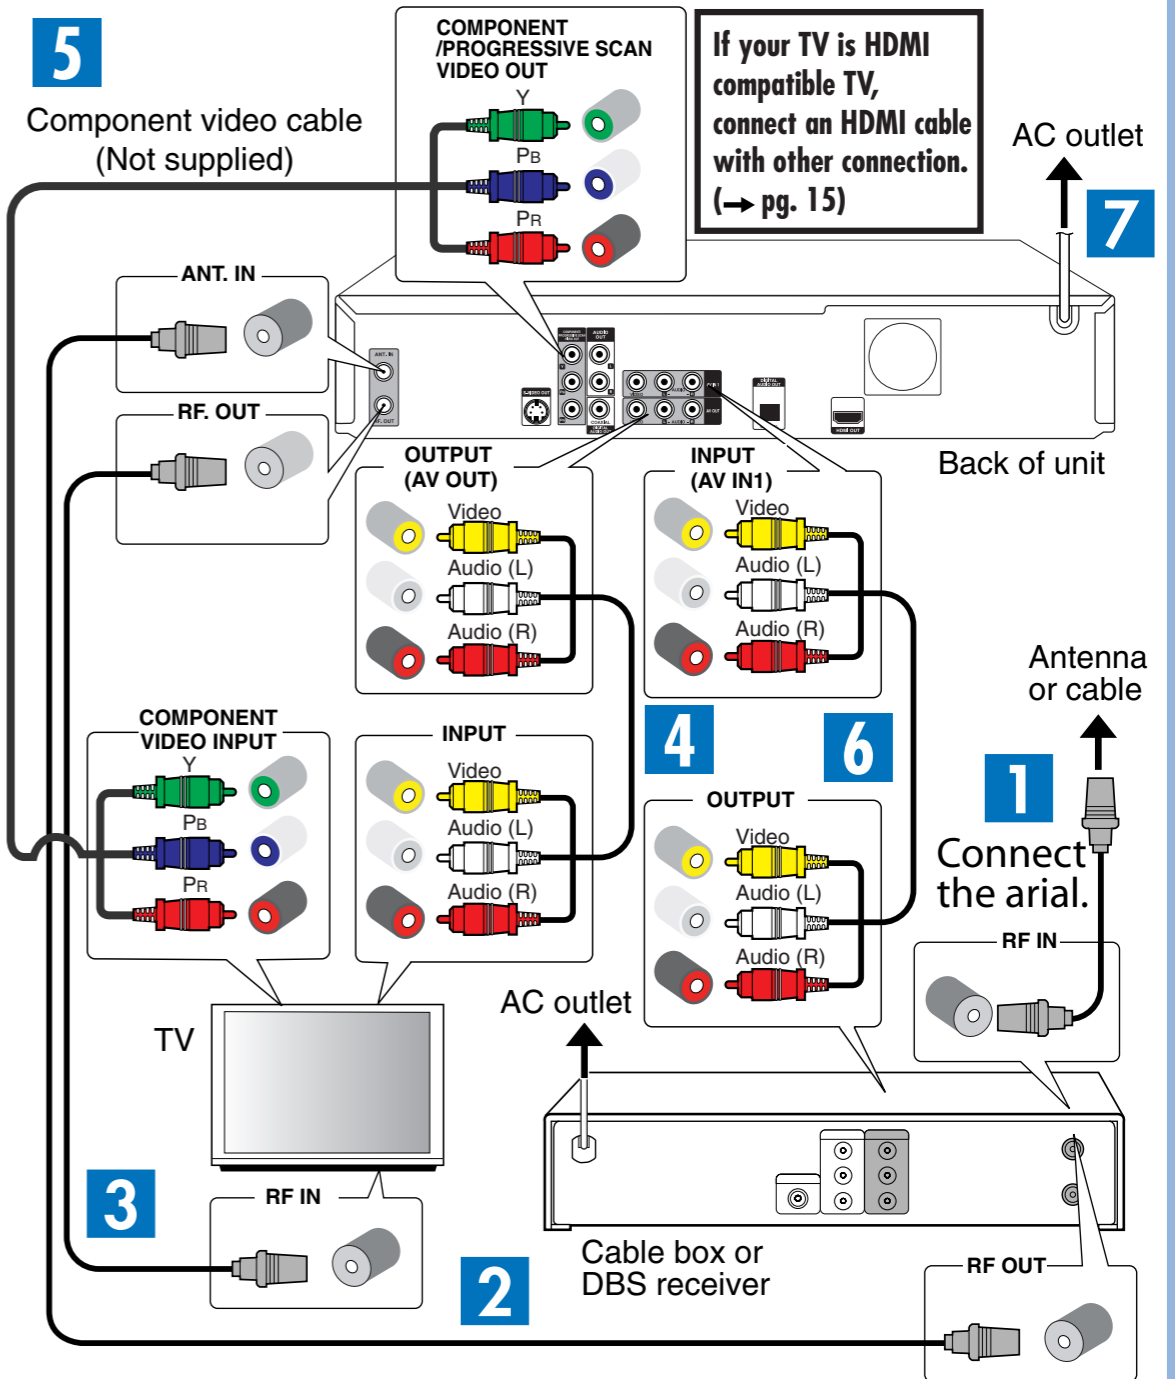

**8** Set the Channel and Clock setting manually. (→ pg.18)

NOTE: When watching the progressive scan images(480p) with this connection, set the resolution to 480p using OUTPUT STATUS button. (→ pg. 14, "Component Video/Progressive Scan connection")

# Recordable Discs

DVD-RW



Can be rewritten  
1,000 times.

DVD+RW



DVD-R



Playable on other  
DVD players or PCs  
(after finalized).  
They can only be  
recorded once.  
They cannot be rewrite.


DVD+R



## NOTES :

- When you use a DVD-RW disc, format it in "VR MODE" or "VIDEO MODE". (→ pg.23, "Disc Settings")
- DVD-RAM will not be recognized as recordable media.

# Inserting Disc or Cassette

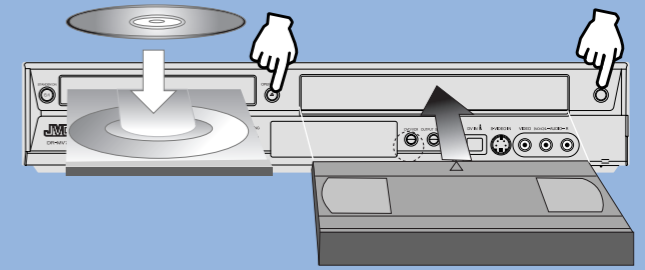

## BASIC RECORDING

## BASIC PLAYBACK

**DVD**

Select TV input/channel first.

**VHS**

- 1** Select DVD
- 2** Start Playback
- 3** Stop Playback

- 1** Select VCR
- 2** Start Playback
- 3** Stop Playback

**NOTE :**  
We recommend you to use DVD-R/-RW discs in Video mode for use in other DVD player. Finalizing is required after recording. (→ pg.23 Finalize)

**DVD**

**VHS**

- 1** Select DVD
- 2** Select Channel/ Input

For cable box or DBS receiver users, change the channel to AV1.
- 3** Select Mode

REC MODE

For the recording mode, see page 36 on the instruction manual.
- 4** Start Recording

REC
- 5** Stop Recording

- 1** Select VCR
- 2** Select Channel/ Input

For cable box or DBS receiver users, change the channel to AV1.
- 3** Select Mode

(Tape Speed)


REC MODE

For the recording mode, see page 36 on the instruction manual.
- 4** Start Recording

REC
- 5** Stop Recording

**JVC**  
RM-SDR108U  
DVD RECORDER


# Dubbing from VCR to DVD

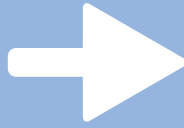


You can copy the contents of a VHS tape to a DVD using the **DUBBING** button. This allows you to archive your old VHS tapes to DVD.

Preparation : • Set the resolution to 480i using the **OUTPUT STATUS** button before dubbing.  
• Press **VCR** button to set the VCR mode.


**1** Insert Blank Disc and Cassette

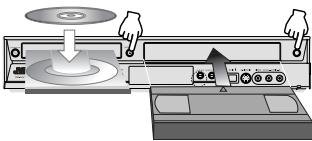


**2** Find the place on the VHS tape from which you want to start dubbing.

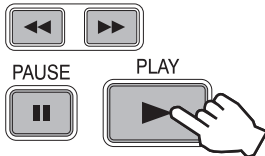

**3** Access the Dubbing menu screen.

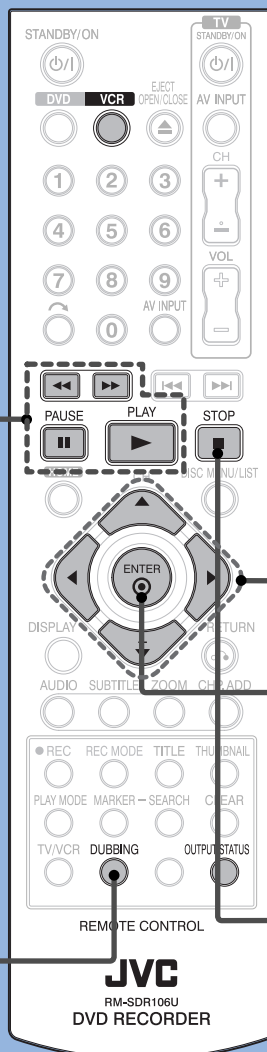

**4** Select the desired Record Mode, then select [Dubbing].

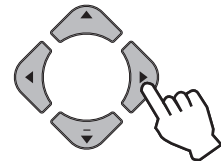

**5** Start Dubbing.



**6** Stop Dubbing.

