

**INCORRECT**

**CORRECT**

- Page 19: Basic Connections
- Page 93: SPECIFICATIONS - ACCESSORIES

RF cable x 3

➔ RF cable x 1

■ Page 23: Manual Channel Set

5 Press  $\Delta$   $\nabla$   $\triangleleft$   $\triangleright$  to select "MANUAL CH SET", then press  $\nabla$ .

➔ 5 Press  $\Delta$   $\nabla$   $\triangleleft$   $\triangleright$  to select "MANUAL CH SET", then press **ENTER**.

■ Page 37: Locating The Beginning Of A Desired Selection


**If you have specified a wrong selection**

Press **CANCEL** (X) or **CLEAR** (■) to clear the wrong number, then enter the correct one before you press **ENTER** in this step.


➔ **If you have specified a wrong selection**

Press **RETURN** on the remote control unit and repeat the above procedures from step 2.

■ Page 39: Setting The Progressive Mode

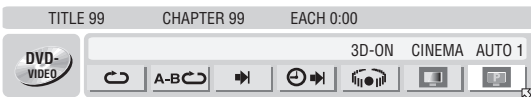

**AUTO 1:** Used to play a disc containing both video and film source materials. This system recognizes the source type (video or film) of the current disc according to the disc information. Normally select this option.  
**AUTO 2:** Almost the same as the "AUTO 1", but the processing of the scenes with movement is different. Select "AUTO 1" or "AUTO 2" to your preference.

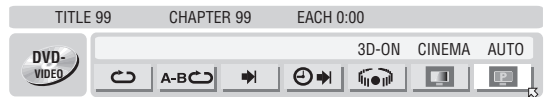

**AUTO:** This mode automatically detects film and video content for progressive playback. When film content is found, flag detection is used to invoke playback of film data in full screen. When video content is found, pictures from multiple fields are used to detect sections with movement, and then this movement undergoes advanced image processing for output of sharp, detailed progressive images without any reduction in image quality where movement occurs. Normally, operation in this mode is recommended.