

JVC

NOTES

■ This unit includes a Demonstration Mode image for introducing the product features.

- ① Press **NAVIGATION** on the remote control.
- ② Press $\triangle \nabla \triangleleft \triangleright$ to select "ORIGINAL", then press **ENTER**.
- ③ Press $\triangle \nabla \triangleleft \triangleright$ to select the Demonstration Mode index, then press **ENTER**.
- ④ Press $\triangleleft \triangleright$ to select "BEGINNING", then press **ENTER**.
→ To erase the Demonstration Mode, see page 53, "Delete Title".

■ Built-in HDD

The hard disk drive (HDD) is a device with a precision internal structure for reading subtle magnetic changes. The drive is always spinning at high speed when the power is on. Although it is capable of extended hours of recording and high-speed searching, it is a special part that is susceptible to breakage. Therefore, when saving important image, it is recommended that you copy the image to DVD or other media.

■ When moving the product

Press ψ / I to turn off the power, and wait at least 30 seconds before unplugging the power cord. Then, wait at least 2 minutes before moving the product.

■ Turning on the unit takes longer when...:

"LOADING" blinks on the front display panel when the AC plug of the AC power cord is connected into an AC outlet and it takes approximately 50 seconds for the unit to be turned on. This is not a malfunction.

■ Reading a disc may take longer when...:

It takes approximately 30 seconds to read a disc depending on the type and condition of the disc since this unit is multi-disc compatible (DVD-RAM, DVD-RW, DVD-R). It may even take several minutes when a disc is dirty, scratched or warped.

NOTES

SWITCHING CHANNELS IN LIVE MEMORY MODE

Please note that when "LIVE MEMORY" is set to 30 MIN / 1 HR / 3 HR, switching channels takes longer than when the mode is OFF:

When "LIVE MEMORY" is OFF: approx. 2 seconds

When "LIVE MEMORY" is set to 30 MIN / 1 HR / 3 HR: 5 – 8 seconds

This is caused by the continuous HDD recording — one of the LIVE MEMORY functions and not a malfunction.

You can manually turn on/off the "LIVE MEMORY" function on the Main Menu screen. If you prefer quicker channel switching, please turn off the function.

When "LIVE MEMORY" is 30 MIN / 1 HR / 3 HR:

Activate the "Temporary Recording" function, and the HDD automatically starts recording the program from the currently chosen channel up to a specified number of minutes/hours (30 minutes, 1 hour, or 3 hours) in a continuous loop. This allows you to enjoy various "LIVE MEMORY" functions, including:

❶ Pause Live TV

You won't miss any scenes of the program you are watching even in case of a phone call or an unexpected visitor. You can pause the program and resume watching where you left off.

❷ RetroActive Recording*

Even midway through a real-time program, you can "rewind" and record from the beginning, or from any interval in between.

* Applies only to the program (channel) currently being viewed.

You can also enjoy Live Memory Playback or 1.5x Speed Search of the currently broadcast program from the chosen channel.

To activate the "Temporary Recording" function:

- ❶ Press **SET UP** on the remote control to access the Main Menu screen.
- ❷ Select "HDD/DVD SET UP" – "HDD SET UP" – "LIVE MEMORY", and then press **ENTER**.
- ❸ Then select the time length from among "30 MIN", "1 HR", and "3 HR".

- See page 43 of the "INSTRUCTIONS" for more detailed instructions on Live Memory Playback and other important information.