

JVC

ENGLISH

INCORRECT

■ Page 29 : Marking Positions To Play Back Again Later



It is possible to mark positions (up to 999 points) where you want to play back once again later, and start playback from a marked position. Marking onto DVD-RAM/RW/R discs when recording is helpful to locate a start point when you play back the discs later.

 


CORRECT




It is possible to mark positions (up to 999 points) where you want to play back once again later, and start playback from a marked position. Marking onto DVD-RAM and RW (VR mode only) discs when recording is helpful to locate a start point when you play back the discs later.

■ Page 35: Setting The Progressive Mode



AUTO 1: Used to play a disc containing both video and film source materials. This system recognizes the source type (video or film) of the current disc according to the disc information. Normally select this option.

 AUTO 2: Almost the same as the "AUTO 1", but the processing of the scenes with movement is different. Select "AUTO 1" or "AUTO 2" to your preference.



AUTO: The system automatically detects film and video source materials and runs the progressive playback. When a film source material is detected, all information from the source material is played back with the flag detection function. When a video source material is detected, the system uses pictures in several fields to detect moving parts. It produces fine progressive images without deterioration even at moving areas by using sophisticated image processing. Normally select this option.

NOTE:

If both MP3 files and WMA files are recorded on a disc, WMA files can not be displayed on the Navigation screen and therefore can not be played back. (☞ pg. 57)