

Notice the following information will help you to solve your problems.
Keep this IMPORTANT sheet together with the INSTRUCTIONS.

- **After installing the unit**
 - Follow the procedure **A** described below.
- **If the unit does not operate**
 - Follow the procedure **A** described below.
- **If a CD is not ejected from the loading slot**
 - Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)
- **If a CD is not recognized (“NO DISC” appears on the display) even though there is a CD in the loading slot**
 - Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)
- **If a CD is in the unit, it will eject when you reset the unit.**
Pay attention not to drop the CD.


A To reset the microcomputer

While holding SEL (select), press ϕ /I/ATT (standby/on/attenuator) for more than 2 seconds. This will reset the built-in microcomputer.

NOTE: Your preset adjustments—such as preset channels or sound adjustments—will also be erased.

ϕ /I/ATT (standby/on/
attenuator)

SEL (select)

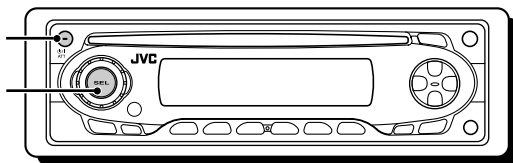

B To eject a CD by force

While holding ϕ /I/ATT (standby/on/attenuator), press \blacktriangle (eject) for more than 2 seconds until the CD is ejected from the loading slot. (“EJECT” and CD-in indicator flash on the display.)

ϕ /I/ATT (standby/on/
attenuator)

\blacktriangle (eject)

