 
 




# DVD VIDEO PLAYER

---

## XV-N30BK/XV-N33SL



|                               |    |
|-------------------------------|----|
| Before operation              | 2  |
| Preparations                  | 3  |
| Basic operations              | 6  |
| Advanced operations           | 11 |
| MP3 disc playback             | 19 |
| Changing the initial settings | 21 |
| Additional information        | 26 |

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_


Serial No \_\_\_\_\_

GNT0024-001B

[J]

# Warnings, Cautions and Others

## Mises en garde, précautions et indications diverses

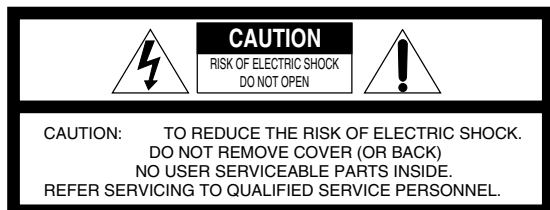

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### For Canada/pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND

### For Canada / Pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUE DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUE", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

### Caution — STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON  button in any position does not disconnect the mains line. The power can be remote controlled.

### Attention — Touche STANDBY/ON !

Déconnecter la fiche de secteur pour couper complètement le courant. La touche STANDBY/ON  ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

### IMPORTANT FOR LASER PRODUCTS

#### IMPORTANT POUR LES PRODUITS LASER

1. CLASS 1 LASER PRODUCT
  2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
  3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
1. PRODUIT LASER CLASSE 1
  2. **ATTENTION:** Radiation laser visible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
  3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

### CAUTION:

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation.  
(Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.

## Supplied accessories

Check that you have all the following accessories supplied to you. If anything is missing, consult your dealer immediately.

- Audio/video cable (Yellow/White/Red) (× 1)
- Remote control unit (× 1)
- Lithium battery CR2032 (× 1)

## About this manual

- The display window information and OSD (On Screen Display) menu items are put in brackets [ ] in the operation procedures.
- Usable disc(s) for each operation/function is (are) referred to by the icons;



## Precautions

### Notes on the power cord

- When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (1.0W) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the unit from the wall outlet, always pull the plug, not the power cord.
- Do not handle the power cord with wet hands!

### Avoid moisture, water and dust

- Do not place the unit in moist or dusty places.
- If water gets inside the unit, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the unit in this state may cause a fire or electrical shock.

### Avoid high temperatures

- Do not expose the unit to direct sunlight or place it near a heating device.

### Notes on installation

- Select a place which is level, dry and neither too hot nor too cold between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the unit and the TV.
- Do not install the unit in a place subject to vibrations.

### To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic objects, such as wires, hairpins, coins, etc. into the unit.
- Do not block the vents. Blocking the vents may damage the unit.

### To clean the cabinet

- Use a soft cloth. Follow the relevant instructions on the use of chemically-coated cloths.
- Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

## Table of contents

|                                                              |    |
|--------------------------------------------------------------|----|
| <b>Supplied accessories</b> .....                            | 1  |
| <b>About this manual</b> .....                               | 1  |
| <b>Precautions</b> .....                                     | 1  |
| <b>Before operation</b> .....                                | 2  |
| About discs .....                                            | 2  |
| <b>Preparations</b> .....                                    | 3  |
| Connections .....                                            | 3  |
| Using the remote control unit.....                           | 5  |
| <b>Basic operations</b> .....                                | 6  |
| Turning on/off the unit.....                                 | 6  |
| Initial setup .....                                          | 6  |
| Basic playback.....                                          | 7  |
| Resuming playback .....                                      | 8  |
| Various speed playback .....                                 | 9  |
| Locating the beginning of a scene or song.....               | 10 |
| <b>Advanced operations</b> .....                             | 11 |
| Playing from a specific position .....                       | 11 |
| Changing the playback order.....                             | 12 |
| Repeat playback.....                                         | 14 |
| Changing the language, sound and scene angle .....           | 15 |
| Special picture/sound effect .....                           | 16 |
| Menu bar functions .....                                     | 17 |
| <b>MP3 disc playback</b> .....                               | 19 |
| Operations .....                                             | 19 |
| <b>Changing the initial settings</b> .....                   | 21 |
| Selecting preferences .....                                  | 21 |
| Limiting playback by children.....                           | 24 |
| <b>Additional information</b> .....                          | 26 |
| Names of parts and controls.....                             | 26 |
| Troubleshooting .....                                        | 28 |
| Specifications .....                                         | 28 |
| Appendix A: Country/Area code list for Parental Lock.....    | 29 |
| Appendix B: Table of languages and their abbreviations ..... | 30 |
| Appendix C: Digital output signal chart.....                 | 30 |
| Appendix D: Glossary .....                                   | 31 |

# Before operation

## About discs

### Playable disc types

Discs with the following marks can be played back on the unit.

| DVD VIDEO                                                                         | SVCD                                                                              | Video CD                                                                          | Audio CD                                                                          |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |

The DVD Logo is a trademark.

The unit can also play back the following discs:

- DVD-R, DVD-RW and +RW discs written in the DVD VIDEO format and finalized
- CD-R and CD-RW discs written in the SVCD, Video CD or Audio CD format and finalized
- CD-R and CD-RW discs written in MP3 in accordance with the "ISO 9660" format (See page 19 for details.)

#### NOTE

If a disc gets dirty, scratched or warped, or due to the disc characteristics or recording conditions, it may take considerable time for the unit to read the content, or the unit may not be able to play back such discs.

The unit can play back audio signals recorded in MIX-MODE CD, CD-G, CD-EXTRA and CD TEXT.

### Region code of DVD VIDEO

This unit can play back DVD VIDEO discs whose region code numbers include "1."

Examples of playable DVD VIDEO discs:



#### NOTE

The unit's region code is printed on the rear of the unit.

### Color system format

This unit accommodates the NTSC system, and also can play back discs recorded with PAL system whose Region Code numbers include "1."

Note that the PAL video signal on a disc is converted to an NTSC signal and output.

### Unplayable discs

The unit does not play back discs listed below. If you try to play back these discs, noise may generate causing damage to speakers.

- DVD-RW discs written in the VR format
- DVD-ROM, DVD-RAM, DVD AUDIO, CD-ROM, PHOTO CD, SACD

In addition, the unit does not play:

- Unfinalized discs
- Discs of irregular shape or discs with tape, seals or paste on either the label side or playback side. Playing back these discs may damage the unit.

## Digital audio formats

The unit supports the following digital audio formats (see page 31 "Glossary" for descriptions of each audio format):

Linear PCM, Dolby Digital, DTS (Digital Theater Systems)

#### NOTES

- Depending on the unit's [DIGITAL AUDIO OUTPUT] setting, digital audio signals may not be output as they are recorded on the disc. See "DIGITAL AUDIO OUTPUT" on page 23 for details.
- To play back DTS-encoded DVD VIDEO or DTS-encoded Audio CD discs correctly, connect the unit to an amplifier with a built-in DTS decoder. If the unit is connected to an amplifier without a DTS decoder, playback sound will be distorted.

### Notes on discs

- With some DVD VIDEO discs, the unit starts playback automatically after inserting the disc.
- The image may be sometimes poor or noisy due to defects in the disc itself.
- With some discs, operations described in this manual may not be possible.

## Care and handling of discs

If a disc gets dirty, dusty, scratched or warped, playback sound and picture may be deteriorated. Take proper precautions when handling discs.

#### Handling


- Do not touch the surface of the disc.
- Do not damage, stick paper to, or use any adhesive on either the label side or playback side.

#### Storing discs

- Keep discs in their cases. If discs are piled on top of one another without their protective cases, they can be damaged.
- Do not put discs in a location where they may be exposed to direct sunlight, or where the humidity or temperature is high. Avoid leaving discs in a car!

#### Cleaning discs

- Wipe with a soft dry cloth, moving from the center outwards. If a disc is difficult to clean, wipe with a cloth moistened with water.

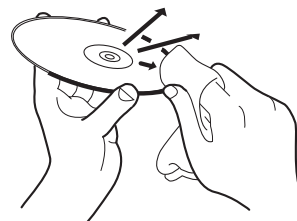

- Never use record cleaners, petrol, alcohol or any anti-static agents.

#### Notes on copyright

Check the copyright laws in your country before recording from DVD VIDEO, SVCD, Video CD, Audio CD and MP3 discs. Recording of copyrighted material may infringe copyright laws.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Preparations

## Connections

Before using the unit, connect the unit to a TV and/or amplifier.

### Before making connections


- Do not connect the AC power cord until all other connections have been made.
- Connect VIDEO OUT of the unit directly to the video input of your TV. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc. You may also have a monitor problem when connecting the unit to an integrated TV/Video system.

- In the following description, "TV" may be substituted with "monitor" or "projector."
- Terminal names used for other components may be different from those used in the following description.

## Connecting to a TV

The following sections ① to ③ describe TV connections where only a TV is connected to the unit so that you will hear audio from the TV.

### ① Connecting to a conventional TV

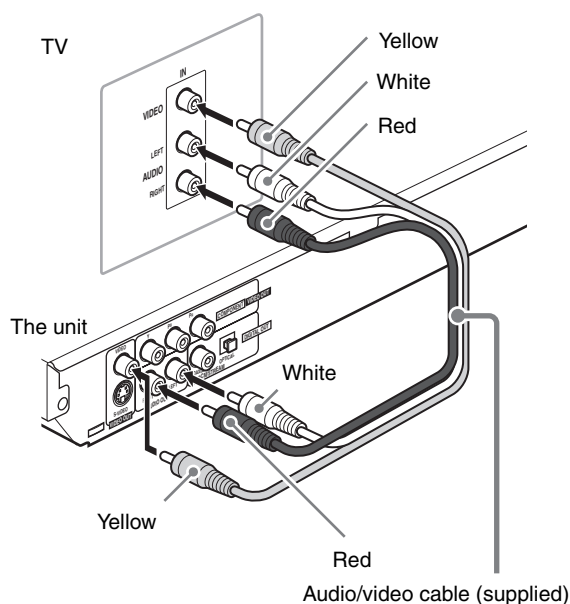


#### NOTE

If your TV has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.

### ② Connecting to a TV with an S-video jack

If your TV has an S-VIDEO input, you can get better picture quality by connecting it with the S-VIDEO output of the unit using an S-video cable instead of connecting the video input of the TV to the VIDEO jack of the unit.

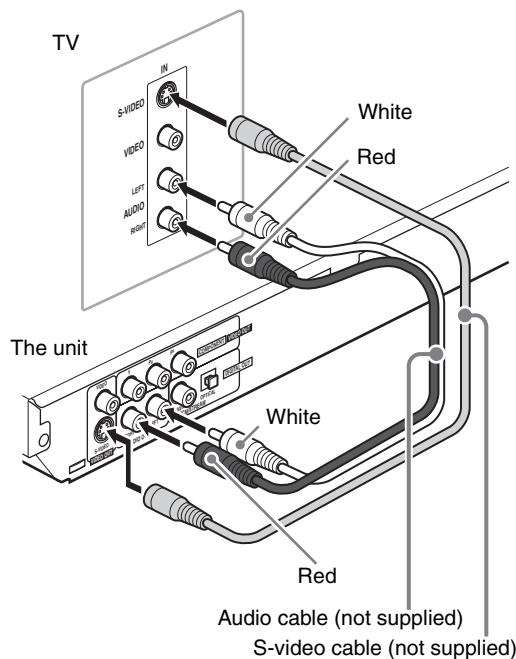


#### NOTE

When using the S-VIDEO output jack, do not connect the COMPONENT VIDEO OUT jacks on the unit.

### ③ Connecting to a TV with component jacks

You can enjoy picture of high-fidelity color reproduction by connecting the COMPONENT VIDEO OUT jacks on the unit to your TV.

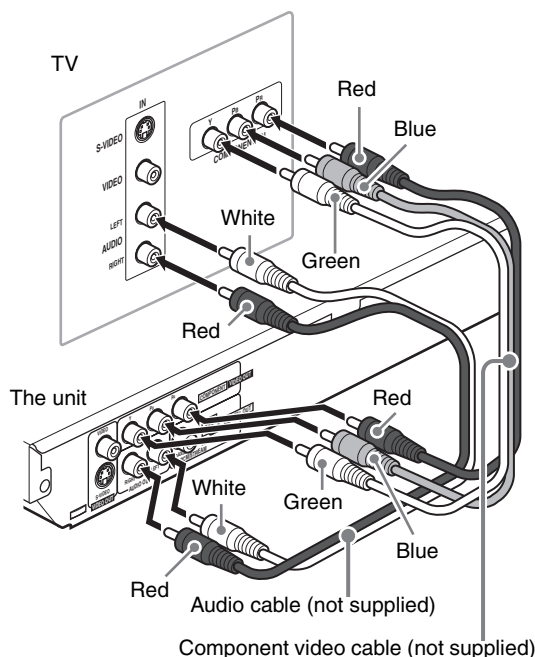

#### NOTES

- Connect "Y" to "Y", "P<sub>B</sub>" to "P<sub>B</sub>" (C<sub>B</sub>), "P<sub>R</sub>" to "P<sub>R</sub>" (C<sub>R</sub>) correctly.
- When using the COMPONENT VIDEO OUT jacks, do not connect the S-VIDEO output jack on the unit.
- When the component video input jacks on the TV are of the BNC type, use an adapter to convert a pin jack to a BNC jack (not supplied).


### Connecting to optional audio equipment

#### Connecting to a stereo audio amplifier/receiver

Connect the unit's AUDIO OUT (LEFT/RIGHT) jacks to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.

#### NOTE

Sound recorded on DTS-encoded DVD VIDEO or DTS-encoded Audio CD discs are not output from the analog (AUDIO OUT LEFT/RIGHT) jacks of the unit.

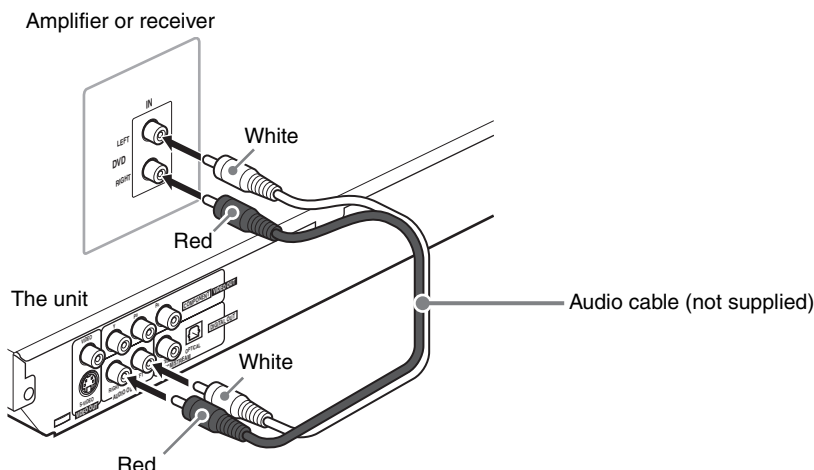


#### Connecting to a digital audio device

You can enjoy sound of enhanced quality by connecting the unit's DIGITAL OUT (either OPTICAL or COAXIAL) jack to a digital input of an amplifier, etc., using an optical or coaxial digital cable. The digital audio signal on a disc will be transferred directly from the unit. If the connected digital audio equipment is a Dolby Digital or DTS decoder or an amplifier with a built-in decoder, you can enjoy high-quality surround sound.

#### NOTES

- Connect the unit and the digital audio device by using either an optical digital cable or a coaxial digital cable.
- It is not recommended to use the digital jacks for dubbing. When recording the sounds (DVD VIDEO, SVCD, Video CD or Audio CD) played back on the unit, record them through the analog jacks.
- Depending on the disc, no signal may be output from the DIGITAL OUT. Make an analog connection in this case.
- **Set [DIGITAL AUDIO OUTPUT] in the [AUDIO] preference display correctly according to the connected digital audio equipment. If setting made for [DIGITAL AUDIO OUTPUT] is incorrect, loud noise may be generated causing damage to the speakers (see page 23).**

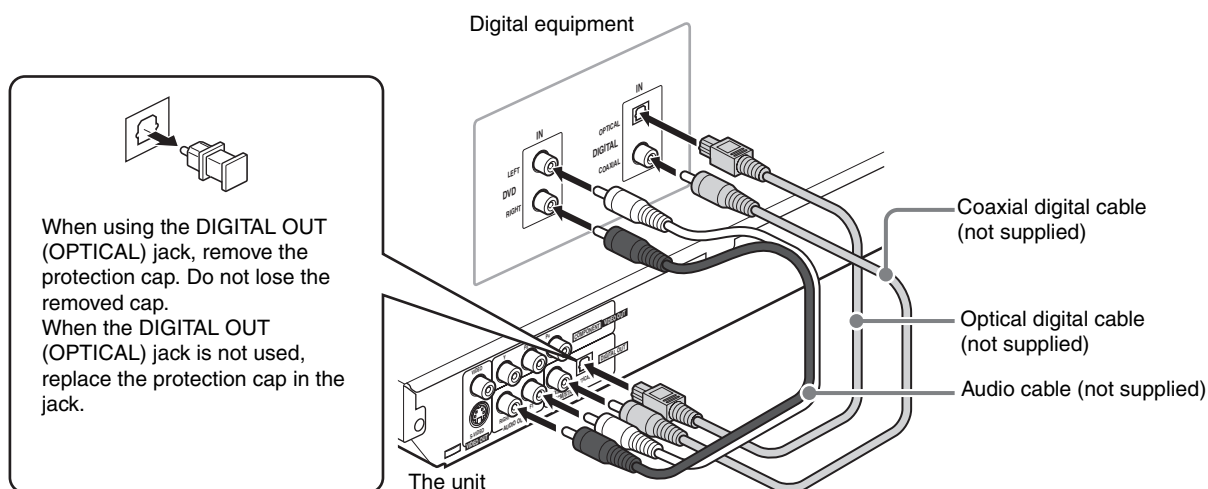

## Connecting the power cord

When all the audio/video connections have been made, connect the AC power plug to the wall outlet. Make sure that the plugs are inserted firmly.

The STANDBY indicator lights in red.



### Warning

- Disconnect the power cord:
  - if you are not going to use the unit for a long time.
  - before cleaning the unit.
  - before moving the unit.
- Do not:
  - connect or disconnect the power cord with wet hands.
  - pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.




### Caution

- Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents.
- If the cord is damaged, consult a dealer and have the power cord replaced with a new one.

## Using the remote control unit


### To install battery

- 1 While pushing the lock lever (①), pull out the battery holder (②).

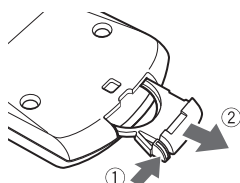

- 2 Place the supplied battery on the battery holder with the + side facing up.

Lithium coin battery  
(product number: CR2032)

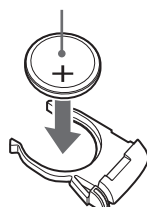


- 3 Insert the battery holder back into position.

## Precautions of the safe use of battery


- Store the battery in a place where children cannot reach.  
If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose of it in a fire.  
Doing any of these things may cause the battery to give off heat, crack, or start a fire.
- Do not leave the battery with other metallic materials.  
Doing this may cause the battery to give off heat, crack, or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack, or start a fire.
- Do not poke the battery with tweezers or similar tools.  
Doing this may cause the battery to give off heat, crack, or start a fire.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.

## Remote sensor

Point the top of the remote control unit toward the remote sensor as directly as possible. If you operate it from a diagonal position, the operating range (approx. 5 m) may be shorter.

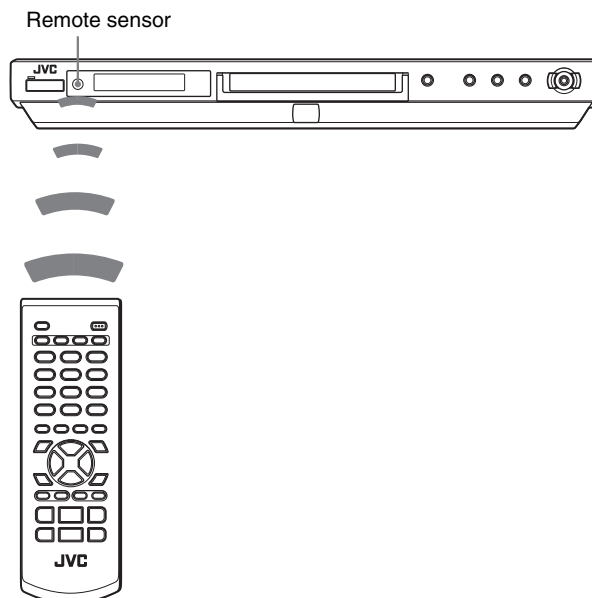

# Basic operations

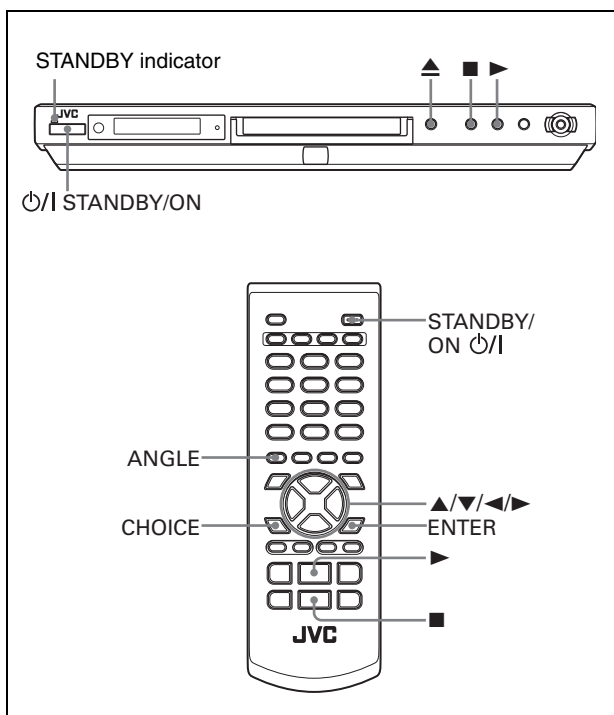

## About invalid operation icon

When you press a button, and if the unit does not accept its operation, appears on your TV screen. Operations are occasionally unacceptable even if is not displayed. Note that some operations may not be accepted. For example, some discs may not allow rapid advance/reverse or slow-motion playback.

## Turning on/off the unit

**Press STANDBY/ON on the remote control unit or press STANDBY/ON on the front panel.**

The STANDBY indicator on the front panel, which lights in red during standby, goes off.

The opening display appears on the TV screen, and the following messages may appear at the bottom of the opening display.



Message area

- NOW READING (The unit is reading the disc information.)
- REGION CODE ERROR! (The region code of the DVD VIDEO disc does not match the unit. The disc cannot be played back.)
- OPEN
- CLOSE
- NO DISC

## NOTE

Even if you turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called standby mode. In this state, the unit consumes a very small amount of power.

## Initial setup


When you turn on the unit for the first time after purchase, the following message appears on the TV screen.

EXECUTE DVD PLAYER SETUP? - BASIC PICTURE/AUDIO SETTING  
YES - PRESS ENTER NO - CANCEL

You can set the display language, TV monitor type and digital output before using the unit, by following the procedure below.

### 1 Press ENTER.

The first page of the DVD PLAYER SET UP display appears. The pull-down menu of the [ON SCREEN LANGUAGE] is already open.

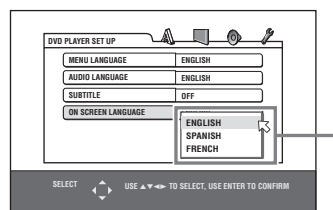


ON SCREEN LANGUAGE options

### 2 Press / to select the desired language.

You can select the on-screen language for the preference displays, etc. from among ENGLISH, SPANISH and FRENCH.

### 3 Press ENTER.

The second page is shown, in which the pull-down menu of the [MONITOR TYPE] is already open.

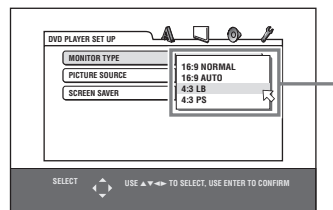


MONITOR TYPE options

### 4 Press / to select the desired monitor type.

For a normal (conventional) TV, select [4:3 LB] or [4:3 PS]. For a wide-screen TV, select [16:9 NORMAL] or [16:9 AUTO] (see page 22) .

### 5 Press ENTER.

The third page is shown, in which the pull-down menu of the [DIGITAL AUDIO OUTPUT] is already open.

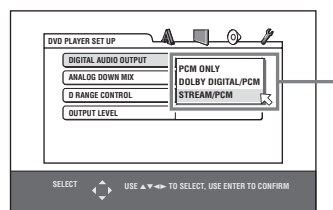

DIGITAL AUDIO OUTPUT options

## 6 Press ▲/▼ to select a desired digital output signal type.

Set this item correctly when you connect the unit to an external surround decoder or D/A converter. (If you do not connect the unit to such a device, you do not have to set this item.)

- When connecting to a Dolby Digital decoder, select [DOLBY DIGITAL/PCM].
- When connecting to a DTS decoder, select [STREAM/PCM].
- When connecting to other digital device, select [PCM ONLY].

## 7 Press ENTER.

The TV screen returns to the opening display.

### To bring up the DVD PLAYER SET UP display later

Press CHOICE for a few seconds until the DVD PLAYER SET UP display appears.

### To change the brightness of the display window

Press and hold DISPLAY.


You can select the display window brightness from three levels. Release DISPLAY at the desired brightness.

## Basic playback



### 1 Press ▲ to open the disc tray.

### 2 Place a disc in the disc tray.

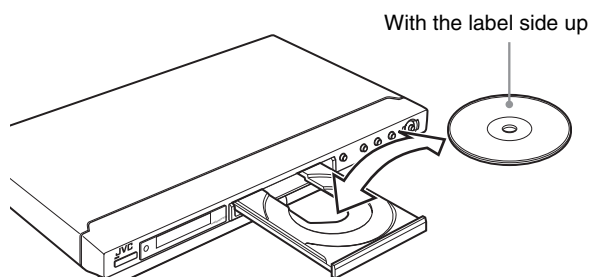

- To insert an 8-cm disc, place it in the inner recess.

### 3 Press ►.

The unit starts playback from the beginning.

### If a menu is shown on the TV screen

When inserting a DVD VIDEO, SVCD or Video CD disc, a menu may be shown on the TV screen. From the menu, you can select a desired item to be played back.

#### For DVD VIDEO

- 1 Press ▲/▼/◀/▶ to select a desired item.
- 2 Press ENTER.

The unit starts playback of the selected item.

#### For SVCD/Video CD

Press the numeric buttons to select a desired item. The unit starts playback of the selected item.


### NOTES

- Do not insert an unplayable disc. (See page 2.)
- When inserting a disc on the disc tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the disc tray is closed, or you may not be able to remove the disc from the unit.

### About PBC (Playback Control)

Some SVCD/Video CD discs support the PBC function. The PBC function allows you to enjoy menu-driven operation and high-resolution still images which have a resolution four times greater than moving pictures.

- To play a PBC-compatible SVCD/Video CD disc without activating the PBC function, press the numeric buttons instead of ► to start playback.
- To activate the PBC function again,
  - 1) press TOP MENU or MENU,
  - or
  - 2) press ■ to stop playback, then press ►.

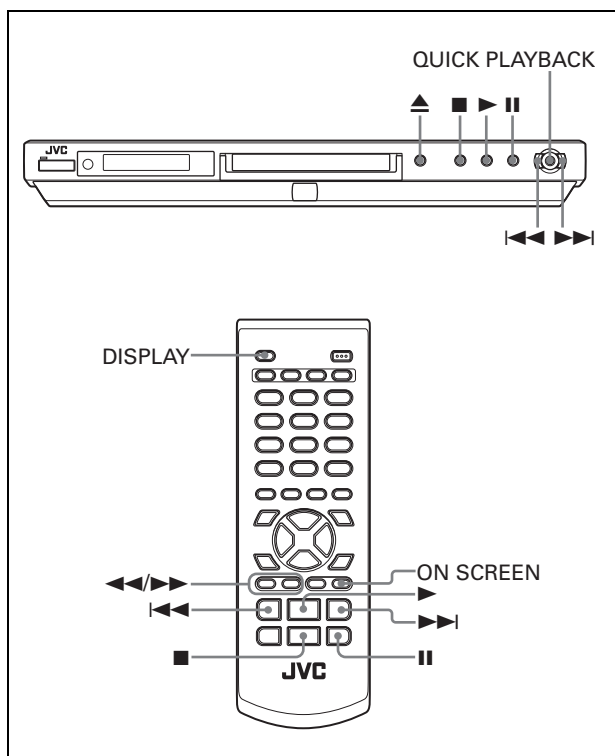


## To check the playback status

You can see the current selection number (the title/chapter number for DVD VIDEO or track number for SVCD/Video CD/Audio CD), time information (the track or chapter time while stopped, or elapsed track or chapter time during playback) and the transport status (stop, playback, pause, etc.) on the TV screen.

**Press ON SCREEN.**

Example: for DVD VIDEO

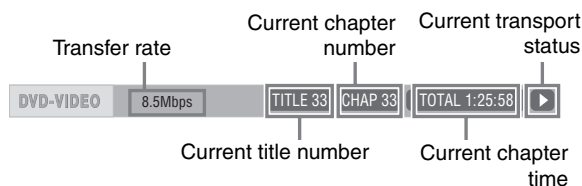

Note that pressing ON SCREEN again brings up the menu bar under the status bar, from which you can access various functions. See page 17 for details about the menu bar.

## To turn off the status bar


Press ON SCREEN repeatedly until the status bar goes off.

## To change the display window contents

**Press DISPLAY.**

Example: for DVD VIDEO

Each time you press DISPLAY, the total time display and the title/chapter number display appear alternately.

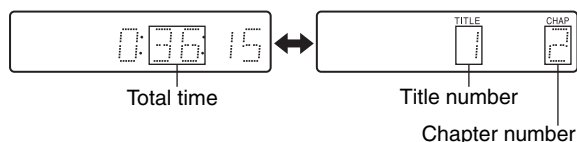

## To stop playback completely

Press ■.

### Hint

If you press ▲ during playback, the unit stops playback and opens the disc tray.

## To stop playback temporarily

Press II.

To resume playback, press ►. (See the following item.)

## About On-screen guide icons

You may see the following icons displayed over the picture. They have the following meanings.

: Appears at the beginning of a scene recorded from multiple angles (see page 15).

: Appears at the beginning of a scene recorded with multiple audio languages (see page 15).

: Appears at the beginning of a scene recorded with multiple subtitle languages (see page 15).

## Resuming playback



The unit can memorize the position on a disc where you interrupt playback, and resume playback from that position later.

There are three resume modes; ON, OFF and DISC RESUME. The mode is initially set to ON when you purchased the unit.

- You can select the mode using the preference display (see page 23).

## When the resume mode is "ON"

When you press ■, the unit stops playback and memorizes the interrupted position. The TV screen shows [RESUME STOP] and the "RESUME" indicator lights up in the display window.

The memory of the interrupted position is not cleared if you turn off the unit.

When you turn off the unit after setting the resume function, simply press ►. The unit is turned on, and playback starts from the interrupted position. If you turn on the unit by pressing /I/STANDBY/ON then press ►, playback starts from the beginning of the disc.

Note that the memory is cleared if you open the disc tray.

## When the resume mode is "DISC RESUME"

When you press ■, the unit stops playback and memorizes the interrupted position. The TV screen shows [RESUME STOP] and the "RESUME" indicator lights up in the display window.

The memory of the interrupted position is not cleared if you open the disc tray or turn off the unit.

### Hint

The unit memorizes interrupted positions for the last 30 discs played. Storing a new interrupted position will erase the interrupted position stored for the first disc.

## To clear the memory

Press ■ while the disc is stopped.

## To resume playback

### When the resume mode is “ON”

**While the disc you interrupted playback is still on the disc tray, press ►.**

The unit resumes playback from the position where playback was interrupted. The TV screen shows “RESUME PLAY.”

#### To play back from the beginning

Press ■ before pressing ► to start playback.

### When the resume mode is “DISC RESUME”

#### 1 Press ▲ to insert a disc for which the unit has stored an interrupted position.

The TV screen shows [RESUME STOP].

#### 2 Press ►.

The TV screen shows [RESUME PLAY] and the unit resumes playback from the position where playback was interrupted.

#### To play back from the beginning

After inserting the disc, press ■ before pressing ► to start playback.

#### NOTES

- If you change the [RESUME] setting from [DISC RESUME] to [OFF] or [ON], you cannot resume playback of a disc whose “resuming” position is stored. However, when you again set [RESUME] to [DISC RESUME], you will then be able to resume playback of the disc.
- If you interrupt the playback of a disc for which an interrupted position has already been stored, the memory will be updated with the new interrupted position.
- For a double-sided DVD VIDEO disc, the unit regards each side as a different disc. Therefore, to resume playback of such a disc, the disc must be inserted with the same side down.
- When the unit memorizes an interrupted point for a disc, it also memorizes Audio, Subtitle and Angle settings.
- The unit may not resume playback exactly from the interrupted point. In the case of an SVCD/Video CD disc with PBC function, the unit may resume playback from a point slightly earlier or later than the point where playback was interrupted.

## Various speed playback

### x1.5 Quick Playback with sound



**During playback, press QUICK PLAYBACK on the unit.**

The lamp on the QUICK PLAYBACK button turns on, and the disc is played back at about 1.5 times normal speed. The sound is not muted, and the subtitle does not go off.

#### To return to the normal playback

Press QUICK PLAYBACK again. The lamp on the button goes off.

#### NOTES

- x1.5 Quick Playback can also be achieved by pressing ►► once. (See next section.)
- At the x1.5 Quick Playback mode, the digital sound is output in stereo linear PCM format. Note that the sound of a DTS-encoded DVD VIDEO disc is not output.
- Depending on a disc, the sound may not be in tune, or the sound quality may alter during the x1.5 Quick Playback mode.

## To advance or reverse playback rapidly while monitoring



**During playback, press ►► or ◀◀ on the remote control unit.**

You can select from 1.5 times, 5 times, 20 times and 60 times normal speed. Pressing ► returns the unit to normal playback.

**During playback, hold down ►► or ◀◀.**

Playback is advanced or reversed at 5 times normal speed.

#### NOTE

During rapid playback, the sound will be muted except when playing an Audio CD, and when playing a DVD VIDEO or Video CD at 1.5 times normal speed.

## To advance a still picture frame by frame



**While paused, press II.**

Each time you press II, the still picture advances to the next frame.

Pressing ► returns to normal playback.

## To play back in slow motion




You can select from 1/32 times, 1/16 times, 1/4 times and 1/2 times normal speed.

**During playback, press II, then press ►► (to play forward slow motion), or ◀◀ (to play reverse slow motion, for DVD VIDEO disc only).**

Pressing ► returns to normal playback.

#### NOTES

- During slow motion playback, the sound will be muted.
- Reverse slow motion playback is not possible for an SVCD and Video CD.

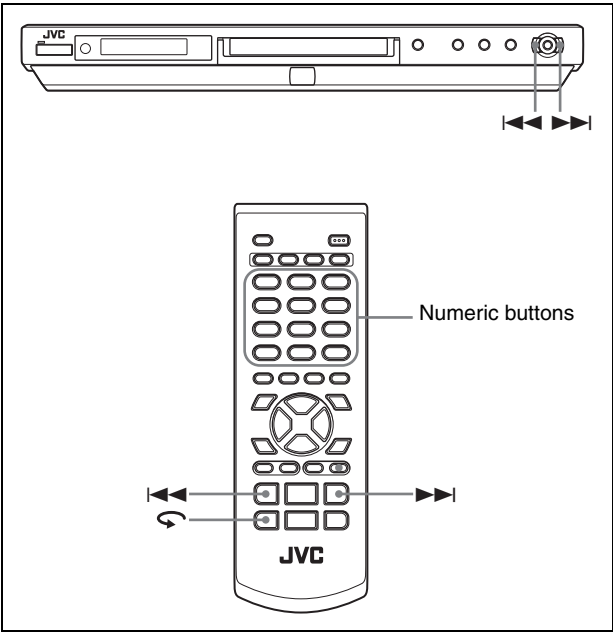

## To replay the previous scenes (One touch replay function)

**DVD  
VIDEO**

During DVD VIDEO playback, press .

The playback position moves back 10 seconds before the current position.

### NOTES

- This function works only within the same title, though it works between chapters.
- This function may not work with some DVD VIDEO discs.

## Locating the beginning of a scene or song

 
**DVD  
VIDEO** **Super  
VCD** **Video  
CD** **Audio  
CD**

For DVD VIDEO: During playback, you can skip a chapter or title, depending on the disc configuration.

For SVCD/Video CD: During playback without PBC function, you can skip a track.

For Audio CD: During playback or while in stop mode, you can skip a track.

To skip forward, press .

To skip backward, press .

## Using the numeric buttons

For DVD VIDEO/Audio CD: During playback or while in stop mode

For SVCD/Video CD: During playback without PBC function or while in stop mode

Press the numeric buttons to specify the number.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback from the beginning of the selection.

### NOTES

- Depending on the disc type and the unit status, what is specified differs:

| Unit status     | Disc type              | What is specified |
|-----------------|------------------------|-------------------|
| While stopped   | DVD VIDEO              | title             |
|                 | SVCD/Video CD/Audio CD | track             |
| During playback | DVD VIDEO              | chapter           |
|                 | SVCD/Video CD/Audio CD | track             |

- During DVD VIDEO playback, if a menu is shown on the TV screen, the numeric buttons may be used for selecting an item in the menu.


## About screen saver function

A television monitor may have an image burned into it if a static image is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

When the screen saver function is activated, the TV screen gets darker.

Pressing any buttons will release the screen saver function.

# Advanced operations

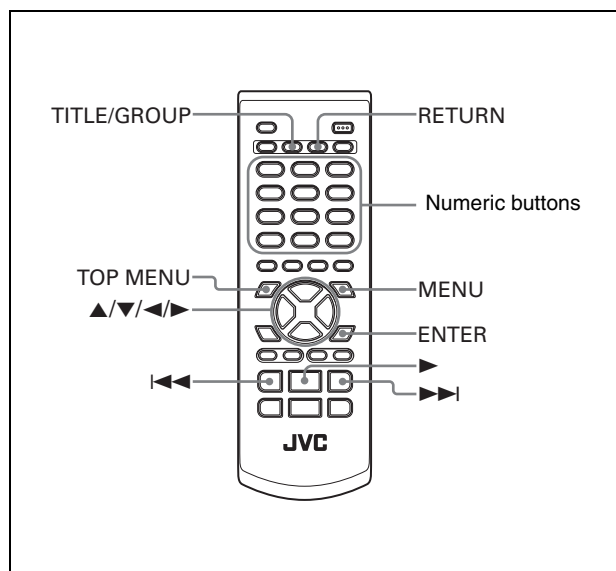

## Playing from a specific position

### Locating a desired scene from the DVD menu



DVD VIDEO discs generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene using the DVD menu.

#### 1 While a DVD VIDEO disc is inserted, press TOP MENU or MENU.

The menu appears on the TV screen.

#### 2 Press ▲/▼/◀/▶ to select a desired item, then press ENTER.

The unit starts playback of the selected item.

#### Hints

- Some DVD VIDEO discs may also have a different menu which appears when MENU is pressed.
- See the instructions of each DVD VIDEO disc for its particular menu.
- With some discs, you can select items by entering the corresponding number using the numeric buttons, which may cause the unit to automatically start playback.

#### NOTE

The MENU button does not work while stopped.

### Locating a desired scene from the menu of a SVCD/Video CD with PBC



Some SVCD/Video CD discs support the PBC function. PBC is an abbreviation of "Playback Control." Some SVCD/Video CD discs recorded with PBC have their own menus, such as a list of the songs of the disc. You can locate a specific scene by using the PBC menu.

#### 1 In stop mode, press ► or TOP MENU.

A disc menu appears on the TV screen.

#### 2 Press the numeric buttons to select the desired item.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback of the selected item.

To return to the menu, press RETURN.

#### Hint

If something like [NEXT] or [PREVIOUS] appears on the TV screen, pressing ►| advances to the next page, and pressing ◀| returns to the previous page.

### Specifying a desired title



#### 1 During playback, press TITLE/GROUP.

[--] is shown in the title display area of the display window.

#### 2 Press the numeric buttons to specify a title to be played.

To select 5: press 5.


To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback from the specified title.

#### NOTE

This function may not work with some DVD VIDEO discs.

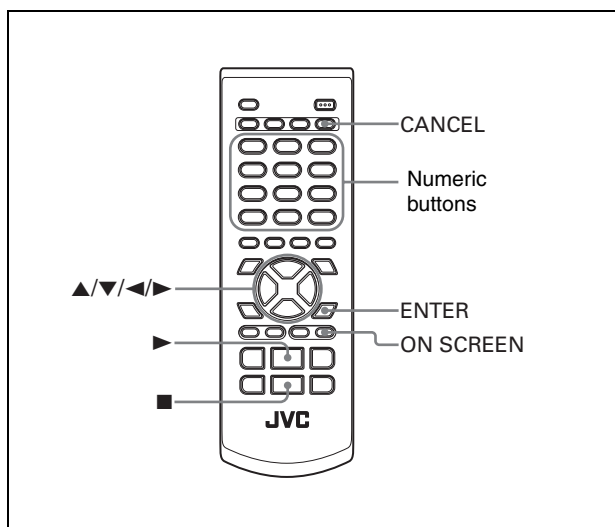

### Locating a desired position in the current title or track (Time search)



You can play a disc from the desired position by specifying the time from the beginning of the current title (for DVD VIDEO) or the disc (for SVCD/Video CD/Audio CD).

For DVD VIDEO/Audio CD: During playback or while in stop mode

For SVCD/Video CD: In any condition except SVCD/Video CD playback with PBC

 
#### 1 Press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀▶ to move to ⏮⏭, then press ENTER.

The pull-down menu for entering time appears.

##### Screen example for DVD VIDEO



##### Screen example for Audio CD



#### 3 Press the numeric buttons (0 to 9) to enter the desired time.

The specified time is displayed in the pull-down menu.

##### Example (for DVD VIDEO)

To play back from 2(H):34(M):00(S)

Press 2, 3, then 4.

TIME 2:34:\_\_

##### Example (for SVCD/Video CD/Audio CD)

To play back from 23(M):40(S)

Press 2, 3, then 4.

TIME 23:4\_

You do not have to press "0" to enter the trailing zeros (for the last two digits in the example above).

##### To correct a mistake

Press ◀ repeatedly to move back to the digit where you entered a wrong number, and reenter the correct one.

#### 4 Press ENTER.

The unit starts playback from the specified time.

#### To dismiss the menu bar

Press ON SCREEN.

##### Hint

"10" and "+10" buttons are not used with this function.

##### NOTES

- Some DVD VIDEO discs do not contain time information, and the time search function cannot be used.
- The time search function cannot be used during program playback.

## Changing the playback order

### To play back in a specific order (Program play)



 
By programming tracks, you can play up to 99 tracks in any order. You may program the same track more than once.

#### 1 In stop mode, press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀▶ to move to ⏮⏭ to PROG.,

Screen example for Audio CD



#### 3 Press ENTER.

The program table appears.


The PROG indicator lights up in the display window.

#### 4 Press the numeric buttons to specify tracks in the desired order.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

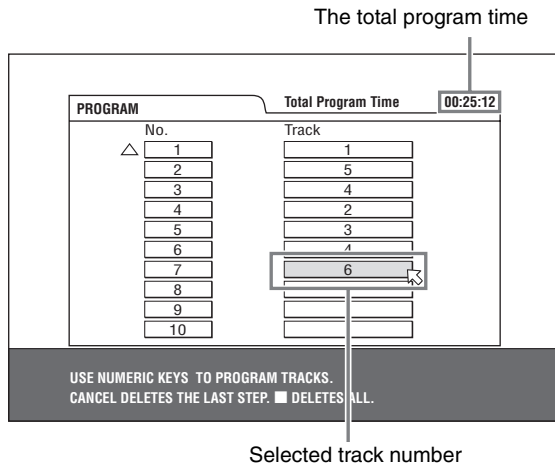

##### To correct the program

Press ▲/▼ to move to the track to be corrected, then press CANCEL. The track is erased and the subsequent programmed tracks move up.

Pressing ■ clears all the programmed tracks.

#### 5 Press ► to start program playback.

With an Audio CD disc, the program table remains on the TV screen during program playback. (Pressing ON SCREEN brings up the status bar.)

When all of the programmed tracks have finished playback, the unit stops and the program table appears again.

Note that the program remains.

- During program playback, you cannot edit the program contents.

#### To check the program contents

During playback, press ■. Playback stops and the program table is shown.

When the unit is playing back an Audio CD and the program table is not shown, you can bring up the table by carrying out steps 1 to 3.

During SVCD/Video CD playback, you can check the program contents via the menu bar.

#### To stop program playback

Press ■.

#### To clear the program

While stopped and the program table is shown, press ■.

#### To exit the program mode

After clearing the program, press ON SCREEN.

##### NOTE

When the disc tray is opened or the unit is turned off, the program is cleared.

### To play back in random order (Random play)

 


#### 1 In stop mode, press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀▶ to move to RND.

Screen example for Audio CD



#### 3 Press ENTER.

The unit starts random playback.


With an SVCD/Video CD disc, the menu bar is automatically dismissed.

During random playback, the RND indicator lights up in the display window.

After playing all tracks of the disc, the unit stops the disc and exits the random playback mode.

#### To stop and quit random playback

Press ■. The unit stops playback and exits the random playback mode.

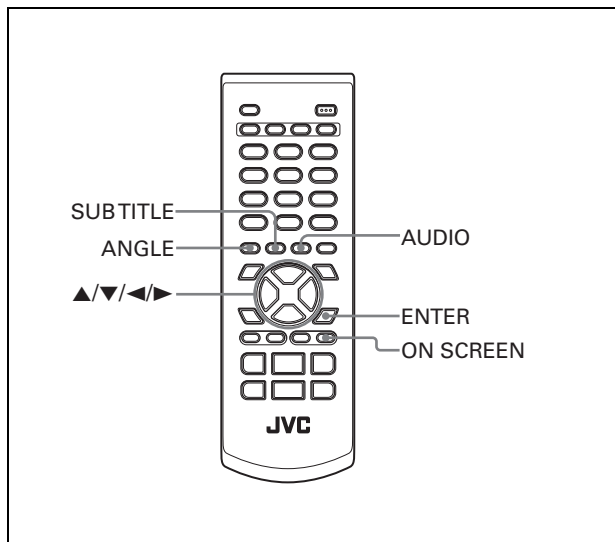

## Repeat playback

### To repeat the current selection or all tracks



For DVD VIDEO: During playback

For SVCD/Video CD/Audio CD: In any condition except SVCD/Video CD playback with PBC

#### 1 Press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀▶ to move [ ] to [ ], then press ENTER.

The pull-down menu for repeat mode selection appears.

#### 3 Press ▲/▼ to select the desired repeat mode.

**For DVD VIDEO**

CHAPTER: current chapter repeat

TITLE: current title repeat

A-B: see "To repeat a desired part (A-B repeat playback)" on this page.

**For SVCD/Video CD/Audio CD**

TRACK: current track repeat

ALL: all track repeat

A-B: see "To repeat a desired part (A-B repeat playback)" on this page.

If you select the repeat mode while stopped, press ▶ to start repeat playback.

The "↺" indicator lights in the display window.

### To quit repeat playback

Select [OFF] at step 3 above.

#### Hint

When the program playback mode is active with an SVCD, Video CD or Audio CD, the repeat mode changes in the same manner.

Note, however, that in the "↺" mode the unit repeats all the programmed tracks instead of all tracks on the disc.

### To repeat a desired part (A-B repeat playback)



#### First make sure:

- The unit is in playback mode except SVCD/Video CD playback with PBC.

#### 1 Press ON SCREEN twice.

The menu bar appears on the TV screen.

#### 2 Press ◀▶ to move [ ] to [ ], then press ENTER.

The pull-down menu for repeat mode selection appears.

#### 3 Press ▲/▼ to select [A-B].

#### 4 Press ENTER at the beginning of the part you want to repeat (point A).

The pull down menu disappears.

The repeat icon shows [↺ A-].

#### 5 Press ENTER at the end of the part you want to repeat (point B).

The repeat icon shows [↺ A-B].

The unit locates "A" and starts repeat playback between "A" and "B."

The "↺" indicator lights in the display window.

### To quit A-B repeat playback

Press ◀▶ to move [ ] to [↺ A-B], and press ENTER. The A-B repeat mode turns off, then normal playback continues.

#### NOTE

The A and B points must be set in the same title/track.

## Changing the language, sound and scene angle

### To select the subtitle language (SUBTITLE)



 
Some DVD VIDEO and SVCD discs contain more than one subtitle language. You can choose a desired one from them.

#### Hint

At the beginning of the part where the subtitles are recorded, appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press SUBTITLE.

The subtitle selection window appears on the TV screen.



#### 2 Press ▲/▼ or SUBTITLE to select the subtitle.

Each time you press ▲/▼ or SUBTITLE, the subtitle language changes.

#### 3 Press ENTER.

Subtitles are displayed in the selected language.  
The subtitle selection window is dismissed.

#### NOTES

- An SVCD disc can have up to four subtitles. Pressing ▲/▼ cycles through those channels regardless of whether the subtitles are recorded or not.
- The Subtitle selection window will automatically disappear if you do not change the subtitle for several seconds.
- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See “Appendix B: Table of languages and their abbreviations” on page 30.

### To change the audio language or sound (AUDIO)



 
The audio selection setting allows you to change the audio language of a movie, or to listen to karaoke with or without the vocal.

#### Hint

At the beginning of the part where multiple audio tracks are recorded, appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press AUDIO.

The audio selection window appears on the TV screen.




#### 2 Press ▲/▼ or AUDIO to select the desired audio.

Each time you press ▲/▼ or AUDIO, the audio changes.


For DVD VIDEO (example)



 For SVCD



For Video CD

 

#### 3 Press ENTER.

You can hear the selected audio.  
The audio selection window is dismissed.

#### NOTES

- The audio selection window will automatically disappear if you do not change the audio for several seconds.
- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See “Appendix B: Table of languages and their abbreviations” on page 30.

### To select a scene angle of DVD VIDEO (ANGLE)



 
You can enjoy a variety of scene angles if the DVD VIDEO disc contains “multi-angle” parts, where multiple cameras were used to shoot the same scene from different angles.

#### Hint

At the beginning of a “multi-angle” part, appears on the TV screen (except when the [ON SCREEN GUIDE] preference is set to [OFF]).

#### 1 During playback, press ANGLE.

The angle selection window appears on the TV screen.



#### 2 Press ▲/▼ or ANGLE to select the desired angle.


Each time you press ▲/▼ or ANGLE, the angle changes.

#### 3 Press ENTER.

You can see the picture from the selected angle.  
The angle selection window is dismissed.

#### NOTE

The angle selection window will automatically disappear if you do not change the angle for several seconds.

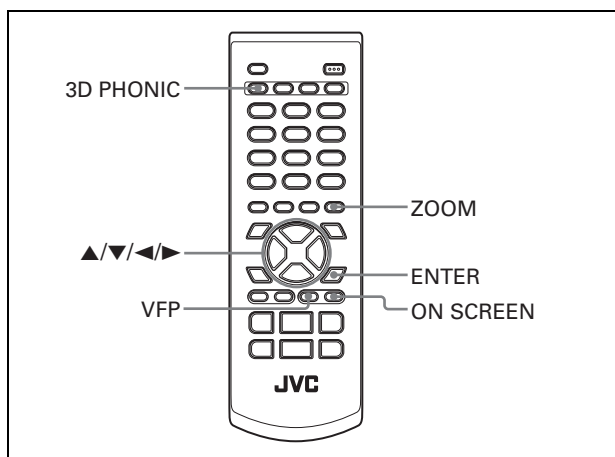


## Special picture/sound effect

### To zoom in pictures



#### 1 During playback or while paused, press ZOOM.

 Pressing ZOOM causes the unit to zoom in on the image. At the top left of the screen, the information for the current magnification appears for about 5 seconds. Each time you press ZOOM, the magnification is doubled (up to 64 times).



When a picture of a DVD VIDEO disc is viewed on a normal TV screen (4:3, Letter Box), black bars may appear at the top and bottom of the screen. In this case, if you select the "ZOOM x 1.8" mode, the black bars become almost invisible. When a 1:2.35 or 1:1.85 DVD VIDEO source is played back, however, the black bars are visible on the screen.

#### 2 Press ▲/▼/◀/▶ to move the zoomed position.

#### To return to the normal playback

Press ENTER.

#### NOTE

While zoomed, the picture may look coarse.

### To adjust the picture character (VFP)



The VFP (Video Fine Processor) function allows you to adjust the picture character according to the type of programming, picture tone or personal preferences.

#### 1 During playback, press VFP.

The VFP mode selection window appears on the TV screen.


#### 2 Press ◀/▶ to select the desired preset.

Each time you press the button, the VFP mode changes as follows.

Set the video type most suitable to the current program or the room conditions.



Selected preset

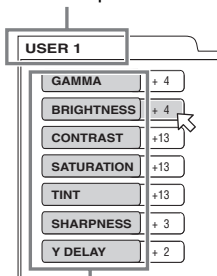

Parameter

[NORMAL]: for watching TV in a general room.

[CINEMA]: for watching a movie software in a room with suppressed light.

[USER 1] [USER 2]: you can adjust parameters that affect the picture character and store the settings as a user preset. See the next step.

#### 3 To define a user setting, press ▲/▼ to select a parameter to be edited from the following.

- **GAMMA**  
Adjust this if the neutral color is bright or dark. The brightness of dark and bright portion is maintained.  
Available range: -4 (darkest) to +4 (brightest)
- **BRIGHTNESS**  
Adjust this if the picture is bright or dark on the whole.  
Available range: -16 (darkest) to +16 (brightest)
- **CONTRAST**  
Adjust this if the far and near position is unnatural.  
Available range: -16 to +16
- **SATURATION**  
Adjust this if the picture is whitish or blackish.  
Available range: -16 (blackest) to +16 (whitest)
- **TINT**  
Adjust this if the appearance of flesh tone is unnatural.  
Available range: -16 to +16
- **SHARPNESS**  
Adjust this if the picture is indistinct.  
Available range: 0 to +3
- **Y DELAY**  
Adjust this if the picture looks separately/overlapped.  
Available range: -2 to +2

#### 4 Press ENTER.

A window for setting parameters appears.



Selected parameter

#### 5 Press ▲/▼ to adjust the level of the parameter.

The higher value enhances the effect.

#### 6 Press ENTER.

Repeat steps 3 to 6 if you want to set other parameters.

## To dismiss the VFP mode selection window

Press VFP.

### NOTES

- The window for VFP mode selection and parameter setting disappear if no operation is made for about 10 seconds.
- While zoomed, the VFP function cannot be used.

## To simulate surround sound (3D PHONIC)

### DVD VIDEO

Using the 3D PHONIC function, you can get a simulated surround effect from your stereo system.

### 1 During playback, press 3D PHONIC.

The 3D PHONIC window appears on the TV screen.

### 2 Press ◀/▶ to select the desired mode.

Each time you press the button, the 3D PHONIC mode changes as follows:

→ ACTION ↔ DRAMA ↔ THEATER ↔ NONE ←



Selected effect mode

- **ACTION**  
Suitable for action movies and sports programs in which the sound source moves.
- **DRAMA**  
Natural and warm sound. You can enjoy movies in a relaxed mood.
- **THEATER**  
You can enjoy sound effects like in a theater.

### 3 Press ▲/▼ to adjust the effect level.

You can set the effect level from [1] to [5].  
The higher value enhances the effect.

## To dismiss the 3D PHONIC window

Press 3D PHONIC.

### NOTES

- The 3D PHONIC window disappears if no operation is made for about 10 seconds.
- The 3D PHONIC function works correctly only when playing back a DVD VIDEO disc recorded with Dolby Digital.
- When playing back a DVD VIDEO disc recorded with Dolby Digital that does not contain the rear signal, you can change the 3D PHONIC setting, but you will not be able to achieve a correct 3D effect.
- The 3D PHONIC function does not affect the Dolby Digital bitstream signal from the DIGITAL OUT jack.
- When the 3D PHONIC function is active, the [ANALOG DOWN MIX] setting in the [AUDIO] setting display is not available.

## Menu bar functions

### To bring up the menu bar

#### 1 When a disc is inserted, press ON SCREEN.

A status bar for the type of disc inserted will appear on the TV screen.

See page 8 for details about the status bar.

 
#### 2 Press ON SCREEN again.

A menu bar for the type of disc inserted will appear under the status bar.


(for DVD VIDEO)




(for SVCD)



(for Video CD)

 

(for Audio CD)

 

### To dismiss the menu bar and status bar

Press ON SCREEN.

## Basic operation procedure

### 1 Press ◀/▶ to select the icon you want to work with.

The selected icon is pointed by ↗.

### 2 Press ENTER.

With many icons, an appropriate pull-down window appears, however, there are some exceptions.

### NOTES

- A mark or text on the menu icon for the function or mode currently selected is shown in green.
- Some functions are not available during playback. (You cannot move ↗ to the associated icon when it is not available.)

### Menu bar functions for DVD VIDEO

#### Time mode selection

During playback, selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TOTAL: Current title elapsed time
- T.REM: Current title remaining time
- TIME: Current chapter elapsed time
- REM: Current chapter remaining time

#### Repeat mode (See also page 14)

Selects the repeat mode during playback.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.
  - CHAPTER: Current chapter repeat
  - TITLE: Current title repeat
  - A-B: A-B repeat
  - OFF: Repeat mode deactivated
3. Press ENTER to make the selected repeat function active.

#### Time search (See also page 12)

Specifies a time from the beginning of the current title as the point from which to begin playback.

#### Chapter search

During playback, specifies a desired chapter to be played back from.

1. Open the pull-down window.
2. Press numeric buttons (0 to 9) to enter a desired chapter number. (For example, to specify "10," press 1, then 0.)
3. Press ENTER to begin playback from the specified chapter.

#### Audio selection (See also page 15)

During playback, selects the audio language or sound track.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio language or sound track.
3. Press ENTER to begin playback with the selected audio.

#### Subtitle selection (See also page 15)

During playback, selects the subtitle language.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired subtitle language.
3. Press ENTER to begin playback with the selected subtitle.

#### Angle selection (See also page 15)

During playback, selects a desired scene angle in a multi-angle part.

1. Open the pull-down window.
2. Press ▲/▼ to select a scene angle.
3. Press ENTER to begin playback with the selected scene angle.

### Menu bar functions for SVCD/Video CD/ Audio CD

#### Time mode selection

Selects the time mode shown in the display window and in the status bar.

Press ENTER to select the time mode from the following.

- TIME: Current track elapsed time
- REM: Current track remaining time (while in stop mode, current track total time)
- TOTAL: Disc elapsed time
- T.REM: Disc remaining time (while in stop mode, disc total time)

#### Repeat mode (See also page 14)

Selects the repeat mode.

1. Open the pull-down window.
2. Press ▲/▼ to select the repeat mode from the following.
  - TRACK: Current track repeat
  - ALL: All track repeat
  - A-B: A-B repeat
  - OFF: Repeat mode deactivated
3. Press ENTER to make the selected repeat function active.

#### Time search (See also page 12)

Specifies a time from the beginning of the disc as the point from which to begin playback.

#### Program playback (See also pages 12 and 13)

While stopped, specifies the playback order of tracks.

#### Random playback (See also page 13)

While stopped, activates random playback.

#### Audio selection (See also page 15)

During SVCD/Video CD playback, selects the audio channel(s).


1. Open the pull-down window.
2. Press ▲/▼ to select a desired audio channel(s).
3. Press ENTER to play back with the selected audio channel(s).

#### Subtitle selection (See also page 15)

During SVCD playback, selects the subtitle.

1. Open the pull-down window.
2. Press ▲/▼ to select a desired subtitle.
3. Press ENTER to begin playback with the selected subtitle.

# MP3 disc playback

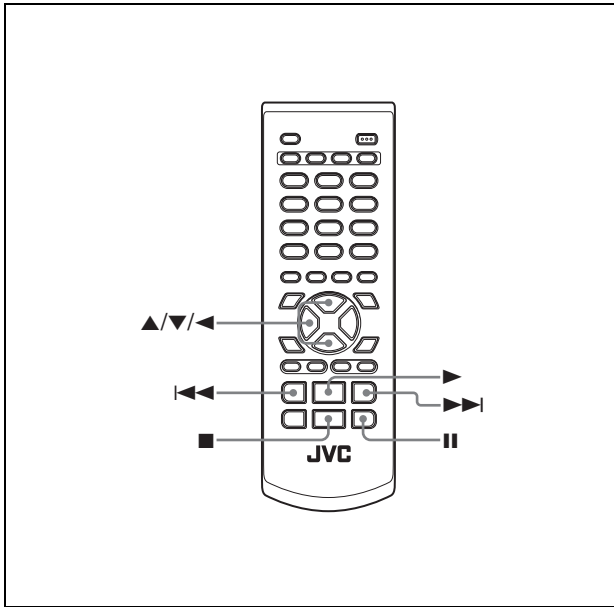


## Operations

The unit can play back MP3 files on a personally recorded CD-R/RW disc or commercially available CD. We refer to a disc that contains MP3 files as an "MP3 disc" in this manual.

### About MP3 discs

On an MP3 disc, each song is recorded as a file (track). Files are sometimes grouped into folders by artists, album, etc.

- Each file is regarded as a track.
- A folder which has one or more files is regarded as a group.
- A folder which does not directly contain any tracks is ignored.
- Files which do not belong to any folder are grouped into "group 1."
- The unit recognizes up to 150 tracks per group, and up to 99 groups per disc. If there are files other than MP3 files, they also count in the 150-file total.

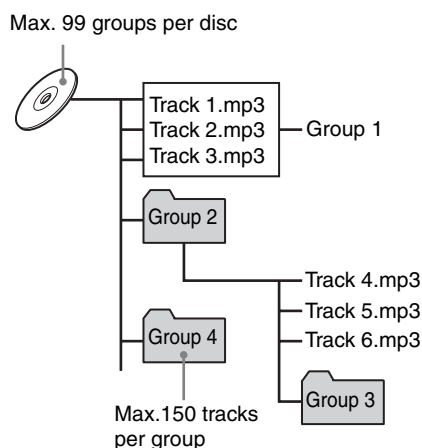

### Notes for making your own MP3 disc using a CD-R/CD-RW disc

- Select "ISO 9660" as the disc format.
- We recommend you record your material at a 44.1 kHz sampling rate, using the 128 kbps data transfer rate.

## Basic operations

Use the following buttons to control MP3 disc playback.

- ENTER: Starts playback while stopped.  
▶: Starts playback while stopped or paused.  
■: Stops playback.  
||: Pauses playback.  
◀◀/▶▶: Skips back or forward a track during playback.  
◀▶: Selects the previous or next track while stopped.

If you press ▶ during playback, or press ■ to stop playback followed by ▶, the unit starts playback from the beginning of the current track.

### NOTES

- The unit does not support "packet writing" discs.
- The unit does not support the ID3 tag.
- The unit supports discs recorded with multiple sessions.
- Some discs may not play due to disc characteristics or recording conditions.
- Programmed and random playback functions do not work with MP3 discs.
- The unit only can play back tracks with the following file extensions; ".MP3," ".Mp3," ".mp3" and ".mP3."
- Time required for reading the disc contents may vary for different discs, depending on the numbers of groups (folders) and tracks (files) recorded, etc.
- You cannot advance or reverse playback by pressing ▶▶ or ◀◀, or by holding down ▶▶ or ◀◀ during MP3 disc playback.

## Selecting the desired group and track

When inserting an MP3 disc, after the disc contents are read, the MP3 CONTROL display automatically appears on the TV screen. You can specify the desired group/track from the display using the following procedure.

### 1 Make sure that the black (cursor) bar is in the left (group) column.

If it is in the right column, press ◀ to move it to the left column.

### 2 Press ▲/▼ to move the bar to a desired group.

On the right column, tracks in the selected group are shown.

### 3 Press ◀◀/▶▶ to select a desired track, then press ENTER or ▶.

or


**Press the numeric buttons to directly specify a desired track number.**

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

The unit starts playback from the selected track.

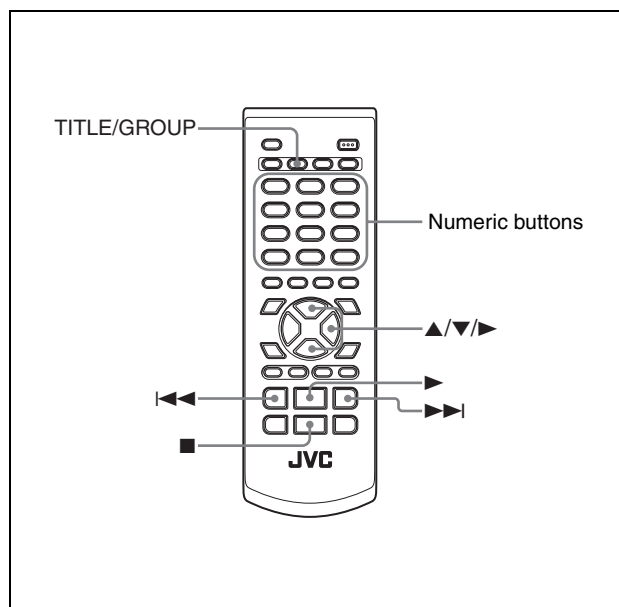

## 2 Press the numeric buttons to specify a desired group number.

To select 5: press 5.

To select 23: press +10, +10, then 3.

To select 40: press +10, +10, +10, then 10.

Specify the Group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows [-]).

The unit starts playback from track 1 of the selected group.

## 3 Press the numeric buttons to specify a desired track number.

The unit starts playback from the specified track.

You can also use ◀◀/▶▶ or ▲/▼ to specify a track, instead of the numeric buttons.

## Repeat playback

### 1 During playback or while stopped, press ON SCREEN.

The repeat mode selection window appears on the TV screen.



### 2 Press ▲/▼ to select the desired repeat mode.

TRACK: repeats the current track


GROUP: repeats all tracks in the current group

ALL: repeats all tracks on the disc

### 3 Press ENTER.

(TV screen)

Selected repeat mode

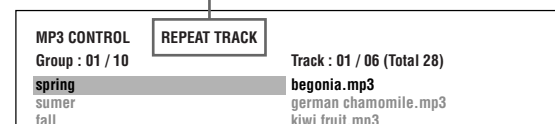

If you select the repeat mode while stopped, you need to press ENTER or ▶ to start playback.


### To stop repeat playback

Press ■. Note that the repeat mode remains active.

### To quit repeat playback

Select [OFF] in step 2 above.

Current track elapsed time

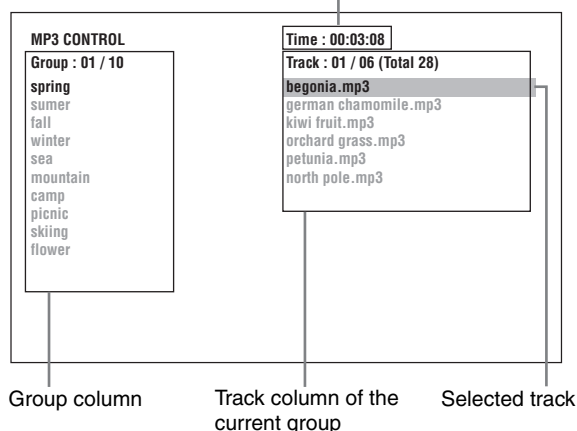

### Hint

You can also select a desired track by pressing ▶ to move the black bar to the right (track) column then using ▲/▼.

### NOTES

- If an MP3 file name includes any 2-byte character, the unit cannot show the file name correctly.
- Only MP3 files are shown on the MP3 CONTROL display.
- The order of groups/tracks shown in the MP3 CONTROL display may differ from the order shown on your personal computer when you set the disc on your computer.


## Direct selection

You can select a desired group directly by specifying the group number.

### 1 During playback or while stopped, press TITLE/GROUP.

[-] is shown in the group display area of the display window.

# Changing the initial settings

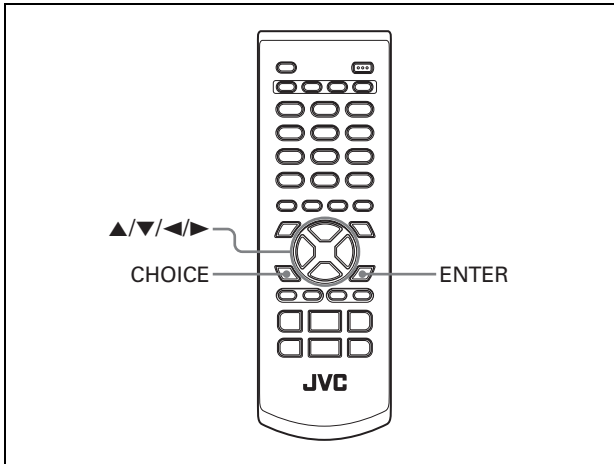


## Selecting preferences

This section refers to the settings which are already made when you purchase the unit. Read this section when you want to connect this unit to a wide-vision TV set, or when you want to otherwise change the settings according to your preferences and viewing environment.


## About the Preference display

The Preference display consists of the LANGUAGE, PICTURE, AUDIO and OTHERS setting displays, each having setting items.


### LANGUAGE

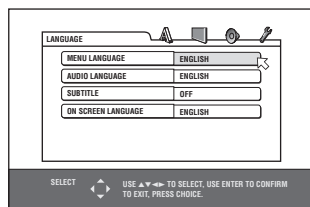


### PICTURE

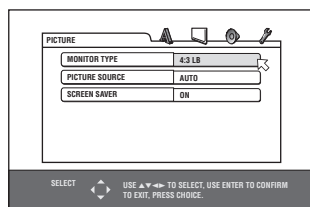

### AUDIO

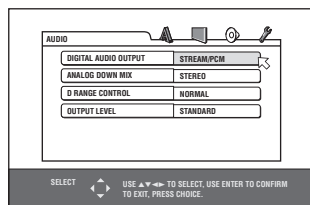

### OTHERS

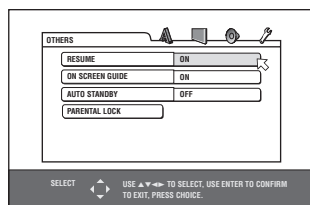

## How to set preferences

### 1 Press CHOICE.

One of the preference on-screen displays appears on the TV screen. You can see four icons at the top right of the on-screen display for the settings.

 : LANGUAGE menu

 : PICTURE menu

 : AUDIO menu

 : OTHERS menu

### 2 Press to select the appropriate icon.


The appropriate display appears on the TV screen.

### 3 Press to move to select the item you want to edit.

The color of the selected item changes.

### 4 Press ENTER.

A pull-down menu appears over the selected item.

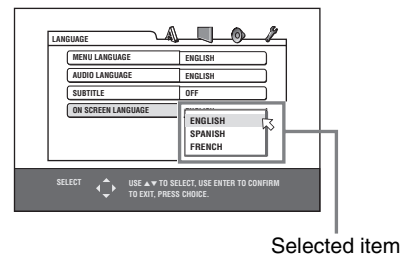

Selected item

### 5 Press to select from the options then press ENTER.

The selected option is set.

- For details about each setting, see the following.

## To dismiss a preference display

Press CHOICE.

### NOTES

- While an MP3 disc is inserted, you cannot bring up any preference display.
- When a preference display is shown on a wide TV screen, the upper and lower parts of the preference display sometimes may be cut off. If this happens, adjust the picture size control of the TV.

### LANGUAGE menu

#### MENU LANGUAGE

You can select the default menu language to be displayed if it is contained on a DVD VIDEO disc.

##### Setting options

**ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have a menu in the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 30.
- You cannot change the setting during playback.

#### AUDIO LANGUAGE

You can select the default audio language to be played if it is contained on a DVD VIDEO disc.

##### Setting options

**ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 30.
- You cannot change the setting during playback.

#### SUBTITLE

You can select the default subtitle language to be displayed if it is contained on a DVD VIDEO disc.

##### Setting options

**OFF, ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, language code from AA to ZU**

- If the disc does not have a subtitle in the selected language, the disc's default language will be used.
- For details about language codes, see "Appendix B: Table of languages and their abbreviations" on page 30.
- You cannot change the setting during playback.

### ON SCREEN LANGUAGE

You can select the on-screen display language of the unit.

##### Setting options

**ENGLISH, SPANISH, FRENCH**

- Some on-screen messages are shown in English regardless of the setting.
- You cannot change the on-screen language shown on the MP3 display.

### PICTURE menu

#### MONITOR TYPE


You can select the monitor type to match your TV when you play back DVD VIDEO discs recorded for wide-screen televisions.

##### Setting options

**16:9 NORMAL, 16:9 AUTO, 4:3 LB, 4:3 PS**

**[16:9 NORMAL] (Wide television screen):** select when you connect the unit to a wide-screen (16:9) TV whose aspect ratio is fixed to 16:9 (the unit automatically adjusts the screen width of the output signal correctly when playing back a 4:3 source).

If you play a 4:3 DVD VIDEO source using the [16:9 NORMAL] mode, the picture character changes slightly due to the process for converting the picture width.

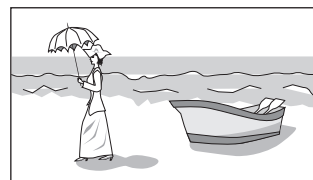

**[16:9 AUTO] (Wide television screen):** select when you connect the unit to a wide-screen (16:9) TV.

**[4:3 LB] (Letter Box conversion):** select when you connect the unit to a normal (4:3) TV.


When playing back a DVD VIDEO disc recorded in wide picture format, the picture is shown with black bars at the top and bottom.



**[4:3 PS] (Pan Scan conversion):** select when you connect the unit to a normal (4:3) TV.

When playing back a DVD VIDEO disc recorded in wide picture format, the picture is zoomed to fill the screen vertically, and the left and right sides of the image are chopped off.

Note, however, that the picture will be shown in the 4:3 LB mode even if you select the 4:3 PS mode depending on the disc.

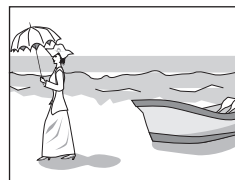

#### PICTURE SOURCE

This mode selects whether the content on the disc is processed by field (video source) or by frame (film source). You can obtain optimal picture quality according to the source type to be played back by selecting an appropriate option.

##### Setting options

**AUTO, FILM, VIDEO(NORMAL), VIDEO(ACTIVE)**

**[AUTO]:** select when playing back a disc containing both video and film source materials.

The unit recognizes the picture type (film or video source) of the current disc according to the disc information. Normally, select this option.

**[FILM]:** select when playing back a film source disc.

**[VIDEO(NORMAL)]:** select when playing back a video source disc with relatively a few movements.

**[VIDEO(ACTIVE)]:** select when playing back a video source disc with relatively a lot of movements.

#### SCREEN SAVER

You can set the screen saver function to ON or OFF. (See page 10.)

##### Setting options

**ON, OFF**

## AUDIO menu

### DIGITAL AUDIO OUTPUT

To connect the unit's digital output to an external device equipped with a digital input, this item must be set correctly. See "Appendix C: Digital output signal chart" on page 30 for details about the relation between the setting and output signals.

#### Setting options

##### PCM ONLY, DOLBY DIGITAL/PCM, STREAM/PCM

**[PCM ONLY]:** select when you connect the DIGITAL OUT jack of the unit to the linear PCM digital input of other audio equipment.

**[DOLBY DIGITAL/PCM]:** select when you connect the digital input of a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

When this option is selected, playing back a disc recorded by the MPEG Multichannel format outputs a linear PCM digital signal.

**[STREAM/PCM]:** select when you connect the digital input of an amplifier with a built-in DTS, MPEG Multichannel or Dolby Digital decoder, or the stand-alone unit of such a decoder.

- With some DVD VIDEO discs that are not fully copy-protected, a 20 or 24 bit digital signal may be output.
- A signal recorded with the 96 kHz or higher sampling frequency is output from the DIGITAL OUT jack with the 48 kHz sampling frequency.
- The unit does not provide the DTS decoding function.
- When playing a DVD VIDEO or Audio CD disc with DTS, use a DTS decoder to get correct signals from your speakers.
- DTS-encoded signal is output only from the unit's DIGITAL OUT jacks.
- If the unit is not connected to audio equipment with a DTS decoder, DTS-encoded signal output from the DIGITAL OUT jacks is distorted.

### ANALOG DOWN MIX

To correctly play the audio on a DVD VIDEO disc recorded with surround multichannel audio, you must set this item properly according to your audio system configuration. (This function does not work when the 3D PHONIC function is activated.)

#### Setting options

##### DOLBY SURROUND, STEREO

**[DOLBY SURROUND]:** select when listening to multichannel surround audio with the unit's analog AUDIO OUT terminals connected to a surround decoder.

**[STEREO]:** select when listening to conventional two-channel stereo audio with the unit's AUDIO OUT terminals connected to a stereo amplifier/receiver or television set, or in case you want to record the audio from a DVD VIDEO disc to MiniDisc, cassette, etc.

### D. RANGE CONTROL

This setting provides optimal audio quality from the analog AUDIO OUT terminals for listening to DVD VIDEO discs recorded in Dolby Digital format, at low or middle volume.

#### Setting options

##### WIDE RANGE, NORMAL, TV MODE

**[WIDE RANGE]:** when selected, audio is played back with the widest dynamic range so that you can enjoy powerful playback sound.

**[NORMAL]:** normally, select this option.

**[TV MODE]:** select if DVD VIDEO disc sound level is lower than TV program sound level. Thus you can hear sound at a lower volume clearly.

## OUTPUT LEVEL

This setting allows you to attenuate the level of the signal output from the unit's analog AUDIO OUT terminals.

#### Setting options

##### STANDARD, LOW

- If the sound output from the speaker is distorted, select [LOW].

## OTHERS menu

### RESUME

You can select the resume playback mode.

See pages 8 and 9 for details about the resume playback function.

#### Setting options

##### ON, OFF, DISC RESUME

**[ON]:** when selected, the unit can resume playback of the disc from the position where playback was last interrupted, if the disc is still in the disc tray.

**[OFF]:** when selected, the resume function is deactivated.

**[DISC RESUME]:** when selected, the unit can resume playback of the last 30 discs played. The unit retains a memory of the interrupted positions of the last 30 discs played, even though they have been removed from the disc tray.

### ON SCREEN GUIDE

The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.

Example of "on-screen guide" icons: 

#### Setting options

##### ON, OFF

**[ON]:** when selected, the on-screen guide is activated.

### AUTO STANDBY


When the unit is stopped for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.

#### Setting options


##### 60, 30, OFF

### PARENTAL LOCK

When this option is selected, pressing ENTER on the remote control unit brings up the PARENTAL LOCK display shown below. This allows you to restrict children from playing DVD VIDEO discs.

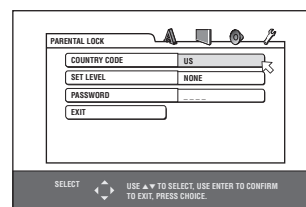

- See page 24 for details about the parental lock setting.

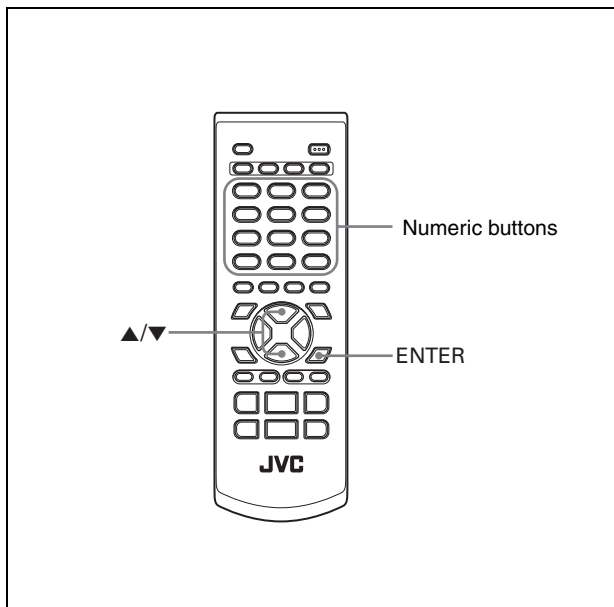

## Limiting playback by children


This function restricts playback of DVD VIDEO discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes.

## To set Parental Lock for the first time



- 1 Bring up the OTHERS menu.
- 2 Press  $\blacktriangle/\blacktriangledown$  to move  $\curvearrowright$  to select [PARENTAL LOCK] then press ENTER.

The Parental Lock on-screen display appears on the TV screen.

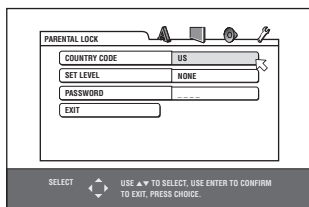


- 3 While  $\curvearrowright$  is pointing to [COUNTRY CODE], press ENTER to bring up the pull-down menu.

## 4 Press $\blacktriangle/\blacktriangledown$ to select the country code.

Select the code of the country whose standards were used to rate the DVD VIDEO disc content.

See "Appendix A: Country/Area code list for Parental Lock" on page 29.

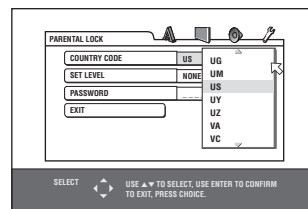


## 5 Press ENTER.

$\curvearrowright$  moves to [SET LEVEL].

## 6 Press ENTER to bring up the pull-down menu.

In the pull-down menu, [NONE] and levels [8] to [1] are available.


[NONE] does not restrict playback. Level [1] is the strictest level. Discs rated higher than the selected level are restricted.

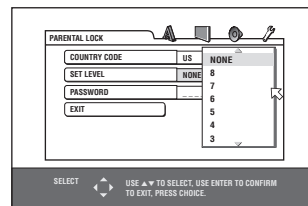

## 7 Press $\blacktriangle/\blacktriangledown$ to select a desired parental lock level, then press ENTER.

$\curvearrowright$  moves to [PASSWORD].

## 8 Press the numeric buttons (0 to 9) to enter a 4-digit password.

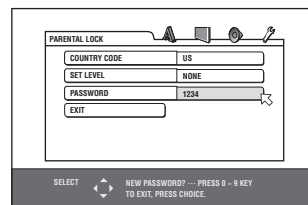

## 9 Press ENTER.

The parental lock feature is set.

$\curvearrowright$  moves to [EXIT]. Pressing ENTER again returns to the [OTHERS] menu of the preference display.

### Hint

If you want to change the password at step 8, do it before pressing ENTER.

## To change the settings



You can change the parental lock settings later.

- 1 Bring up the OTHERS menu.**
- 2 Press ▲/▼ to move  to select [PARENTAL LOCK] and press ENTER.**

The parental lock on-screen display appears on the TV screen.

- 3 While  is pointing to [PASSWORD], press the numeric buttons to enter your current 4-digit password then press ENTER.**

 moves to [COUNTRY CODE] if you enter the correct password.

If you enter a wrong password, "WRONG! RETRY..." appears on the TV screen, and you cannot go to the next step.

If you forget your password, enter "8888." The current password is deleted and you can set a new password.

- 4 To change the [COUNTRY CODE] or [SET LEVEL], press ENTER to bring up the associated pull-down menu when  is pointing to the desired item.**

- 5 Press ▲/▼ to select the desired option then press ENTER.**

If you change the country code, you must reselect the parental lock level.

- 6 While  is pointing to [PASSWORD], press the numeric buttons to enter a 4-digit password.**

The password entered in this step becomes the new password. If you want to keep the same password as before, enter the same password.

- 7 Press ENTER.**

 moves to [EXIT]. Pressing ENTER again returns to the [OTHERS] menu of the preference display.

### NOTE

If you enter the wrong password more than 3 times in step 3 above,  moves to [EXIT] automatically and ▲/▼ do not work.


## To temporarily release the Parental Lock



If the parental level is set to a strict value, some discs may not play at all.

When you insert such a disc and try to play it, the following parental lock on-screen display appears on the TV screen, asking you whether you want the parental lock to be temporarily released or not.

- 1 Press ▲/▼ to move  to [TEMPORARY RELEASE], then press ENTER.**

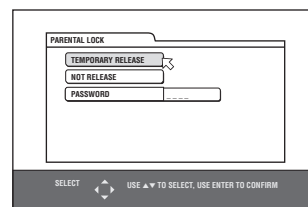

- 2 Press the numeric buttons (0 to 9) to enter your 4-digit password.**

The Parental Lock is released, and the unit starts playback.

If you enter a wrong password, "WRONG! RETRY..." appears on the TV screen. Enter the correct password.


### NOTE

When you enter the wrong password 3 times at step 2 above,  moves to [NOT RELEASE] automatically and ▲/▼ do not work.

# Additional information


## Names of parts and controls

### Front panel

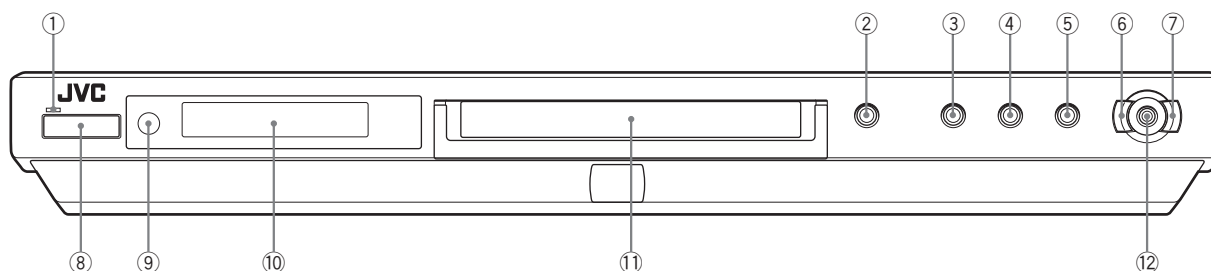


- ① STANDBY indicator (6)
- ② ▲ button (7)
- ③ ■ button (7, 8)
- ④ ► button (7, 9)
- ⑤ || button (8, 9)
- ⑥ ◀ button (9, 10)
- ⑦ ► button (9, 10)
- ⑧ ⏻/I STANDBY/ON button (6)
- ⑨ Remote sensor (5)
- ⑩ Display window (see the illustration below)
- ⑪ Disc tray (7)
- ⑫ QUICK PLAYBACK button (9)

### Display window

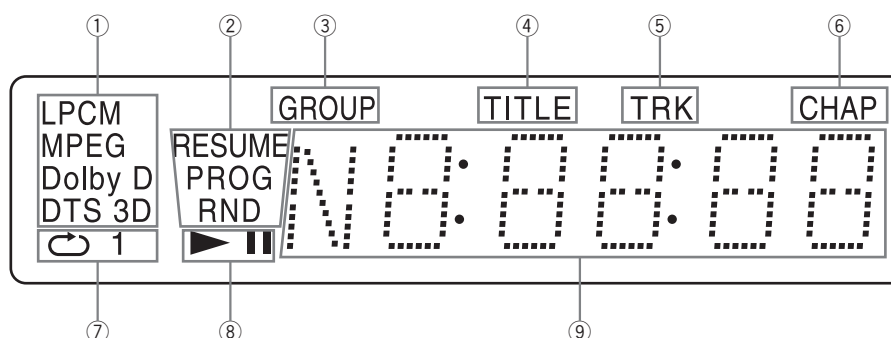

- ① Audio format indicators
- ② Resume/Program/Random indicators
- ③ Group indicator
- ④ Title indicator
- ⑤ Track indicator
- ⑥ Chapter indicator
- ⑦ Repeat mode indicator
- ⑧ ►(play) / ||(pause) indicators
- ⑨ Multi-information window

## Remote control unit

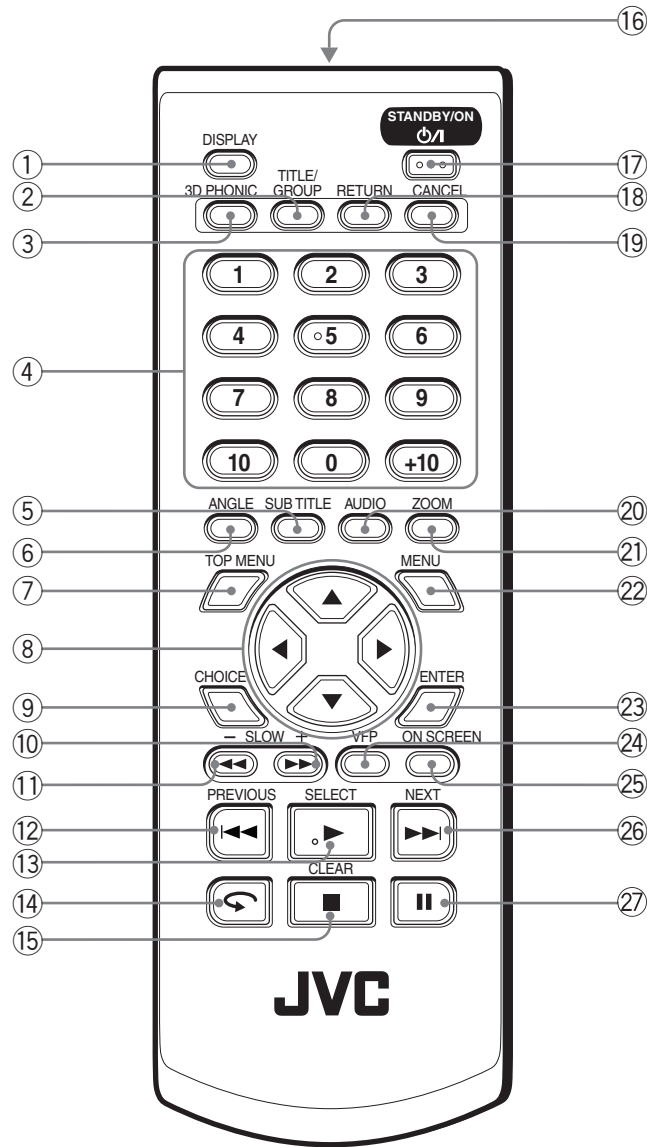

- ① DISPLAY button (8)
- ② TITLE/GROUP button (11, 20)
- ③ 3D PHONIC button (17)
- ④ Numeric buttons
- ⑤ SUBTITLE button (15)
- ⑥ ANGLE button (15)
- ⑦ TOP MENU button (7, 11)
- ⑧ Cursor selection (▲ Up, ▼ Down, ◀ Left, ▶ Right) buttons
- ⑨ CHOICE button (7, 21)
- ⑩ ►►/SLOW + button (9)
- ⑪ ◀◀/SLOW - button (9)
- ⑫ ◀◀/PREVIOUS button (9, 10, 11, 19)
- ⑬ ►/SELECT button (7, 9, 11, 13, 19)
- ⑭ ↺ button (10)
- ⑮ ■/CLEAR button (7, 8, 13, 20)

- ⑯ Infrared signal window (5)
- ⑰ STANDBY/ON ⏻/I button (6)
- ⑱ RETURN button (11)
- ⑲ CANCEL button (13)
- ⑳ AUDIO button (15)
- ㉑ ZOOM button (16)
- ㉒ MENU button (11)
- ㉓ ENTER button
- ㉔ VFP button (16)
- ㉕ ON SCREEN button (8, 12, 14, 17, 20)
- ㉖ ►►/NEXT button (9, 10, 11, 19)
- ㉗ || button (8, 9)

## Troubleshooting

### Power

**Power does not come on.**

- ➔ Power plug is not inserted securely. Plug in securely.

### Operation

**“REGION CODE ERROR!” is shown on the TV screen.**

- ➔ Region code of the inserted disc does not match the unit.  
Check the region code of the disc printed on the disc jacket.

**Operation is not possible.**

- ➔ Microcomputer malfunction due to lightning or static electricity.  
Turn off the power and unplug the power cord, then connect the power cord again.
- ➔ Moisture condensation caused by a sudden change of temperature or humidity. Turn off the power, then turn it on a few hours later.
- ➔ The disc does not allow the operation, or an unplayable disc is inserted. Check and replace the disc (see page 2).

**[LOCK] is displayed on the display window and the disc tray does not open.**

- ➔ When you press **▲** while pressing down **■** on the unit in standby mode, the tray lock function is activated. The disc tray cannot be opened or closed in this status. To release this status, press **▲** while pressing down **■** on the unit in standby mode.

### Picture

**Picture is noisy.**

- ➔ The unit is connected to a VCR directly and the copyguard function is activated. Connect the unit so that the picture signal flows directly to the TV.

**Picture is distorted when using COMPONENT VIDEO OUT or S-VIDEO output jack(s).**

- ➔ Both the component connection and S-video connection are made. Disconnect the unused one.

### Audio

**DVD VIDEO disc playback sound level is lower than TV broadcast sound level.**

- ➔ Set the [D.RANGE CONTROL] preference to [TV MODE] (see page 23).

**Analog audio output is distorted.**

- ➔ Set the [OUTPUT LEVEL] preference to [LOW] (see page 23).

**Sound is abnormal when DTS-encoded source is played back.**

- ➔ Connect audio equipment with a built-in DTS decoder to the unit.
- ➔ Play back a source other than DTS-encoded one.

### MP3

**No sound comes out.**

- ➔ MP3 disc is recorded with the “packet writing.” It cannot be played.

**Files (tracks) are not played in the recorded order.**

- ➔ This unit plays the files in the alphabetic order. So, the playback order can vary.

## Specifications

Specifications and appearance are subject to change without prior notice.

### General

|                |                                                                                                                                                                       |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Readable discs | DVD VIDEO, DVD-R (Video format), DVD-RW (Video format), +RW (Video format), SVCD, Video CD, Audio CD (CD-DA), MP3 format, CD-R/RW (CD-DA, SVCD, Video CD, MP3 format) |
| Video format   | NTSC                                                                                                                                                                  |

### Other

|                        |                                                                                                             |
|------------------------|-------------------------------------------------------------------------------------------------------------|
| Power requirements     | AC 120 V ~, 60 Hz                                                                                           |
| Power consumption      | 10.4 W (POWER ON), 0.7 W (STANDBY mode)                                                                     |
| Mass                   | 2.1 kg (4.7 lbs)                                                                                            |
| Dimensions (W × H × D) | 435 mm × 53 mm × 248.4 mm<br>(17 <sup>-3/16</sup> inch × 2 <sup>-1/8</sup> inch × 9 <sup>-13/16</sup> inch) |

### Video outputs

|                       |                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------|
| COMPONENT (pin jacks) | Y Output: 1.0 Vp-p (75 Ω)<br>P <sub>B</sub> /P <sub>R</sub> Output: 0.7 Vp-p (75 Ω) |
| VIDEO OUT (pin jack)  | 1.0 Vp-p (75 Ω)                                                                     |
| S-VIDEO OUT (S jack)  | Y Output: 1.0 Vp-p (75 Ω)<br>C Output: 286 mVp-p (75 Ω)                             |
| Horizontal resolution | 500 lines or more                                                                   |

### Audio outputs

|                       |                             |
|-----------------------|-----------------------------|
| ANALOG OUT (pin jack) | 2.0 Vrms (10 kΩ)            |
| DIGITAL OUT (COAXIAL) | 0.5 Vp-p (75 Ω termination) |
| DIGITAL OUT (OPTICAL) | -21 dBm to -15 dBm (peak)   |

### Audio characteristics

|                           |                                                                                                                                                                                                                                 |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Frequency response        | CD (sampling frequency 44.1 kHz):<br>2 Hz to 20 kHz<br>DVD (sampling frequency 48 kHz):<br>2 Hz to 22 kHz<br>(4 Hz to 20 kHz for DTS and Dolby Digital bitstream signals)<br>DVD (sampling frequency 96 kHz):<br>2 Hz to 44 kHz |
| Dynamic range             | 16 bit: More than 98 dB<br>20 bit: More than 100 dB<br>24 bit: More than 100 dB                                                                                                                                                 |
| Wow and flutter           | Unmeasurable (less than + 0.002%)                                                                                                                                                                                               |
| Total harmonic distortion | less than 0.006%                                                                                                                                                                                                                |

- Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license from Digital Theater Systems, Inc. “DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

## Appendix A: Country/Area code list for Parental Lock

(for page 24)

|    |                          |
|----|--------------------------|
| AD | Andorra                  |
| AE | United Arab Emirates     |
| AF | Afghanistan              |
| AG | Antigua and Barbuda      |
| AI | Anguilla                 |
| AL | Albania                  |
| AM | Armenia                  |
| AN | Netherlands Antilles     |
| AO | Angola                   |
| AQ | Antarctica               |
| AR | Argentina                |
| AS | American Samoa           |
| AT | Austria                  |
| AU | Australia                |
| AW | Aruba                    |
| AZ | Azerbaijan               |
| BA | Bosnia and Herzegovina   |
| BB | Barbados                 |
| BD | Bangladesh               |
| BE | Belgium                  |
| BF | Burkina Faso             |
| BG | Bulgaria                 |
| BH | Bahrain                  |
| BI | Burundi                  |
| BJ | Benin                    |
| BM | Bermuda                  |
| BN | Brunei Darussalam        |
| BO | Bolivia                  |
| BR | Brazil                   |
| BS | Bahamas                  |
| BT | Bhutan                   |
| BV | Bouvet Island            |
| BW | Botswana                 |
| BY | Belarus                  |
| BZ | Belize                   |
| CA | Canada                   |
| CC | Cocos (Keeling) Islands  |
| CF | Central African Republic |
| CG | Congo                    |
| CH | Switzerland              |
| CI | Côte d'Ivoire            |
| CK | Cook Islands             |
| CL | Chile                    |
| CM | Cameroon                 |
| CN | China                    |
| CO | Colombia                 |
| CR | Costa Rica               |
| CU | Cuba                     |
| CV | Cape Verde               |
| CX | Christmas Island         |
| CY | Cyprus                   |
| CZ | Czech Republic           |
| DE | Germany                  |
| DJ | Djibouti                 |
| DK | Denmark                  |
| DM | Dominica                 |
| DO | Dominican Republic       |
| DZ | Algeria                  |
| EC | Ecuador                  |
| EE | Estonia                  |
| EG | Egypt                    |
| EH | Western Sahara           |
| ER | Eritrea                  |

|    |                                        |
|----|----------------------------------------|
| ES | Spain                                  |
| ET | Ethiopia                               |
| FI | Finland                                |
| FJ | Fiji                                   |
| FK | Falkland Islands                       |
| FM | Micronesia (Federated States of)       |
| FO | Faroe Islands                          |
| FR | France                                 |
| FX | France, Metropolitan                   |
| GA | Gabon                                  |
| GB | United Kingdom                         |
| GD | Grenada                                |
| GE | Georgia                                |
| GF | French Guiana                          |
| GH | Ghana                                  |
| GI | Gibraltar                              |
| GL | Greenland                              |
| GM | Gambia                                 |
| GN | Guinea                                 |
| GP | Guadeloupe                             |
| GQ | Equatorial Guinea                      |
| GR | Greece                                 |
| GS | South Georgia and the South Sandwich   |
| GT | Guatemala                              |
| GU | Guam                                   |
| GW | Guinea-Bissau                          |
| GY | Guyana                                 |
| HK | Hong Kong                              |
| HM | Heard Island and McDonald Islands      |
| HN | Honduras                               |
| HR | Croatia                                |
| HT | Haiti                                  |
| HU | Hungary                                |
| ID | Indonesia                              |
| IE | Ireland                                |
| IL | Israel                                 |
| IN | India                                  |
| IO | British Indian Ocean Territory         |
| IQ | Iraq                                   |
| IR | Iran (Islamic Republic of)             |
| IS | Iceland                                |
| IT | Italy                                  |
| JM | Jamaica                                |
| JO | Jordan                                 |
| JP | Japan                                  |
| KE | Kenya                                  |
| KG | Kyrgyzstan                             |
| KH | Cambodia                               |
| KI | Kiribati                               |
| KM | Comoros                                |
| KN | Saint Kitts and Nevis                  |
| KP | Korea, Democratic People's Republic of |
| KR | Korea, Republic of                     |
| KW | Kuwait                                 |
| KY | Cayman Islands                         |
| KZ | Kazakhstan                             |
| LA | Lao People's Democratic Republic       |
| LB | Lebanon                                |

|    |                           |
|----|---------------------------|
| LC | Saint Lucia               |
| LI | Liechtenstein             |
| LK | Sri Lanka                 |
| LR | Liberia                   |
| LS | Lesotho                   |
| LT | Lithuania                 |
| LU | Luxembourg                |
| LV | Latvia                    |
| LY | Libyan Arab Jamahiriya    |
| MA | Morocco                   |
| MC | Monaco                    |
| MD | Moldova, Republic of      |
| MG | Madagascar                |
| MH | Marshall Islands          |
| ML | Mali                      |
| MM | Myanmar                   |
| MN | Mongolia                  |
| MO | Macau                     |
| MP | Northern Mariana Islands  |
| MQ | Martinique                |
| MR | Mauritania                |
| MS | Montserrat                |
| MT | Malta                     |
| MU | Mauritius                 |
| MV | Maldives                  |
| MW | Malawi                    |
| MX | Mexico                    |
| MY | Malaysia                  |
| MZ | Mozambique                |
| NA | Namibia                   |
| NC | New Caledonia             |
| NE | Niger                     |
| NF | Norfolk Island            |
| NG | Nigeria                   |
| NI | Nicaragua                 |
| NL | Netherlands               |
| NO | Norway                    |
| NP | Nepal                     |
| NR | Nauru                     |
| NU | Niue                      |
| NZ | New Zealand               |
| OM | Oman                      |
| PA | Panama                    |
| PE | Peru                      |
| PF | French Polynesia          |
| PG | Papua New Guinea          |
| PH | Philippines               |
| PK | Pakistan                  |
| PL | Poland                    |
| PM | Saint Pierre and Miquelon |
| PN | Pitcairn                  |
| PR | Puerto Rico               |
| PT | Portugal                  |
| PW | Palau                     |
| PY | Paraguay                  |
| QA | Qatar                     |
| RE | Réunion                   |
| RO | Romania                   |
| RU | Russian Federation        |
| RW | Rwanda                    |
| SA | Saudi Arabia              |
| SB | Solomon Islands           |
| SC | Seychelles                |

|    |                                      |
|----|--------------------------------------|
| SD | Sudan                                |
| SE | Sweden                               |
| SG | Singapore                            |
| SH | Saint Helena                         |
| SI | Slovenia                             |
| SJ | Svalbard and Jan Mayen               |
| SK | Slovakia                             |
| SL | Sierra Leone                         |
| SM | San Marino                           |
| SN | Senegal                              |
| SO | Somalia                              |
| SR | Suriname                             |
| ST | Sao Tome and Principe                |
| SV | El Salvador                          |
| SY | Syrian Arab Republic                 |
| SZ | Swaziland                            |
| TC | Turks and Caicos Islands             |
| TD | Chad                                 |
| TF | French Southern Territories          |
| TG | Togo                                 |
| TH | Thailand                             |
| TJ | Tajikistan                           |
| TK | Tokelau                              |
| TM | Turkmenistan                         |
| TN | Tunisia                              |
| TO | Tonga                                |
| TP | East Timor                           |
| TR | Turkey                               |
| TT | Trinidad and Tobago                  |
| TV | Tuvalu                               |
| TW | Taiwan                               |
| TZ | Tanzania, United Republic of         |
| UA | Ukraine                              |
| UG | Uganda                               |
| UM | United States Minor Outlying Islands |
| US | United States                        |
| UY | Uruguay                              |
| UZ | Uzbekistan                           |
| VA | Vatican City State (Holy See)        |
| VC | Saint Vincent and the Grenadines     |
| VE | Venezuela                            |
| VG | Virgin Islands (British)             |
| VI | Virgin Islands (U.S.)                |
| VN | Vietnam                              |
| VU | Vanuatu                              |
| WF | Wallis and Futuna Islands            |
| WS | Samoa                                |
| YE | Yemen                                |
| YT | Mayotte                              |
| YU | Yugoslavia                           |
| ZA | South Africa                         |
| ZM | Zambia                               |
| ZR | Zaire                                |
| ZW | Zimbabwe                             |

## Appendix B: Table of languages and their abbreviations

(for pages 15 and 22)

|    |                 |    |              |    |                  |    |                |    |            |
|----|-----------------|----|--------------|----|------------------|----|----------------|----|------------|
| AA | Afar            | FA | Persian      | KM | Cambodian        | OM | (Afan) Oromo   | SU | Sundanese  |
| AB | Abkhazian       | FI | Finnish      | KN | Kannada          | OR | Oriya          | SV | Swedish    |
| AF | Afrikaans       | FJ | Fiji         | KO | Korean (KOR)     | PA | Panjabi        | SW | Swahili    |
| AM | Ameharic        | FO | Faroese      | KS | Kashmiri         | PL | Polish         | TA | Tamil      |
| AR | Arabic          | FY | Frisian      | KU | Kurdish          | PS | Pashto, Pushto | TE | Telugu     |
| AS | Assamese        | GA | Irish        | KY | Kirghiz          | PT | Portuguese     | TG | Tajik      |
| AY | Aymara          | GD | Scots Gaelic | LA | Latin            | QU | Quechua        | TH | Thai       |
| AZ | Azerbaijani     | GL | Galician     | LN | Lingala          | RM | Rhaeto-Romance | TI | Tigrinya   |
| BA | Bashkir         | GN | Guarani      | LO | Laothian         | RN | Kirundi        | TK | Turkmen    |
| BE | Byelorussian    | GU | Gujarati     | LT | Lithuanian       | RO | Rumanian       | TL | Tagalog    |
| BG | Bulgarian       | HA | Hausa        | LV | Latvian, Lettish | RU | Russian        | TN | Setswana   |
| BH | Bihari          | HI | Hindi        | MG | Malagasy         | RW | Kinyarwanda    | TO | Tongan     |
| BI | Bislama         | HR | Croatian     | MI | Maori            | SA | Sanskrit       | TR | Turkish    |
| BN | Bengali, Bangla | HU | Hungarian    | MK | Macedonian       | SD | Sindhi         | TS | Tsonga     |
| BO | Tibetan         | HY | Armenian     | ML | Malayalam        | SG | Sangho         | TT | Tatar      |
| BR | Breton          | IA | Interlingua  | MN | Mongolian        | SH | Serbo-Croatian | TW | Twí        |
| CA | Catalan         | IE | Interlingue  | MO | Moldavian        | SI | Singhalese     | UK | Ukrainian  |
| CO | Corsican        | IK | Inupiak      | MR | Marathi          | SK | Slovak         | UR | Urdu       |
| CS | Czech           | IN | Indonesian   | MS | Malay (MAY)      | SL | Slovenian      | UZ | Uzbek      |
| CY | Welsh           | IS | Icelandic    | MT | Maltese          | SM | Samoan         | VI | Vietnamese |
| DA | Danish          | IW | Hebrew       | MY | Burmese          | SN | Shona          | VO | Volapuk    |
| DZ | Bhutani         | JI | Yiddish      | NA | Nauru            | SO | Somali         | WO | Wolof      |
| EL | Greek           | JW | Javanese     | NE | Nepali           | SQ | Albanian       | XH | Xhosa      |
| EO | Esperanto       | KA | Georgian     | NL | Dutch            | SR | Serbian        | YO | Yoruba     |
| ET | Estonian        | KK | Kazakh       | NO | Norwegian        | SS | Siswati        | ZU | Zulu       |
| EU | Basque          | KL | Greenlandic  | OC | Occitan          | ST | Sesotho        |    |            |

## Appendix C: Digital output signal chart

(for page 23)

| Disc type                                     | Output                                            |                         |                |
|-----------------------------------------------|---------------------------------------------------|-------------------------|----------------|
|                                               | PCM ONLY                                          | DOLBY DIGITAL/PCM       | STREAM/PCM     |
| DVD with 48/44.1 kHz, 16/20/24 bit linear PCM | 48/44.1 kHz, 16 bit, stereo linear PCM            |                         |                |
| DVD with 96 kHz, 16/22/24 bit linear PCM      | 48 kHz, 16 bit, stereo linear PCM (Down sampling) |                         |                |
| DVD with DTS                                  | No output                                         |                         | DTS bitstream  |
| DVD with Dolby Digital                        | 48 kHz, 16 bit, stereo linear PCM                 | Dolby Digital bitstream |                |
| DVD with MPEG Multichannel                    | 48 kHz, 16 bit, stereo linear PCM                 |                         | MPEG bitstream |
| SVCD/Video CD/Audio CD                        | 44.1 kHz, 16 bit, stereo linear PCM               |                         |                |
| Audio CD with DTS                             | No output                                         |                         | DTS bitstream  |
| CD-R/RW with MP3                              | Linear PCM                                        |                         |                |

## Appendix D: Glossary

### Aspect ratio

A ratio which defines the shape of the rectangular picture in a TV. It is the width of the picture relative to the height. A conventional TV picture is 4:3 in aspect ratio.

### Bitstream

The digital form of multichannel audio data (e.g., 5.1-channel) before it is decoded into its various channels.

### Chapter/title

Chapter is the smallest division and title is the largest division on DVD VIDEO. A chapter is a division of a title and similar to a track for Video CD or Audio CD.

### Component video

Video signals with three channels of separate information that makes up the picture. There are some types of component video, such as R/G/B and Y/C<sub>B</sub>(P<sub>B</sub>)/C<sub>R</sub>(P<sub>R</sub>).

### Composite video

A single video signal commonly used in most consumer video products that contains all luminance, color, and synchronization information.

### Dolby Digital (AC3)

A six-channel system consisting of left, center, right, left rear, right rear and LFE (Low-Frequency Effect channel, for use with a sub-woofer) channels. All processing is done in the digital domain. Not all Dolby Digital discs contain six (5.1) channels of information.

### Dolby Surround/Dolby Pro Logic

Dolby Surround records four channels of front and rear audio in two channels in a way that allows a decoder to recover the original four channels for playback. Because the audio is recorded in two channels, it can be played back naturally by a two-channel stereo system.

Dolby Pro Logic introduces directional circuits in decoder-side processing (increasing the level of specific channels and lowering the level of silent channels) for greater spatial perspective, and adds a center speaker used primarily for dialog. The result is enhanced channel separation.

### Down-mix

Internal stereo mix of multichannel surround audio by a DVD player. The down-mix signals are output from analog AUDIO OUT connectors.

### DTS

A Digital Surround audio encoding format configured with six (5.1) channels, similar to Dolby Digital. It requires a decoder, either in the player or in an external receiver. DTS stands for Digital Theater Systems.

Not all DTS discs contain six (5.1) channels of information.

### Dynamic range

The difference between the loudest and softest sounds.

### Linear PCM audio

PCM stands for "pulse code modulation." Linear PCM is the usual method for digitally encoding audio without compression, and is used for the audio tracks on DVD VIDEO discs, Audio CDs, etc.

### MP3

MP3 is an audio data compression format, which stands for MPEG-1 Audio Layer 3. Using MP3, you can achieve a data reduction of about 1:10.

### NTSC (National television system committee)

A black and white and color television system format used in the U.S.A., Canada, Mexico and Japan.

### PAL (Phase Alternation by Line)

A color television system format used extensively in Western Europe.

### PBC

PBC stands for "Playback control" and is a method of controlling disc play for Video CDs (VCD). You are able to interact with the disc through menus.

### S-video

A video signal which improves picture quality over standard composite connections. Used on Super VHS, DVD, high end TV monitors, etc.

### Track

The smallest division on SVCD, Video CD and Audio CD discs.



## LIMITED WARRANTY

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period")

|       |      |       |         |
|-------|------|-------|---------|
| PARTS | 1 YR | LABOR | 90 DAYS |
|-------|------|-------|---------|

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

### WHAT WE WILL DO:

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

### WHAT YOU MUST DO FOR WARRANTY SERVICE:

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800) 537-5722.

If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus a letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

### WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number or serial number has been altered, tampered with, defaced or removed;
2. Initial installation and installation and removal for repair;
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus (Needle) are covered for 90 days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA  
DIVISION OF JVC AMERICAS CORP.

1700 Valley Road  
Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

#### For customer use:

Enter below the Model No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. :

Serial No. :

Purchase data :

Name of dealer :

# Authorized Service Centers

---

QUALITY **JVC**<sup>®</sup> SERVICE  
*HOW TO LOCATE YOUR JVC SERVICE CENTER*  
**TOLL FREE: 1 (800) 537-5722**  
**<http://www.jvc.com>**

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **[www.JVC.com](http://www.JVC.com)**

Remember to retain your Bill of Sale for Warranty Service.

---

## **Do not service the television yourself**

---

### **Caution**

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

### **Accessories**

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **[www.JVC.com](http://www.JVC.com)**

---

