 


# JVC

 


## CD PORTABLE SYSTEM

# RD-T70BU RD-T50LB

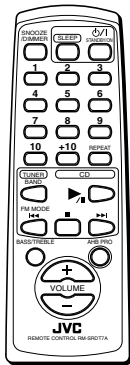

[RD-T70BU Only]

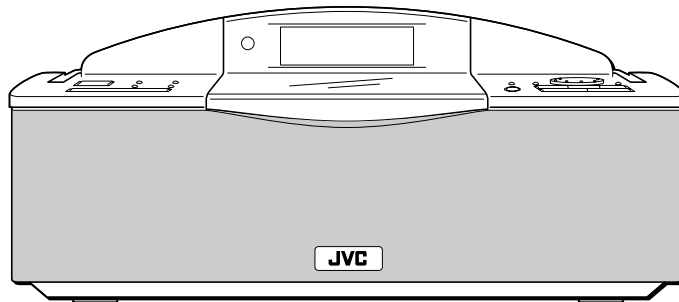

COMPACT  
**disc**  
DIGITAL AUDIO

## INSTRUCTIONS

**For Customer Use:**

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

LVT0931-001A

[J]

# Warnings, Cautions and Others / Mises en garde, précautions et indications diverses

(For U.S.A)



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### For Canada/pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**PRECAUTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

### For Canada/pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** Radiation laser invisible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

## CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

## ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

### Caution — POWER switch!

Disconnect the mains plug to shut the power off completely. The POWER switch in any position does not disconnect the mains line. The power can be remote controlled.

### Attention — Commutateur POWER!

Déconnecter la fiche de secteur pour couper complètement le courant. Le commutateur POWER ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

## CAUTION

1. Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
2. Do not place any naked flame sources, such as lighted candles, on the apparatus.
3. When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
4. Do not use this apparatus in a bathroom or places with water. Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this apparatus.

## ATTENTION

1. Ne bloquez pas les orifices ou les trous de ventilation. (Si les orifices ou les trous de ventilation sont bloqués par un journal ou un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
2. Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
3. Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et, les lois locales sur la mise au rebut des piles.
4. N'utilisez pas cet appareil dans une salle de bain ou un autre endroit avec de l'eau. Ne placez aucun récipient contenant de l'eau (tel que des cosmétiques ou des médicaments, un vase de fleurs, un pot de fleurs, une tasse, etc.) sur cet appareil.

Thank you for purchasing the JVC CD Portable System.  
 We hope it will be a valued addition to your home as well as to your outdoor life, giving you years of enjoyment.  
 Be sure to read this instruction manual carefully before operating your new stereo system.  
 In it you will find all the information you need to set up and use the system.  
 If you have a query that is not answered by the manual, please contact your dealer.

## Features

Here are some of the things that make your System both powerful and simple to use.

- The controls and operations have been redesigned to make them very easy to use, freeing you to just enjoy the music.
  - With JVC's **COMPU PLAY** you can turn on the System and automatically start the Radio, or CD Player with a single touch. (When power is supplied from AC)
- The System incorporates AHB (Active Hyper Bass) PRO circuitry to faithfully reproduce low frequency sounds. [RD-T70BU Only]
- A 45-station preset capability 30 FM and 15 AM in addition to auto-seek and manual tuning.
- A user-friendly timer lets you wake or fall asleep to music.
- The CD Player can play back a CD-R and CD-RW.



## How This Manual Is Organized

- Basic information that is the same for many different functions - e.g. setting the volume - is given in the section 'Common Operations', and not repeated under each function.
- The names of buttons/controls are written in all capital letters: e.g. TUNER BAND.
- If the button names on the Unit and the Remote Control are the same, the description on which the button is used will be omitted.
- System functions are written with an initial capital letter only: e.g. Normal Play.

Use the table of contents to look up specific information you require.

We've enjoyed making this manual for you, and hope it serves you in enjoying the many features built into your System.

## IMPORTANT CAUTIONS

### 1. Where to place the Unit

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C).
- Leave sufficient distance between the Unit and a TV.
- Do not use the Unit in a place subject to vibrations.

### 2. Power cord

- Do not handle the power cord with wet hands!
- Some power is always consumed as long as the power cord is connected to the wall outlet.
- When unplugging the Unit from the wall outlet, always pull the plug, not the power cord.

### 3. Malfunctions, etc.

- There are no user serviceable parts inside. In case of system failure, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the System.

- Carefully read "CAUTION" on page G-1.

# Table of Contents

Features .....	1	Specifications .....	12
How This Manual Is Organized .....	1		
IMPORTANT CAUTIONS .....	1		
<b>Getting Started</b> .....	<b>2</b>		
<b>Common Operations</b> .....	<b>3</b>		
<b>Using the Tuner</b> .....	<b>5</b>		
<b>Using the CD Player</b> .....	<b>7</b>		
<b>Using the Timers</b> .....	<b>9</b>		
<b>Care And Maintenance</b> .....	<b>11</b>		
<b>Troubleshooting</b> .....	<b>12</b>		

# Getting Started

## Accessories

Check that you have all of the following items, which are supplied with the System.

- Power Cord (1)
- Remote Control (1) [RD-T70BU Only]

 
If any of these items are missing, contact your dealer immediately.

## How To Put Batteries

### How To Put Batteries In the Unit


1. Open the battery cover on the back of the Unit by pulling it toward you while pressing the tabs as shown by the arrows.
2. Put 3 memory backup batteries R6P(SUM-3)/AA(15F) (not supplied) in the battery compartment in the order of "1" to "3".
3. Put 6 batteries R20/D (13F) (not supplied) in the battery compartment in the order of "1" to "6" as shown.
4. Securely close the battery cover.

**Note:** When you operate your Unit on mains (AC) power, the power source switches automatically from batteries to AC. However, you should remove the batteries when operating on AC power.

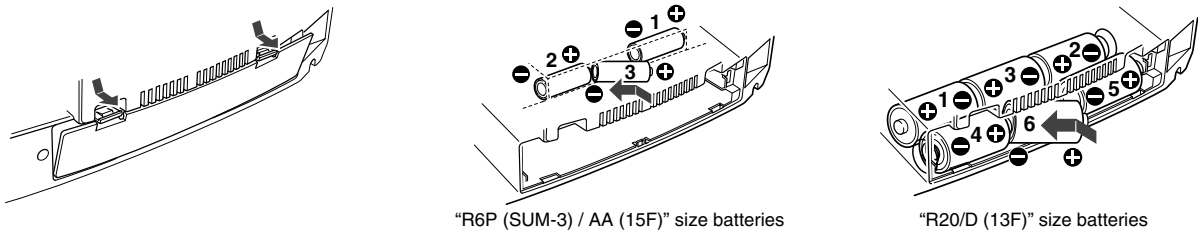

### How To Put Batteries In the Remote Control [RD-T70BU Only]

 Match the polarity (+ and -) on the batteries with the + and - markings in the battery compartment.

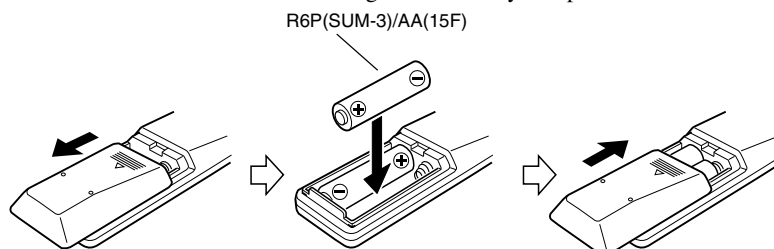

### CAUTION: Handle batteries properly.

To avoid battery leakage or explosion:

 
- Remove batteries when the Unit or the Remote Control will not be used for a long time.
- When you need to replace the batteries, replace batteries at the same time with new ones.
- Do not use an old battery with new ones.
- Do not use different types of batteries together.
- Do not try to recharge non-rechargeable batteries.

Dispose of batteries in the proper manner, according to federal, state, and local regulations.

## Using the Remote Control [RD-T70BU Only]

The Remote Control makes it easy to use many of the functions of the Unit from a distance of up to 7m (23 feet) away. You need to point the Remote Control at the remote sensor on the Unit's front panel.

**Note:** If you point the Remote Control from the slant direction, the above distance will be shortened.

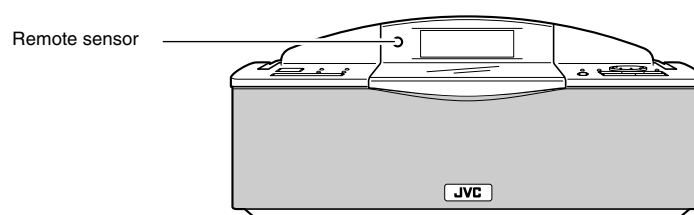


## Connecting the AC Power Cord

Firmly insert the AC power cord supplied with the System into the AC inlet on the back of the Unit.


### CAUTIONS:

- **ONLY USE THE JVC POWER CORD PROVIDED WITH THIS SYSTEM IN ORDER TO AVOID MALFUNCTION OR DAMAGE TO THE SYSTEM.**
- **BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE SYSTEM IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.**

 Plug the AC power cord into the wall outlet, and your System is at your command!

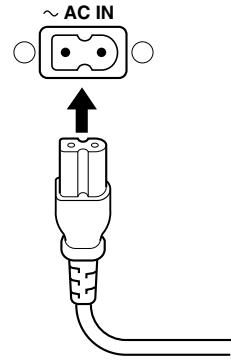


## Common Operations

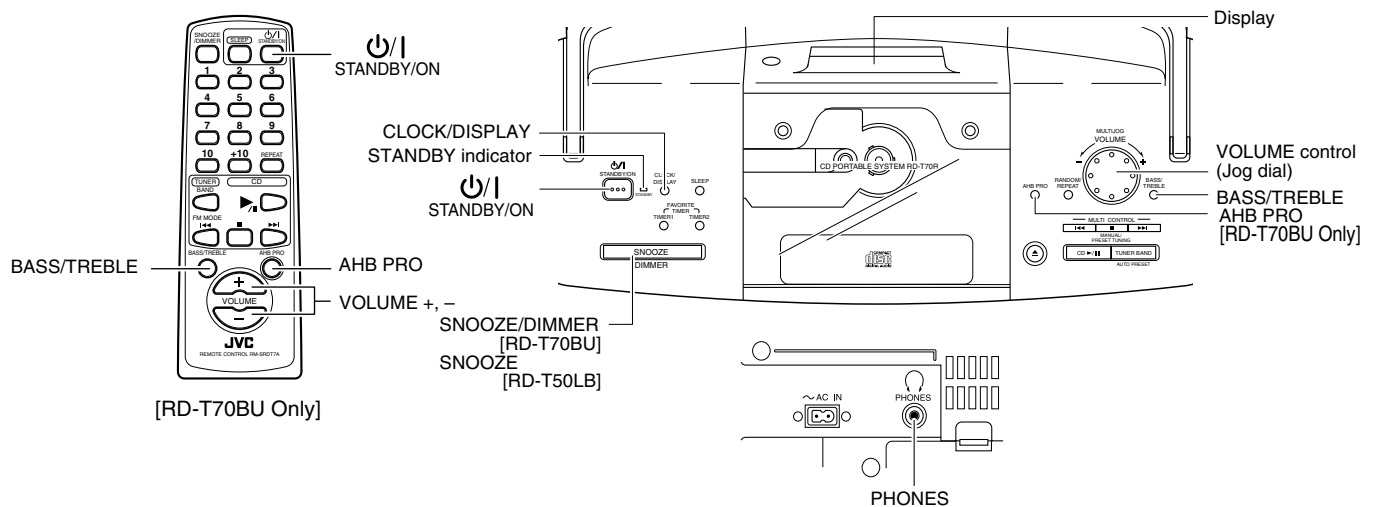 

## Turning the Power On and Standby

### Turning the Unit On

 Press the **STANDBY/ON** button.

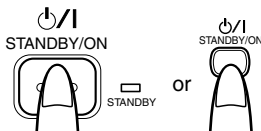

The STANDBY indicator goes out and the display come on, and "WELCOME" is displayed.

The Unit comes on ready to continue in the mode it was in when the power was last turned off.


- For example, if the last thing you were doing was listening to a CD, you are now ready to listen to a CD again. If you wish, you can change to another source.
- If you were listening to the Tuner last, the Tuner comes on playing the station it was last set to.

**Note:** When power is supplied from the batteries, the **STANDBY/ON** button on the Remote Control does not work.

### Turning the Unit Standby

 Press the **STANDBY/ON** button again.

When operating on AC power:

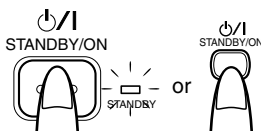

"GOOD BYE" is displayed and the display becomes blank, except for the clock display. The STANDBY indicator lights up.

- When in Standby mode, the Unit continues to a small amount of power to run the display.
- To switch off the Unit completely, unplug the AC power cord from the AC outlet.

### When power is supplied from the batteries:

When the Unit is turned off with the **STANDBY/ON** button on the Unit (the **STANDBY/ON** button on the Remote Control is ineffective), the display becomes blank and the STANDBY indicator lights up.

- To switch off the Unit completely, remove the batteries from the Unit.

 
## Adjusting the Volume

You can adjust the volume level between MIN (0) and MAX (32) when the Unit is turned on.

**Turn the VOLUME control on the Unit to the right or left to increase or decrease the volume level.**

OR

**Press the VOLUME + or - button on the Remote Control to increase or decrease the volume level.**



**CAUTION: DO NOT turn on the Unit and/or start playing any source without first setting the VOLUME control to MIN (0), as a sudden blast of sound can damage your hearing.**

### For private listening

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers.

Be sure to turn down the volume before connecting or putting on headphones.

## Reinforcing the Bass Sound (AHB PRO) [RD-T70BU Only]

You can reinforce the bass sound to maintain rich, full bass at low volume:

**To get the effect**, press the AHB (Active Hyper Bass) PRO button. The "BASS" indicator lights up on the display.

**To cancel the effect**, press the button again.

The "BASS" indicator goes out.

## Tone Control (BASS/TREBLE)

You can control the tone by changing the bass and treble.

### 1. Press the BASS/TREBLE button until "BASS" or "TREBLE" appears on the display.

Each time you press the button, the display changes as follows:

BASS → TREBLE → original display → (back to the beginning)

### 2. Turn the Jog dial on the Unit or press the VOLUME +/- button on the Remote Control to adjust the level.

The bass or treble level changes between -6 and +6. (0: Flat)

BASS -6 → BASS +6

TREBLE -6 → TREBLE +6

**To exit the tone control mode**, press the BASS/TREBLE button until the original display appears, or wait for 15 seconds.

**To forcibly reset the bass and treble levels to 0 (FLAT)**, press the BASS/TREBLE button for 2 seconds or more.

## Showing the Time (CLOCK/DISPLAY)

While listening to a CD or the radio, you can see the current time.

**To display the clock**, press the CLOCK/DISPLAY button on the Unit.

**To return to the original display**, press the same button until the original display appears.

**Note:** You need to set the clock first in order for it to work. (See "Setting the Clock" on page 9.)

## Adjusting the Brightness (DIMMER) [RD-T70BU Only]

### When operated on AC power

You can switch the brightness of the display's backlighting (full light and dimmed light). In addition, the dimmed backlighting brightness can be changed in 16 steps.

#### When the Unit is turned on:

Each time you press the SNOOZE/DIMMER button, the backlight fully turns on or dims.

#### When the Unit is turned off (Standby):

Each time you press the SNOOZE/DIMMER button, the backlight dims or turns off.

#### When the Sleep Timer is on:

You can also dim or turn off the backlight with the SNOOZE/DIMMER button.

### Adjusting the dimmer level:

(On the Unit only)

1. With the Unit turned on, press and hold the DIMMER button on the Unit until "DIMMER:XX" appears on the display.
2. Turn the Jog dial and adjust the dimmer level between 1 and 16.
3. Press the DIMMER button.

### When operated on batteries

When the Unit is turned on, you can turn on the backlighting of the display for a few seconds.

Each time you press the SNOOZE/DIMMER button, the backlight turns on for a few seconds.

## Using Batteries

### Power Batteries (6 pcs.):

You can operate the System on batteries. When the batteries are exhausted, "NO BATT" will appear on the display. In this case, replace with the new batteries.

 
### Memory Backup Batteries (3 pcs.):

Your settings such as the preset stations, clock and timer are backed up with this batteries.


### CAUTION:

**If memory backup batteries are exhausted or not installed, and the AC power cord is disconnected or there is a power failure, the settings you have made will be erased from memory in approx. half a day.**


# Using the Tuner

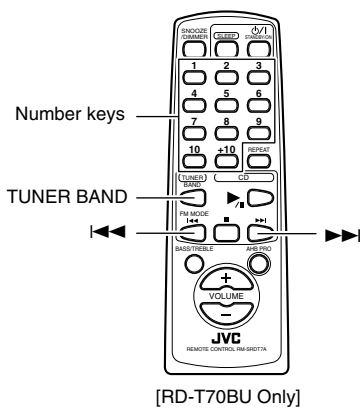

[RD-T70BU Only]

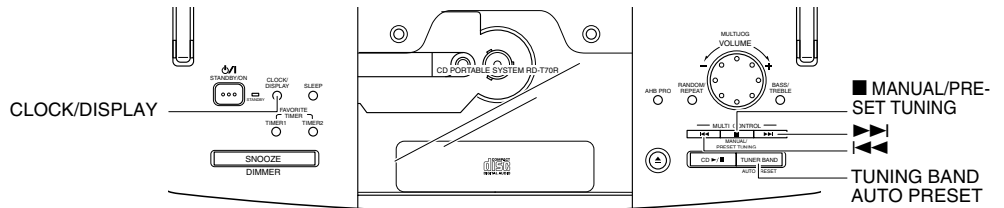 

 Band display, Frequency display, Preset channel




(Display when using the Tuner)

You can listen to FM and AM stations. Stations can be tuned in manually, automatically, or from preset memory storage.

## Setting the Antenna

 
### For FM reception:

Extend the built-in wire antenna to obtain the best reception.

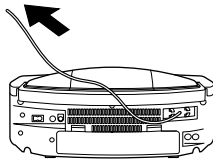

### For AM reception:

 Turn the Unit to obtain the best reception.



## One Touch Radio (AC power only)—

Just press the TUNER BAND button to turn on the Unit and start playing the station you were last tuned to.

- You can also switch from the CD Player to the radio by pressing the TUNER BAND button.

## Tuning In a Station

### 1. Press the TUNER BAND button.

The Band and Frequency you were last tuned to appear on the display.

 
Each time you press the button, the band changes as follows:



### 2. Press the ■ button on the Unit to select the tuning mode (Manual or Preset).

Each time you press the button, the tuning mode changes as follows:

MANUAL (Manual Tuning mode) ↔ PRESET (Preset Tuning mode)




### 3. Select a station using one of the following methods.

Note that the possible operation is limited by the Tuning mode you have selected in step 2.

#### ■ Manual Tuning (In Manual Tuning mode)

 Press the ◀◀ or ▶▶ button repeatedly to move from frequency to frequency until you find the station you want.



OR

#### ■ Auto Tuning (In Manual Tuning mode)

If you press and hold the ◀◀ or ▶▶ button for one second or more, the frequency changes down, or up, automatically until a station is found.

OR

#### ■ Preset Tuning using the Unit (Possible only after pre-setting stations) (In Preset Tuning mode)

Press the ◀◀ or ▶▶ button to select the preset station. After you have selected the preset number, the band and the frequency are displayed.

- Example: Press the ◀◀ or ▶▶ button until the preset number 12 "P- 12" appears.



OR

#### ■ Preset Tuning using the Remote Control (Possible only after pre-setting stations)

Select the station by entering its preset number on the number keys.

- Example: For channel 5, press 5. For channel 15, press +10 then 5. For channel 25, press +10 twice, then 5. For channel 30, press +10 twice, then 10.
- The band and the frequency are displayed.

 


## Presetting Stations

You can preset up to 30 FM stations and up to 15 AM stations into memory.

### Auto Presetting (Using the Unit) —

In each band, you can automatically preset FM-30, AM-15 stations. Preset numbers will be allocated as stations are found, starting from the station currently tuned to and moving up the frequency.

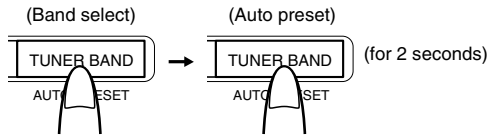

**1. Select a band (AM or FM) by pressing the TUNER BAND button.**

**2. Press the TUNER BAND button for more than 2 seconds.**

 
“AUTO” appears, and then auto presetting starts.

**3. Repeat steps 1-2 for the other band.**

■ If you want to change any of the auto preset stations, follow the procedure for Manual Presetting.

**CAUTION: To prevent the preset stations from being erased because of a power failure, etc., install memory backup batteries in the System. (See page 2.) Otherwise, they will be erased in approx. half a day.**

### Manual Presetting (Using the Unit) —

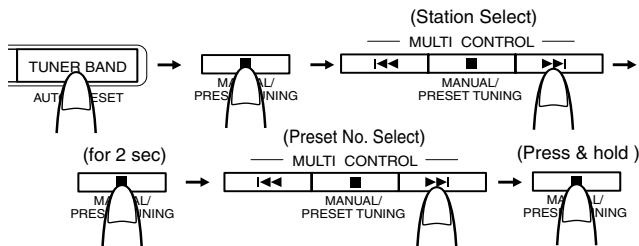

**1. Select a band by pressing the TUNER BAND button.**

**2. Press the ■ button on the Unit until “MANUAL (Manual Tuning mode)” appears on the display.**

**3. Press the ◀◀ or ▶▶ button to tune in a station.**

**4. Press the ■ button for 2 seconds or more.**

The preset number and band/frequency are alternately displayed for 5 seconds.

 
P.. 12 ↔ FM 103.5

**5. Within 5 seconds, repeatedly press the ◀◀ or ▶▶ button until the preset number you want appears, then press and hold the ■ button until “STORED” appears on the display.**

**6. Repeat steps 2-5 for further presetting.**

To change the preset stations, repeat the same procedure as above.

### Manual Presetting (Using the Remote Control) [RD-T70BU Only] —

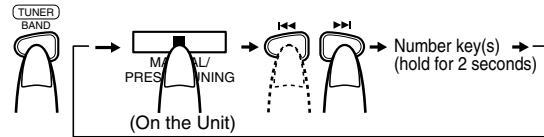

**1. Select a band by pressing the TUNER BAND button.**

**2. Press the ■ button on the Unit until “MANUAL (Manual Tuning mode)” appears on the display.**

**3. Press the ◀◀ or ▶▶ button to tune in a station.**

**4. Set the preset number by pressing and holding the number key on the Remote Control until “STORED” appears on the display.**

- To preset numbers 1 to 10: Press the number key and hold it down for 2 seconds.
- To preset numbers 11 to 19: Press the +10 button, then press the second number key (1 to 9) and hold it down for 2 seconds.
- To preset numbers 21 to 29: Press the +10 button twice, then press the second number key (1 to 9) and hold it down for 2 seconds.
- To preset number 30: Press the +10 button twice, then press and hold 10 button.

Example: Preset number = 12

P.. 12 → FM 103.5

**5. Repeat steps 2 - 4 for further presetting.**

To change the preset stations, repeat the same steps as above.

## To Change the FM Reception Mode

The “STEREO” indicator lights up and you can hear stereo effects, when a program is broadcast in stereo.

 
However if an FM stereo broadcast is hard to receive or noisy, you can select Monaural mode. Reception improves, but you lose any stereo effect.

**Press the TUNER BAND button to select FM MONO mode.**

The “MONO” indicator lights up on the display.

To restore the stereo effect, press the TUNER BAND button to select FM Auto mode. The “MONO” indicator goes out.

# Using the CD Player

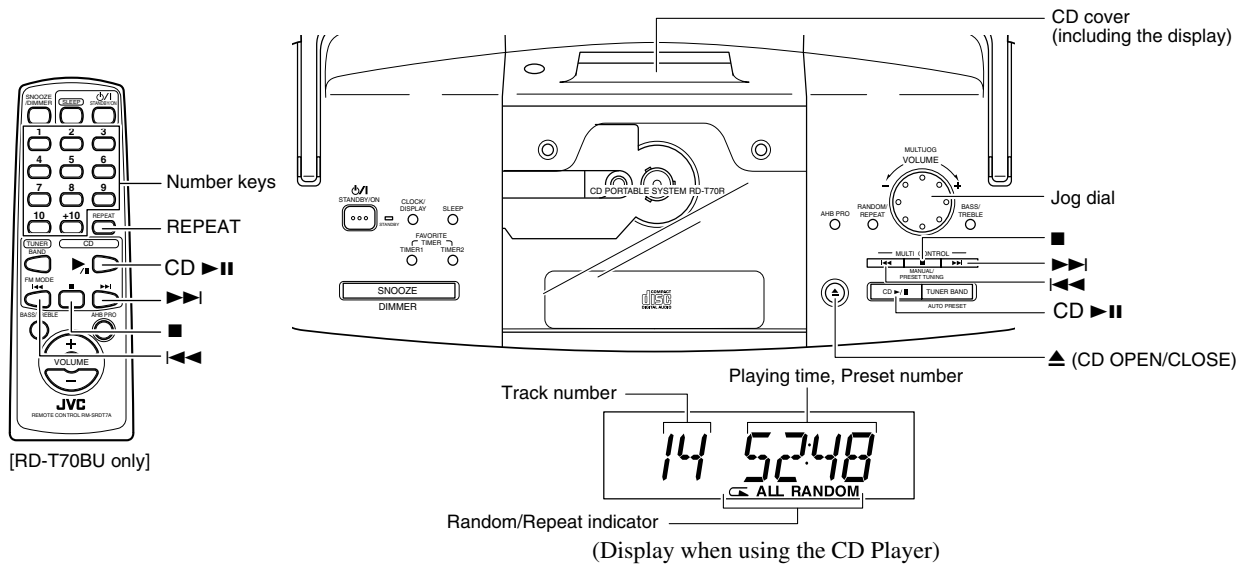

You can use Normal, Random, or Repeat Play. Repeat Play can be set to repeat all or just one of the tracks on the CD.

## One Touch CD Player (AC power only)

 
- Just press the CD >|| button.
  - The power is automatically turned on. If a CD is already inserted, "CD" is displayed and the CD will start playing from the first track.
  - If no CD is inserted, "NO DISC" is displayed on the display and the CD Player remains in Stop mode.

## Normal Play

### 1. Press the ▲ button on the Unit.

The CD cover (including the display) opens.

### 2. Place a CD, with its label side up.

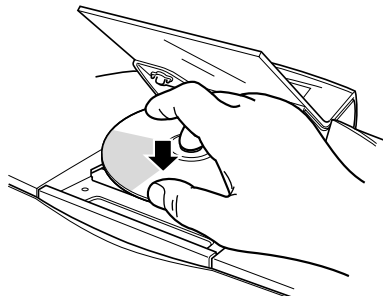

### 3. Press the ▲ button again to close the CD cover.

 
- To close the CD cover and directly start playback, omit this step and go to the next step.

**CAUTION: Avoid getting your hand caught in the CD cover.**

### 4. Press the CD >|| button.


The first track of the CD begins playing. The CD Player automatically stops when the last track of the CD has finished playing.

- During playback, the track number being played and the playback time elapsed are shown on the display.

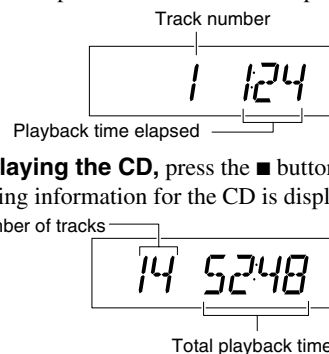

To stop playing the CD, press the ■ button.

 The following information for the CD is displayed.

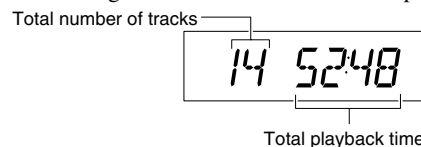

To pause, press the CD >||.

To cancel pause, press the CD >|| again. Play continues from the point where it was paused.

**Notes:**

- You can place an 8 cm (3") CD without an adaptor.
- If the CD cannot be read correctly (because it is scratched, for example), "0 0:00" appears on the display.

## Skip Play (◀◀ or ▶▶)

During playback, press the ◀◀ or ▶▶ button to select the track you want.

The selected track starts playing.

- Press the ▶▶ button to go forward one track at a time.
- Press the ◀◀ button to go back to the beginning of the current track. To go back to the previous track, quickly press the ◀◀ button twice.

You can also skip the tracks in Stop mode.

## Search Play

During playback, hold down the ◀◀ or ▶▶ button.

This operation will fast forward/backwards the CD so you can quickly find a particular passage in the track you are listening to (the CD playback speed will increase in two steps).

## Locating a Track directly with the Remote Control

Using the number keys on the Remote Control, you can go directly to the beginning of any track.

**During playback, enter the number of the track you want to listen to using the number keys.**

The selected track starts playing.

- Example: For track 5, press 5. For track 15, press +10, then 5. For track 20, press +10, then 10. For track 32, press +10 three times, then 2.

## RANDOM Play

The tracks will play in no special order when you use this mode.

(On the Unit)

### 1. In Stop mode, press the RANDOM/REPEAT button until the "RANDOM" indicator alone lights up on the display.

Each time you press the button, the Random/Repeat indicator changes as follows.

⏪ → ⏪ ALL → ⏪ RANDOM → RANDOM (Random Play mode) → blank display → (back to the beginning)

### 2. Press the CD ►|| button.

All the tracks are played back in random order once, then the CD stops.

- During playback, skip play and search play can be done in the similar manner as for Normal Play mode, using the ◀◀ or ▶▶ button.

**To stop Random Play**, press the ■ button.

**To cancel Random Play mode**, in Stop mode, press the RANDOM/REPEAT button until the "RANDOM" indicator goes out, or press the ■ button. Pressing the ▲ button to open the CD cover will also cancel Random Play mode.

## Repeat Play

One track or all the tracks on a CD will play repeatedly when you use this mode.

(On the Unit)

### 1. In Stop mode, press the RANDOM/REPEAT button.

Each time you press the button, the Random/Repeat indicator changes as follows.

⏪ → ⏪ ALL → ⏪ RANDOM → RANDOM → blank display → (back to the beginning)

⏪ : Will repeat one track.

⏪ ALL: Will repeat all the tracks.

⏪ RANDOM: Will repeat all the tracks in random order.

### 2. Press the CD ►|| button.

Repeat playback starts.

**To stop Repeat Play**, press the ■ button.

**To cancel Repeat Play mode**, in Stop mode, press the RANDOM/REPEAT button until the Random/Repeat indicator goes out, or press the ■ button. Pressing the ▲ button to open the CD cover will also cancel Repeat Play mode.

(On the Remote Control) [RD-T70BU Only]

### 1. In Stop mode, press the REPEAT button.

Each time you press the button, the Repeat indicator changes as follows.

⏪ → ⏪ ALL → blank display → (back to the beginning)

⏪ : Will repeat one track.

⏪ ALL: Will repeat all the tracks.

 
### 2. Press the CD ►|| button.

Repeat playback starts.

**To stop Repeat Play**, press the ■ button.

**To cancel Repeat Play mode**, in Stop mode, press the REPEAT button until the Repeat indicator goes out, or press the ■ button. Pressing the ▲ button to open the CD cover will also cancel Repeat Play mode.

# Using the Timers

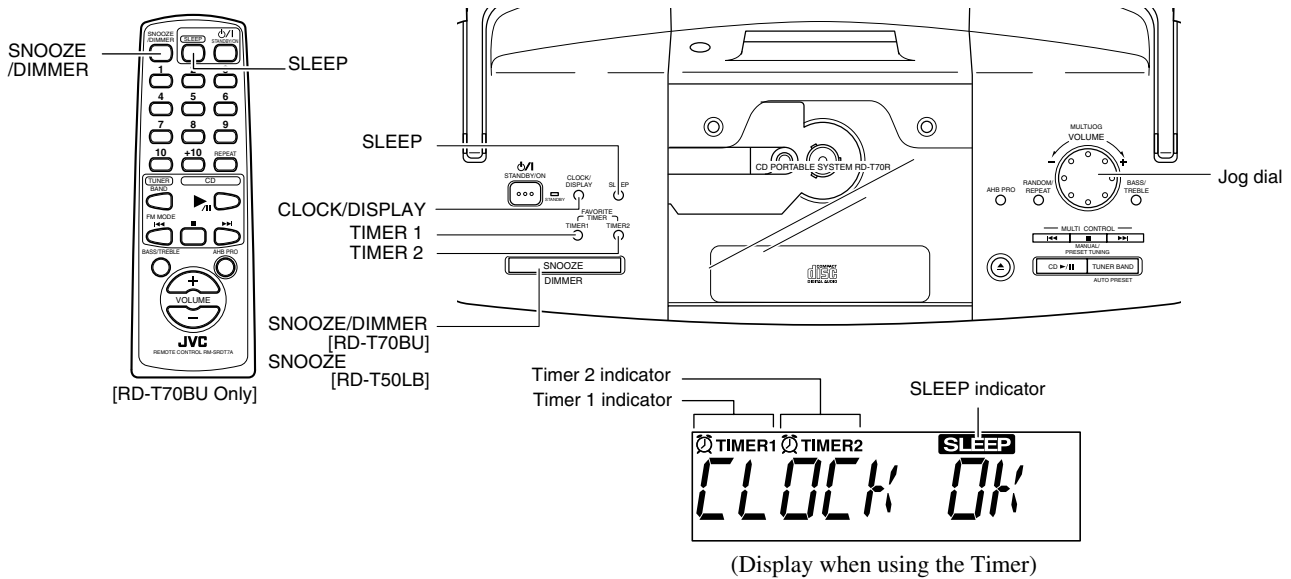

You can enjoy timer settings with the unique dual timer, consisting of the Timer 1 and Timer 2. These Timers can independently select a playback source from the CD player (Normal Play or Random Play), Tuner, or 8 melodies. For example, you can make up to a melody every morning with the Timer 1, and without changing the Timer 1 setting, you can listen to the favorite program by reserving it with the Timer 2. Also, you can use the Sleep Timer to fall asleep to music. Your System automatically turns off after a certain length of time.

**CAUTION: If memory backup batteries are exhausted or not installed, and the AC power cord is disconnected or there is a power failure, time settings will be erased from memory in approx. half a day. Then, the display blinks "AM 12:00". If this happens, set the current time (clock) and perform the timer setting again.**

 
## Setting the Clock

When the Unit is operated on AC power or batteries for the first time, the time indication "AM 12:00" will blink on the display and you need to set the clock.

You can set the clock whether the Unit is turned on or off (Standby) if the AC power is supplied to the Unit.

### Notes:

- The clock must be correctly set for the timer to work.
- The clock may gain or lose 1 to 2 minutes per month.
- Perform each setting step within 30 seconds. Otherwise, setting is cleared and the procedure must be repeated from the beginning.

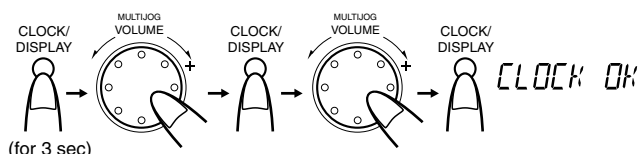

(On the Unit)

- 1. Press the CLOCK/DISPLAY button for 3 seconds or more.**  
The hour digits blink.
- 2. Turn the Jog dial to set the hour.**

### 3. Press the CLOCK/DISPLAY button.

The minute digits blink.

### 4. Turn the Jog dial to set the minute.

### 5. Press the CLOCK/DISPLAY button.

"CLOCK OK" appears for 2 seconds. The selected time is set and the seconds start counting from 0.

## Setting the Timer

The Timer 1 or Timer 2 is turned on at the set time and the System turns on. The selected source is played and the volume fades in. The System will automatically turn off in 1 hour.

The setting procedure for the Timer 1 and Timer 2 is identical.

### Notes:

- Perform each setting step within 30 seconds. Otherwise, setting is cleared and the procedure must be repeated from the beginning.
- Tuner timer uses the preset station. So, you need to preset the stations in Preset Tuning mode beforehand. See, "Presetting Stations" on page 6.

(On the Unit: While the Unit is turned on)

### 1. Press the TIMER1 or TIMER2 (we write as TIMER1/2 hereafter) button.

The current hour digits blink. Also, the Timer 1/2 indicator (TIMER1/2) blinks.

### Note:

- If the clock is not set yet, "CLOCK SET" is displayed and the Unit enters the clock setting mode. In this case, set the clock referring to "Setting the Clock" on this page.

### 2. Turn the Jog dial to select the hour.

### 3. Press the TIMER1/2 button.

The current minute digits blink.

 
### 4. Turn the Jog dial to select the minute.

### 5. Press the TIMER1/2 button.

The current source name blinks.

## 6. Turn the Jog dial to select the source.

The source name changes as follows:



## 7. Press the TIMER1/2 button and select a source item you want.

When the source is CD:

1. Turn the Jog dial to select either "TRACK NO" (for Normal Play) or "RANDOM" (for Random Play).
2. Press the TIMER1/2 button.  
When "TRACK NO" is selected, "TRACK- 1" blinks. Go to steps 3 and 4.  
When "RANDOM" is selected, the current volume level blinks. Go to step 8.  
(When "TRACK- 1" blinks.)
3. Turn the Jog dial to select another track, if you want.
4. Press the TIMER1/2 button.  
The current volume level blinks. Go to step 8.

When the source is TUNER:

1. Turn the Jog dial to select FM AUTO, FM MONO, or AM.
2. Press the TIMER1/2 button.  
The preset number blinks. (e.g. "P-1")
3. Turn the Jog dial to select the preset number you want to listen to.
4. Press the TIMER1/2 button.  
The current volume level blinks. Go to step 8.

When the source is MELODY:

The current melody number (1 - 8) blinks and the melody is played.

1. Turn the Jog dial to select one of melodies.
2. Press the TIMER1/2 button.  
The current volume level blinks. Go to step 8.

## 8. Turn the Jog dial to set the volume level.

The volume level changes between "MIN (0)" and "MAX (32)".

## 9. Press the TIMER1/2 button.

The TIMER1/2 is set and the Timer 1/2 indicator (⌚ TIMER1/2) remains lit.

## 10. Prepare the music source according to the source set in step 6.

CD: Load a CD.

TUNER/MELODY: No preparation is necessary.

- If no CD is loaded with the CD source selected, the MELODY 1 will be activated instead of a CD.

## 11. Turn off the Unit (Standby mode).

### When the set time comes

When the set time comes, the Unit automatically turn on and plays the source. During this time, the Timer 1/2 indicator (⌚ Timer 1/2) blinks. The timer will automatically turn off in 1 hour. In case that the source is CD, the Unit automatically turns off when playing back all the tracks is finished.

- To temporarily cancel the timer, press the TIMER 1/2 button once or change the volume with the VOLUME control on the Unit or the VOLUME +/- button on the Remote Control. Then the Timer 1/2 indicator (⌚ TIMER 1/2) remains lit.

To cancel the timer, press the TIMER1/2 button to turn off the Timer 1/2 indicator (⌚ TIMER1/2).

To reactivate the timer, repeatedly press the TIMER1/2 button until the Timer 1/2 indicator (⌚ TIMER1/2) remains lit again.

To confirm the timer settings, repeatedly press the TIMER1/2 button.

To change the timer settings, repeat the setting procedure from the beginning.

Tip:

The timer works even if the Unit is turned on. So, while listening to a CD or radio, you can use the timer to know the set time. For example, if you are listening to the radio, you can set the timer so that the melody will be played at the set time, instead of the radio. In this case, the playback sound slowly fades in.

## 5-Minute Snoozing (SNOOZE)

When the Timer 1/2 turns on, if you wish, you can activate 5-minute snoozing function to temporarily stop playing source.

**While the timer is activating, press the SNOOZE button.**

The Unit turns off for 5-minute for snoozing. (The Timer 1/2 blinks.)

Notes:

- The maximum number of times to repeat snoozing is limited to 10.
- Snooze function does not work when the other timer is used.

## Setting the SLEEP Timer

Use the Sleep Timer to turn the Unit off after a certain number of minutes when it is playing. By setting the Sleep Timer, you can fall asleep to music and know that your Unit will turn off by itself rather than play all night.

- You can only set the Sleep Timer when the Unit is on and a source is playing.

### 1. Play back a CD or tune in to a desired station.

### 2. Press the SLEEP button.

The "SLEEP" indicator blinks.

### 3. Set the length of time you want the source to play before shutting off.

- Each time you press the SLEEP button, it changes the number of minutes shown on the display in this sequence:

10 → 20 → 30 → 60 → 90 → 120 → Cancelled → (back to the beginning)

The "SLEEP" indicator will stop blinking after 5 seconds and remains on (The backlight dims.). Then, the display returns to the one before you set the Sleep Timer.

The Unit is now set to turn off after the number of minutes you have set.

**To Confirm the Sleep Time**

Press the SLEEP button once. The remaining sleep time is displayed, and after 5 seconds, the original display returns.

**To Cancel the SLEEP Timer Setting**

Press the SLEEP button until the "SLEEP" indicator goes off on the display. Turning off the Unit also cancels the SLEEP Timer.

 
# Care And Maintenance

Handle your CDs carefully, and they will last a long time.


## Compact Discs



- Only CDs bearing these marks can be played with this Unit.



 - Continued use of irregularly shaped CDs (heart-shape, octagonal, etc.) can damage the Unit.



- Remove the CD from its case by holding it at the edges while pressing the case's center hole lightly.
- Do not touch the shiny surface of the CD, or bend the CD.



- Put the CD back in its case after use to prevent warping.
- Be careful not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- A dirty CD may not play correctly. If a CD is dirty, wipe it with a soft cloth in a straight line from center to edge.

**CAUTION: Do not use any solvent (for example, conventional record cleaner, spray thinner, benzine, etc.) to clean a CD.**

## Moisture Condensation

Moisture may condense on the lens inside the Unit in the following cases:

- After turning on heating in the room.
- In a damp room.
- If the Unit is brought directly from a cold to a warm place.

Should this occur, the Unit may malfunction. If this happens, leave it turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

## General Notes

To ensure top performance, keep your CDs and the mechanism clean.

- Store CDs in their cases, and keep them in cabinets or on shelves.
- Keep the CD cover closed when not in use.

# Troubleshooting

- If you have a problem with your System, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the System has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	<ul style="list-style-type: none"> <li>• The power cord is disconnected.</li> <li>• The batteries in the Unit have lost their charge.</li> <li>• Headphones are connected.</li> </ul>	<ul style="list-style-type: none"> <li>• Connect it firmly</li> <li>• Replace the batteries.</li> <li>• Disconnect the headphones.</li> </ul>
Poor AM reception	The System is not properly positioned.	Turn the System to the best reception position.
Poor FM reception	The FM antenna is not properly positioned.	Extend the FM antenna and turn it to the best reception position.
The CD skips.	The CD is dirty or scratched.	Clean or replace the CD.
The CD does not play.	The CD is upside down.	Put the CD in with the label side up.
Preset tuning is not possible with the ◀▶ key.	Manual Tuning mode is selected.	Press the ■ button on the Unit until "PRESET" is displayed.
Manual tuning is not possible with the ◀▶ key.	Preset Tuning mode is selected.	Press the ■ button on the Unit until "MANUAL" is displayed.
Unable to operate the Remote Control.	<ul style="list-style-type: none"> <li>• The path between the Remote Control and the sensor on the Unit is blocked.</li> <li>• The batteries have lost their charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries.</li> </ul>
Operations are disabled.	The built-in microprocessor has malfunctioned due to external electrical interference.	Unplug the Unit then plug it back in.

# Specifications

## Amplifier

Output Power	(Max.) 5 W (2.5 W + 2.5 W) at 4 ohms
	(10% THD) 4 W (2 W + 2 W) at 4 ohms
Output Sensitivity/Impedance (1 kHz)	Phones 32 ohms - 1 kohm
	0 mW - 20 mW/ch output into 32 ohms

## CD Player

Signal-To-Noise Ratio	90 dB
Wow And Flutter	Unmeasurable

## Tuner

FM Tuner	
Tuning Range	87.5 MHz - 108.0 MHz
AM Tuner	
Tuning Range	530 kHz - 1,710 kHz
Antenna	Built-in wire antenna for FM
	Built-in ferrite core antenna for AM

## Speakers

8 cm × 2, 4 ohms

## General

Dimensions	438 mm × 175.5 mm × 261.5 mm (W/H/D)
Mass	Approx. 2.5 kg (without batteries)

## Accessories

Power Cord (1)  
Remote Control (RM-SRDT7A) (1) [RD-T70GN Only]

## Power Specifications

Power Requirements	AC 120 V ~ , 60 Hz
Power Consumption	12 watts (power on mode)

*Design and specifications are subject to change without notice.*

# Authorized Service Centers

---

QUALITY **JVC**<sup>®</sup> SERVICE

*HOW TO LOCATE YOUR JVC SERVICE CENTER*

**TOLL FREE: 1 (800) 537-5722**

**<http://www.jvc.com>**

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **[www.JVC.com](http://www.JVC.com)**

Remember to retain your Bill of Sale for Warranty Service.

---

**Do not service the television yourself**

---

## **Caution**

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

## **Accessories**

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **[www.JVC.com](http://www.JVC.com)**

---





**LIMITED WARRANTY**

PORTABLE AUDIO 1-90 **USA ONLY**

**ONLY FOR PRODUCT PURCHASED IN U.S.A.**

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period")

PARTS	<b>1 YR</b>	LABOR	<b>90 DAYS</b>
-------	-------------	-------	----------------

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

**WHAT WE WILL DO:**

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

**WHAT YOU MUST DO FOR WARRANTY SERVICE:**

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800) 537-5722.

If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus a letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

**WHAT IS NOT COVERED:**

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number or serial number has been altered, tampered with, defaced or removed;
2. Initial installation and installation and removal for repair;
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus (Needle) are covered for 90 days from the date of purchase;
7. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**JVC COMPANY OF AMERICA** 1700 Valley Road  
DIVISION OF JVC AMERICAS CORP. Wayne, New Jersey 07470

 
REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

**For customer use:**

Enter below the Model No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. : \_\_\_\_\_ Serial No. : \_\_\_\_\_

Purchase data : \_\_\_\_\_ Name of dealer : \_\_\_\_\_

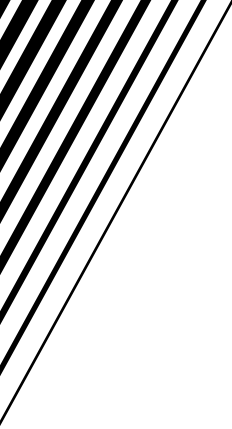

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED