

JVC

CD RECEIVER

KD-LX333/KD-LX111

ENGLISH

RECEPTOR CON CD

KD-LX333/KD-LX111

ESPAÑOL


RECEPTEUR CD

KD-LX333/KD-LX111

FRANÇAIS



BBE^{II}

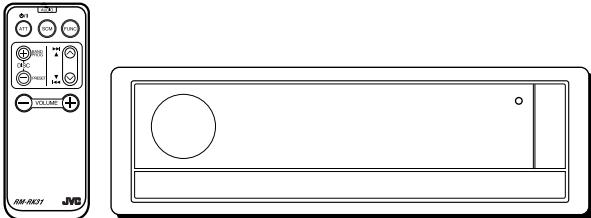

This unit is equipped with display demonstration. To cancel it, see page 8.

Esta unidad está equipada con demostración en la indicación. Para cancelarla, consulte la página 8.

Cet appareil est équipé d'une fonction de démonstration des affichages. Pour l'annuler, référez-vous à la page 8.

For installation and connections, refer to the separate manual.

Para la instalación y las conexiones, refiérase al manual separado.

Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS

MANUAL DE INSTRUCCIONES

MANUEL D'INSTRUCTIONS

For customer Use:
Enter below the Model No. and
Serial No. which are located on
the top or bottom of the
cabinet. Retain this information
for future reference.

Model No. _____

Serial No. _____

INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT FOR LASER PRODUCTS**Precautions:**

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION:

This product has a fluorescent lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations.

For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: [>](http://www.eiae.org)


How to reset your unit

Press the reset button on the front panel using a ball-point pen or a similar tool.

This will reset the built-in microcomputer.

Note:

Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

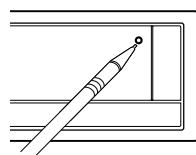

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

CONTENTS

How to reset your unit	2	SOUND ADJUSTMENTS	15
LOCATION OF THE BUTTONS	4	Adjusting the sound	15
Control panel	4	What is BBE [®] ?	15
How to use the number buttons	4	Selecting preset sound modes	
Remote controller	5	(CEQ: custom equalizer)	16
Preparing the remote controller	6	Storing your own sound adjustments	17
BASIC OPERATIONS	7	OTHER MAIN FUNCTIONS	18
Turning on the power	7	Changing the general settings (PSM)	18
Canceling the demonstration	8	Controlling the volume automatically (Audio Cruise)	22
Setting the clock	8	Assigning names to the sources	23
RADIO BASIC OPERATIONS	9	CD CHANGER OPERATIONS	25
Listening to the radio	9	Playing CDs	25
Storing stations in memory	10	Selecting CD playback modes	26
Tuning in to a preset station	11	EXTERNAL COMPONENT OPERATIONS ...	28
CD OPERATIONS	12	Playing an external component	28
Playing a CD	12	Using a subwoofer (only for KD-LX333)	28
Locating a track or a particular portion on a CD	13	TROUBLESHOOTING	29
Selecting CD playback modes	13	MAINTENANCE	30
Prohibiting CD ejection	14	Handling CDs	30
Playing a CD Text	14	SPECIFICATIONS	31

CAUTION on Volume Setting

CDs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a disc and adjust it as required during playback.

BEFORE USE

*For safety....

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

*Temperature inside the car....


If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.



LOCATION OF THE BUTTONS

ENGLISH

Control panel

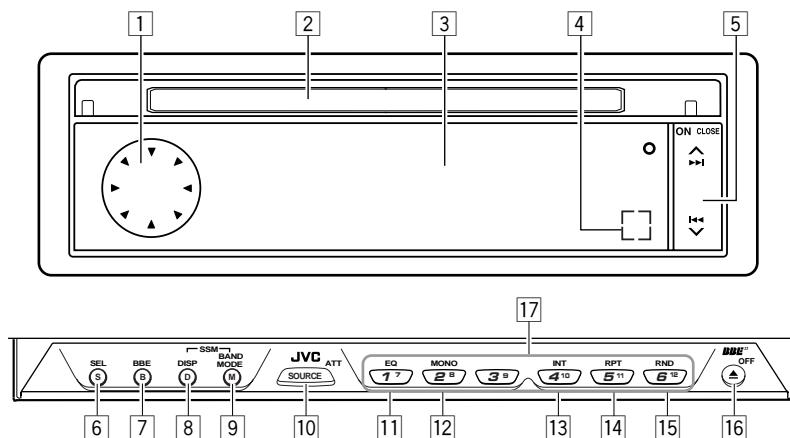

*The control panel slides out when you press ON CLOSE.



*When you press OFF ▲, the display panel moves down and the CD loading slot appears.

- 1 Control dial
- 2 CD loading slot
- 3 Display panel
- 4 Remote sensor
- 5 ▲ ▶▶◀ / ▲ ▶◀▼ button
• ▲ ▶▶◀ / ▲ ▶◀▼ also functions as ON or CLOSE button.
- 6 SEL (S) (select) button
- 7 BBE (B) button
- 8 DISP (D) (display) button
• Also functions as SSM buttons when pressed together with the BAND MODE (M) button.

- 9 BAND MODE (M) button
• Also functions as SSM buttons when pressed together with the DISP (D) button.
- 10 SOURCE ATT (attenuator) button
- 11 EQ (equalization) button
- 12 MONO (monaural) button
- 13 INT (intro scan) button
- 14 RPT (repeat) button
- 15 RND (random) button
- 16 OFF ▲ (eject) button
- 17 Number buttons

How to use the number buttons:

After pressing BAND MODE (M), the number buttons work as different function buttons (while "MODE" remains on the display).

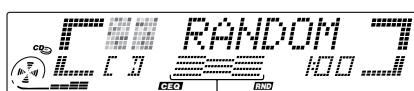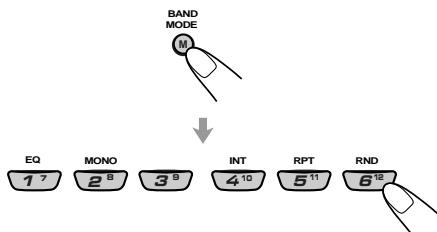


Time countdown indicator

Ex.: When you press button 6 to enter the Random function mode.

To use these buttons as number buttons after pressing BAND MODE (M), wait for 5 seconds without pressing any number button so that "MODE" disappears from the display.
• Pressing BAND MODE (M) again also erases "MODE" from the display.



Remote controller

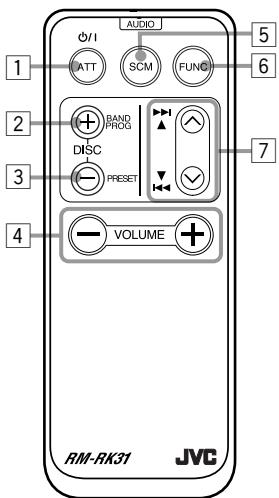


- ① • Turns on the unit if pressed when the unit is turned off.
 - Turns off the unit if pressed and held until "SEE YOU" appears on the display.
 - Drops the volume level if pressed briefly, and "ATT" rotates on the display.
Press again to resume the volume.
- ② • Functions as the BAND button while listening to an FM broadcast.
Each time you press the button, the band changes.
- Functions as the DISC + button while listening to the CD changer.
Each time you press the button, the disc number increases, and the selected disc starts playing.
- Does not function as the PROG button.

- ③ • Functions as the PRESET button while listening to the radio.
Each time you press the button, the preset station number increases, and the selected station is tuned in.
- Functions as the DISC – button while listening to the CD changer.
Each time you press the button, the disc number decreases, and the selected disc starts playing.
- ④ Functions the same as the control dial on the main unit.
NOTE: This button does not function for the preferred setting mode adjustment.
- ⑤ Selects the sound mode.
Each time you press SCM (Sound Control Memory), the CEQ (custom equalizer) mode changes.
- ⑥ Selects the source.
Each time you press FUNC (function), the source changes.
- ⑦ • Searches stations while listening to the radio.
 - Fast-forwards or reverses the track if pressed and held while listening to a CD.
 - Skips to the beginning of the next track or goes back to the beginning of the current (or previous) track if pressed briefly while listening to a CD.

Preparing the remote controller

Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.

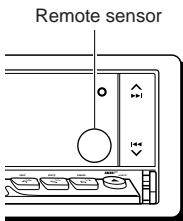


- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


1. Remove the battery holder.

- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

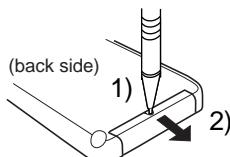


2. Place the battery.

Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

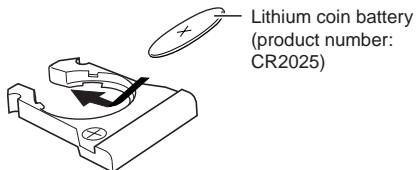

3. Return the battery holder.

Insert again the battery holder pushing it until you hear a clicking sound.

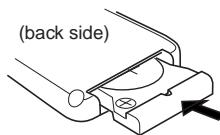


WARNING:

- Store the battery in a place where children cannot reach.
If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose of in a fire.
Doing any of these things may cause the battery to give off heat, crack or start a fire.
- Do not leave the battery with other metallic materials.
Doing this may cause the battery to give off heat, crack or start a fire.
- When throwing away or saving battery, wrap it in tape and insulate; otherwise, it may cause the battery to give off heat, crack or start a fire.
- Do not poke the battery with tweezers or similar tools.
Doing this may cause the battery to give off heat, crack or start a fire.


CAUTION:

DO NOT leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.

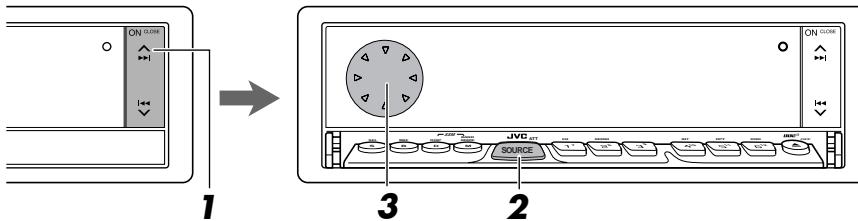


Turning on the power

1 Turn on the power.

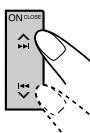

The display illuminates and the control panel and control dial come out.

2 Select the source.

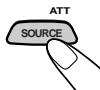

Each time you press the button, the source changes as follows:

For KD-LX333:

- FM → CD* → CD changer**
- External component → AM
- (back to the beginning)

For KD-LX111:

- FM → CD* → CD changer** (or external component***) → AM
- (back to the beginning)

* If a CD is not in the loading slot, you cannot select CD as the source to play.

** Without connecting the CD changer, you cannot select it as the source to play.

***To select the external component, set the "EXT INPUT" setting to "LINE INPUT." (See page 21.)


To operate the tuner (FM or AM), see pages 9 – 11.

To operate the CD player, see pages 12 – 14.

To operate the CD changer, see pages 25 – 27.

To operate the external component, see page 28.

3 Adjust the volume.

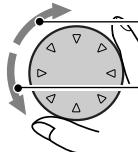

To increase the volume.



To decrease the volume.

Volume level appears.



4 Adjust the sound as you want (see pages 15 – 17).

To drop the volume in a moment

Press SOURCE ATT for more than 1 second while listening to any source. "ATT" rotates on the display, and the volume level will drop in a moment.

To resume the previous volume level, press the button for more than 1 second again.

To turn off the power

Press and hold OFF ▲ until "SEE YOU" appears on the display.

- If you turn off the power while listening to a CD, you can start CD playback from where you have stopped next time you turn on the power.

Note:

When you use this unit for the first time, set the built-in clock correctly, see page 8.

Note on display illustrations:

Illustrations will differ from what appears if "CLOCK DISP" is set to "CLOCK OFF." See page 20.

Cancelling the demonstration

When shipped from the factory, demonstration has been activated, and starts automatically when no operations are done for about 20 seconds.


- It is recommended to cancel the demonstration before you use the unit for the first time.

To cancel the demonstration, follow the procedure below.


- 1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display. (See page 19.)



- 2 Select "DEMO MODE" if not shown on the display.

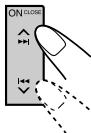

- 3 Select "DEMO OFF."

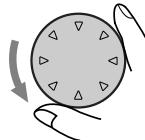

- 4 Finish the setting.



To activate the demonstration again, repeat the same procedure and select "DEMO ON" in step 3.


Setting the clock

- 1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display. (See page 19.)




- 2 Set the hour.

- 1 Select "CLOCK HOUR" if not shown on the display.
- 2 Adjust the hour.

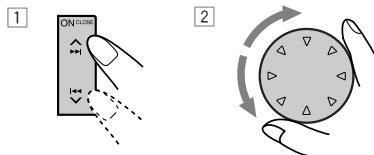

- 3 Set the minute.

- 1 Select "CLOCK MIN (minute)."
- 2 Adjust the minute.

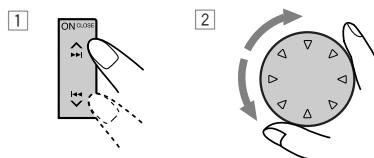

- 4 Finish the setting.



To check the current clock time with "CLOCK DISP" set to "CLOCK OFF," press DISP (D). The clock time is shown for 5 seconds.


RADIO BASIC OPERATIONS



ENGLISH



Press ON CLOSE to turn on the power.

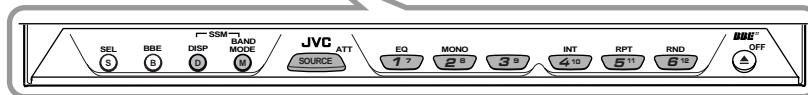

Listening to the radio

You can use either automatic searching or manual searching to tune in to a particular station.

Searching a station automatically: Auto search

1 Select the band.



- 1 Press SOURCE ATT to select FM or AM as the source.



- 2 If necessary, press and hold BAND MODE (M) to select the FM band number (FM1, FM2 or FM3).

Each time you press and hold the button, the FM band changes as follows:

→ FM1 → FM2 → FM3




Selected band appears.

Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Start searching a station.

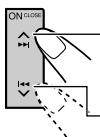

Press $\blacktriangle \triangleright \triangleright$ to search stations of higher frequencies.



Press $\blacktriangleleft \blacktriangleleft \blacktriangleleft$ to search stations of lower frequencies.

When a station is received, searching stops.

To stop searching before a station is received, press the same button you have pressed for searching.

Searching a station manually: Manual search

1 Select the band.



- 1 Press SOURCE ATT to select FM or AM as the source.



- 2 If necessary, press and hold BAND MODE (M) to select the FM band number (FM1, FM2 or FM3).

Each time you press and hold the button, the FM band changes as follows:

→ FM1 → FM2 → FM3

Note:


This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

CONTINUED ON THE NEXT PAGE

- 2** Press and hold $\Delta \gg$ or $\ll \nabla$ until "M" (manual) starts flashing on the display.



- 3** Tune in to a station you want while "M" is flashing.

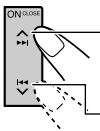

Press $\Delta \gg$ to tune in to stations of higher frequencies.

Press $\ll \nabla$ to tune in to stations of lower frequencies.

- If you release your finger from the button, the manual mode will automatically turn off after 5 seconds.
- If you hold down the button, the frequency keeps changing until you release the button.

When an FM stereo broadcast is hard to receive:

- 1** Press BAND MODE (M) while listening to an FM stereo broadcast (the ST indicator lights up while receiving an FM stereo broadcast). "MODE" appears on the display, and the number buttons can work as different function buttons.

- 2** Press MONO, while "MODE" is still on the display, so that the MO indicator lights up on the display.

The sound you hear becomes monaural but the reception will be improved (the ST indicator goes off).

Each time you press the button, the MO indicator lights up and goes off alternately.

Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.

- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2 and FM3).

- 1** Select the FM band (FM1 – 3) you want to store FM stations into.



Press SOURCE ATT to select FM as the source.




If necessary, press and hold BAND MODE (M) to select the FM band number (FM1, FM2 or FM3).

Each time you press and hold the button, the FM band changes as follows:



- 2** Press and hold both buttons for more than 2 seconds.

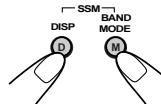

"SSM" appears, then disappears when automatic preset is over.

Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No.1 (lowest frequency) to No.6 (highest frequency).


When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

Ex.: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band


1 Select the band (in this example, FM1).

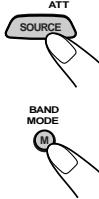

1 Press SOURCE ATT to select FM as the source.

2 Press and hold BAND MODE (M) repeatedly to select the FM1 band.

2 Tune in to a station (in this example, of 88.3 MHz).

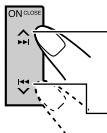

Press $\nwarrow \nearrow \rightarrow \rightarrow$ to tune in to stations of higher frequencies.

Press $\leftarrow \leftarrow \downarrow \downarrow$ to tune in to stations of lower frequencies.



3 Press and hold the number button (in this example, 1) for more than 2 seconds.



"PI" flashes for a few seconds.

4 Repeat the above procedure to store other stations into other preset numbers.

Notes:

- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.

Tuning in to a preset station

You can easily tune in to a preset station. Remember that you must store stations first. If you have not stored them yet, see "Storing stations in memory" on pages 10 and 11.

1 Select the band.



1 Press SOURCE ATT to select FM or AM as the source.




2 If necessary, press and hold BAND MODE (M) to select the FM band number (FM1, FM2 or FM3).

Each time you press and hold the button, the FM band changes as follows:

$\rightarrow \text{FM1} \rightarrow \text{FM2} \rightarrow \text{FM3}$

2 Select the number (1 – 6) for the preset station you want.

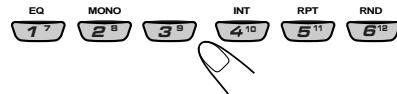


When using this unit in an area other than North or South America:

You need to change the AM/FM channel intervals. See "To change the AM/FM channel intervals — AREA" on page 21.




CD OPERATIONS

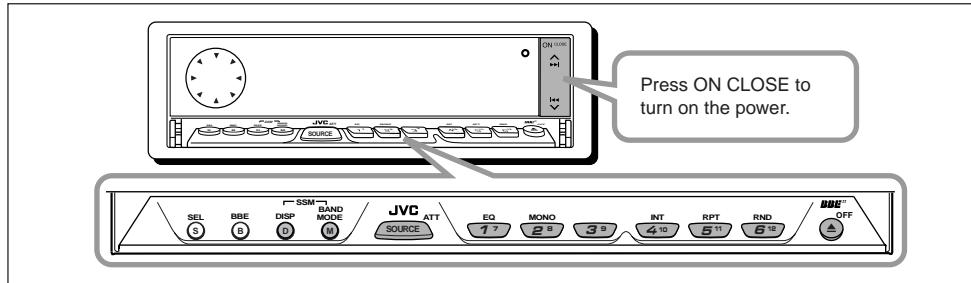

Playing a CD

1 Open the loading slot.

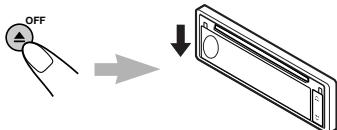

The display panel moves down, and the loading slot appears.



2 Insert a disc into the loading slot.



The unit draws in a CD, the display panel moves up, and CD play starts automatically.



The CD-in indicator lights up.

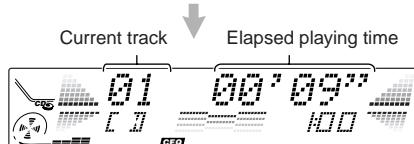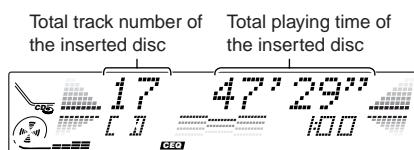

Notes:

- When a CD is in the loading slot, selecting "CD" as the source by pressing SOURCE ATT to starts CD play.
- When a CD is inserted upside down, the CD automatically ejects.
- When you play a CD Text, the disc title and performer appear on the display. Then the current track title appears on the display, followed by the track number and elapsed playing time. See also "Playing a CD Text" (page 14) and "To select the scroll mode — SCROLL" (page 20). If a CD Text includes much text information, some may not appear on the display.
- If you change the source, CD play also stops (without ejecting the CD).


Next time you select "CD" as the source, CD play will start from where you have stopped.

To stop play and eject the CD

Press OFF ▲ briefly.

CD play stops, the display panel moves down, then the CD automatically ejects from the loading slot.

To move up the display panel, press ▲ ►► or ▲◀◀. If no button is pressed, the display panel will move up in about 5 minutes.

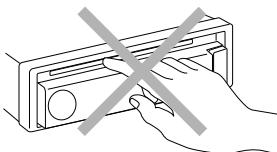

CAUTION: NEVER insert your finger between the display panel and the unit, as it may get caught in the unit.


Note:

If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)



Locating a track or a particular portion on a CD


To fast-forward or reverse the track

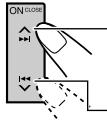

Press and hold **▲ ▶▶**, while playing a CD, to fast-forward the track.

Press and hold **◀◀ ▼**, while playing a CD, to reverse the track.


To go to the next tracks or the previous tracks

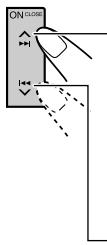

Press **▲ ▶▶** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

Press **◀◀ ▼** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

To go to a particular track directly

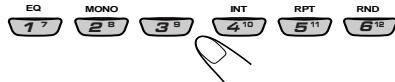


Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

Selecting CD playback modes


To play back tracks at random (Random Play)

You can play back all tracks on the CD at random.

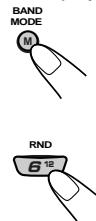

① Press BAND MODE (M) while playing a CD. "MODE" appears on the display, and the number buttons can work as different function buttons.

② Press RND (random), while "MODE" is still on the display, so that the RND indicator lights up on the display. Each time you press the button, CD random play mode turns on and off alternately.

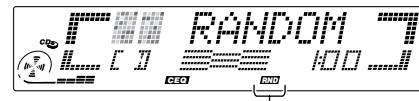


RND indicator

When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.

To play back tracks repeatedly (Repeat Play)


You can play back the current track repeatedly.

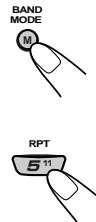

① Press BAND MODE (M) while playing a CD. "MODE" appears on the display, and the number buttons can work as different function buttons.

② Press RPT (repeat), while "MODE" is still on the display, so that the RPT indicator lights up on the display. Each time you press the button, CD repeat play mode turns on and off alternately.

Track number of the currently playing track

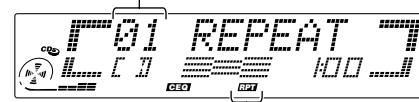


RPT indicator

When the repeat mode is turned on, the RPT indicator lights up on the display.

To play back only intros (Intro Scan)

You can play back the first 15 seconds of each track sequentially.

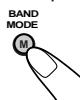

Track number of the currently playing track



When the intro scan mode is turned on, "INTRO" appears on the display for 5 seconds and the track number flashes.

Prohibiting CD ejection

You can prohibit CD ejection and can lock a CD in the loading slot.

While pressing SOURCE ATT, press and hold OFF ▲ for more than 2 seconds. "NO EJECT" flashes on the display for about 5 seconds, and the CD is locked and cannot be ejected.



Note:

If you press OFF ▲ while CD ejection is prohibited, the control panel moves down, but the CD cannot be ejected. ("NO EJECT" appears on the display.)

To move up the display panel, press ▲▶▶◀ or ▲◀◀▼.

To cancel the prohibition and unlock the CD, press and hold OFF ▲ for more than 2 seconds again, while pressing SOURCE ATT. "EJECT OK" flashes on the display for about 5 seconds, and the CD is unlocked.


Playing a CD Text

In a CD Text, some information about the disc (its disc title, performer and track title) is recorded. You can show these disc information on the display.

Select text display mode while playing a CD Text.



Each time you press the button, the display changes as follows:

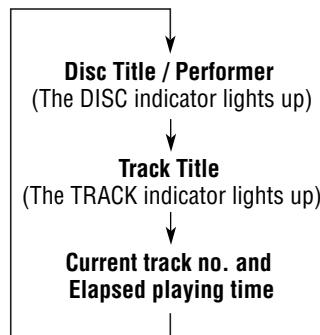

Notes:

- The display shows up to 10 characters at one time and scrolls if there are more than 10 characters. See also "To select the scroll mode — SCROLL" on page 20.
- When you press DISP (D) while playing a conventional CD, "NO NAME" appears for the disc title/performer and the track title.



Adjusting the sound

You can adjust the sound characteristics to your preference.

1 Select the item you want to adjust.




Each time you press the button, the adjustable items change as follows:



Indication	To do:	Range
BASS	Adjust the bass.	-06 (min.) +06 (max.)
TRE	Adjust the treble.	-06 (min.) +06 (max.)
FAD*	Adjust the front and rear speaker balance.	R06 (Rear only) F06 (Front only)
BAL	Adjust the left and right speaker balance.	L06 (Left only) R06 (Right only)
WOOFER (only for KD-LX333)	Adjust the subwoofer output level.	00 (min.) 08 (max.)
VOLUME	Adjust the volume.	00 (min.) 50 (max.)


* If you are using a two-speaker system, set the fader level to "00."

2 Adjust the level.

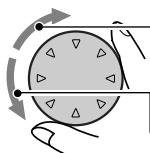

To increase the level.

To decrease the level.

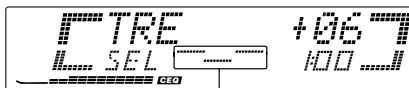

Equalization pattern changes as you adjust the bass or treble.

Note:

Normally the control dial works for volume adjustment. So you do not have to select "VOLUME" to adjust the volume level.


What is BBE^{II}?

The BBE^{II}* function restores the brilliance and clarity of the original live sound in recording, broadcasts, etc.

When a speaker reproduces sound, it introduces frequency-dependent phase shifting, causing high-frequency sounds to take longer to reach the ear than low frequency sounds. The BBE^{II} function adjusts the phase relationship between the low, mid and high frequencies by adding a progressively longer delay time to the low and mid frequencies, so that all frequencies reach the listener's ears at the proper time.

In addition, the BBE^{II} function boosts low and high frequencies, which loudspeakers tend to be less efficient in reproducing, through dynamic, program-driven augmentation. When combined with the phase compensation feature, the resulting sound has a clearer, more finely detailed "live" presence.

Each time you press BBE (B), the BBE^{II} function changes as follows:

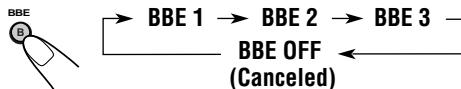

As the number gets higher, the BBE^{II} function becomes stronger.

When shipped from the factory, the BBE^{II} function is set to "BBE OFF".

* Under license from BBE Sound, Inc.
BBE^{II} is a trademark of BBE Sound, Inc.



Selecting preset sound modes (CEQ: custom equalizer)

You can select a preset sound mode (CEQ: custom equalizer) suitable to the music genre.

- 1 Press BAND MODE (M) to make the number buttons work as different function buttons.**



- 2 Activate custom equalizer (CEQ).**



The last selected sound mode is recalled and applied to the current sound.




Ex.: If you have selected "USER" previously.

- 3 Select the sound mode you want.**



Each time you press the button, the sound modes changes as follows:

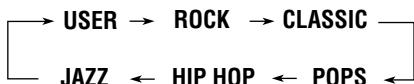

Ex.: If you select "ROCK."

Indication	For:	Preset values		
		BASS	TRE	BBE ^{II}
USER	(Flat sound)	00	00	BBE OFF
ROCK	Rock or disco music	+03	+01	BBE 2
CLASSIC	Classical music	+01	-02	BBE OFF
POPS	Light music	+04	+01	BBE OFF
HIP HOP	Funk or Rap music	+02	00	BBE 2
JAZZ	Jazz music	+02	+03	BBE OFF

Notes:

- You can adjust each sound mode to your preference, and store it in memory.
If you want to adjust and store your original sound mode, see "Storing your own sound adjustments" on page 17.
- To adjust the bass and treble reinforcement levels or to turn on/off the BBE^{II} function temporarily, see page 15.

To store a sound mode separately for each playback source (CEQ Link)

You can select a sound mode and store it in memory. It will be recalled every time you select the same source and will be shown on the display.

A sound mode can be stored for each of the following sources — FM1, FM2, FM3, AM, CD and external components.

- See also "Changing the general settings (PSM)" on page 18.

1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display.

2 Press \wedge \triangleright or \blacktriangleleft \blacktriangleright to select "CEQ LINK" (Custom Equalization Link).

3 Turn the control dial to select "LINK ON."

4 Press SEL (S) to finish the setting.

To cancel CEQ Link, repeat the same procedure and select "LINK OFF" in step 3.

Note:

When you change the "CEQ LINK", sound mode (CEQ) is automatically reset to "USER".



• When “CEQ LINK” is set to “LINK ON”

The selected sound mode can be stored in memory for the current source.

Each time you change to the same source, the same sound mode is also recalled and shown on the display. The CEQ indicator also flashes.

• When “CEQ LINK” is set to “LINK OFF”

The selected sound mode effect applies to any source.

Storing your own sound adjustments

You can adjust the sound modes to your preference and store your own adjustments in memory.

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.

1 Press BAND MODE (M) to make the number buttons work as different function buttons.



2 Activate custom equalizer (CEQ).



The last selected sound mode is recalled and applied to the current sound.



Ex.: If you have selected “POPS” previously.

3 Select the sound mode you want.



Each time you press the button, the sound modes changes as follows:




4 Select the items you want to adjust.

- See page 15 for details.




5 Adjust the level.

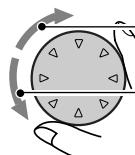

To increase the level.

To decrease the level.

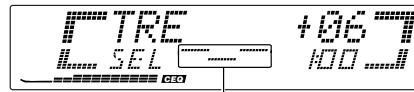

Equalization pattern changes as you adjust the bass or treble.

Ex.: When you adjust “TRE.”

6 Repeat steps 4 and 5 to adjust the other items.

- To adjust the BBE^{II} level, see page 15.

7 Repeat the same procedure to store other sound modes.

To reset to the factory settings, repeat the same procedure and reassign the preset values listed in the table on page 16.



OTHER MAIN FUNCTIONS

Changing the general settings (PSM)

You can change the items listed on the next page by using the PSM (Preferred Setting Mode) control.


Basic Procedure

- 1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display. (See page 19.)**




Ex.: If you have selected "DEMO MODE" previously.

- 2 Select the PSM item you want to adjust. (See page 19.)**

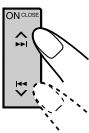

Ex.: When selecting "BEEP SW".

- 3 Adjust the PSM item selected above.**

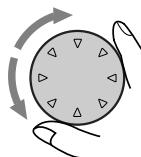


Ex.: If you have turn the control dial counterclockwise, "BEEP OFF" will appear on the display.

- 4 Repeat steps 2 and 3 to adjust the other PSM items if necessary.**

- 5 Finish the setting.**



Preferred Setting Mode (PSM) items

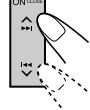1		2		3 Set... Counter-clockwise Clockwise	Factory-preset settings	See page
DEMO MODE	Demo mode	DEMO OFF	DEMO ON	DEMO ON	8	
CLOCK HOUR	Hour adjustment	Back	Advance	1:00	8	
CLOCK MIN	Minute adjustment	Back	Advance			
CEQ LINK	Custom equalizer linkage	LINK OFF	LINK ON	LINK OFF	20	
CLOCK DISP	Clock display	CLOCK OFF	CLOCK ON	CLOCK ON	20	
LEVEL	Level display	5 types (see page 20)		NORMAL	20	
DIMMER	Dimmer mode	AUTO ↑ ON	↔ OFF ↔	AUTO	20	
CRUISE	Audio cruise	CRUISE 1 ↔ CRUISE 2 ↑↔ CRUISE OFF ↔		CRUISE OFF	22	
+OR- SET*	Idling speed	—		800 rpm	23	
BOOST*	Boost	BOOST 01 – 15		BOOST 05	22	
BEEP SW	Key-touch tone	BEEP OFF	BEEP ON	BEEP ON	20	
CONTRAST	Display contrast	CONTRAST 1 – 10		CONTRAST 5	20	
SCROLL	Scroll mode	ONCE ↑ OFF	↔ AUTO ↔	ONCE	20	
WooferFreq (only for KD-LX333)	Subwoofer cutoff frequency	FREQ LOW ↔ FREQ MID ↑↔ FREQ HIGH ↔		FREQ MID	21	
AREA	Channel interval	AREA US	AREA EU	AREA US	21	
LINE ADJ (only for KD-LX333)	Line input level adjustment	LINE ADJ 00 – 05		LINE ADJ 00	21	
EXT INPUT (only for KD-LX111)	External component	CD CHANGER	LINE INPUT	CD CHANGER	21	
FLAT PANEL	Flat panel	FLAT OFF	FLAT ON	FLAT OFF	21	

4 Press SEL (S) to finish the setting.

* When you select "CRUISE 1" or "CRUISE 2" for Audio Cruise Mode, you can adjust these items.

To set Custom Equalizer Link — CEQ LINK

A different sound mode (CEQ) can be stored in memory for each source so that you can change the sound modes simply by changing the sources. When shipped from the factory, this mode is deactivated.

- **LINK ON:** Different sound modes for different sources.
- **LINK OFF:** One sound mode for all sources.

To set the clock display — CLOCK DISP

You can set the clock to be shown on the display when the unit is turned on. When shipped from the factory, the clock is set to be shown on the display.

- **CLOCK ON:** Clock display is turned on.
- **CLOCK OFF:** Clock display is turned off.

To select the level meter — LEVEL

You can select the level meter display according to your preference. When shipped from the factory, "NORMAL" is selected.

- **NORMAL:** Normal audio level meter will be shown on both sides of the display.
- **SIDE:** Display illumination moves from inside to outside.
- **FULL:** Level meter is fully shown on the main display and display illumination starts.
- **OFF:** Level meter disappears but the center display illuminates.
- **ALL OFF:** Level meter and center display turns off.

To select the dimmer mode — DIMMER

When you turn on the car head lights, the display automatically dims (Auto Dimmer). When shipped from the factory, Auto Dimmer mode is activated.

- **AUTO:** Activates Auto Dimmer.
- **OFF:** Cancels Auto Dimmer.
- **ON:** Always dims the display.

Note on Auto Dimmer:

Auto Dimmer equipped with this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming.

In this case, set the dimmer mode to "ON" or "OFF."

To turn on/off the key-touch tone — BEEP SW

You can deactivate the key-touch tone if you do not want it to beep each time you press a button. When shipped from the factory, the key-touch tone is activated.

- **BEEP ON:** Activates the key-touch tone.
- **BEEP OFF:** Deactivates the key-touch tone.

To adjust the display contrast level — CONTRAST

You can adjust the display contrast level among "1" (dark) to "10" (bright). When shipped from the factory, the display contrast level is set at level "5."

To select the scroll mode — SCROLL

You can select the scroll mode for the disc information if it consists of more than 10 characters. When shipped from the factory, Auto Scroll mode is set to "ONCE."

- **ONCE:** Scrolls only once.
- **AUTO:** Repeats the scroll (in 5-second intervals).
- **OFF:** Cancels Auto Scroll.

Note:

Even if the scroll mode is set to "OFF," you can scroll the display by pressing DISP (D) for more than 1 second.

To select the subwoofer cutoff frequency

— WooferFreq (only for KD-LX333)

When a subwoofer is connected to this unit, select an appropriate cutoff frequency level for your subwoofer. When shipped from the factory, the subwoofer cutoff frequency is set to "FREQ MID."

- FREQ LOW: Frequencies higher than 50 Hz are cut off to the subwoofer.
- FREQ MID: Frequencies higher than 80 Hz are cut off to the subwoofer.
- FREQ HIGH: Frequencies higher than 120 Hz are cut off to the subwoofer.

To change the AM/FM channel intervals

— AREA

When this unit is shipped from the factory, the channel intervals are set to 10 kHz for AM and 200 kHz for FM (AREA US settings).

You will have to change the channel intervals when using this unit in an area other than North America and South America.

- AREA EU: Select this when using this unit in an area other than North and South America.
(9 kHz for AM and 50 kHz (for manual tuning) / 100 kHz (for searching) for FM)
- AREA US: Select this when using this unit in North or South America.
(10 kHz for AM and 200 kHz for FM)

Note:

If the channel intervals settings are changed, the following will occur.

- The names assigned to the stations will be erased from memory. To reassign the names, see "Assigning names to the sources" on pages 23 and 24.

To adjust the line input level — LINE ADJ

— only for KD-LX333)

Adjust the line input level properly when an external component is connected to the LINE INPUT plugs. When shipped from the factory, the line input level is set at level "00."

If the input level of the connected component is not high enough, increase the input level properly. Without adjusting the line input level, you may be surprised at a loud sound when you change from the external component to another source.

To select the external component to use

— EXT INPUT (only for KD-LX111)

You can connect the external component to the CD changer jack on the rear using the Line Input Adaptor KS-U57 (not supplied).

To use the external component as the playback source through this unit, you need to select which component – CD changer or external component – to use. When shipped from the factory, CD changer is selected as the external component.

- LINE INPUT: To use the external component other than CD changer.
- CD CHANGER: To use the CD changer.

Note:

For connecting the Line Input Adaptor KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).

To make the front panel look flat (hiding the control panel) — FLAT PANEL

When operating the receiver using the remote control, you can hide the control panel to make the front panel look flat. When shipped from the factory, "FLAT OFF" is selected.

- FLAT ON: The control panel will not come out when you turn on the unit. To use the control panel, press $\blacktriangleleft\triangleright\blacktriangledown\triangleright$ so that the control panel comes out. If no operation is done for about 10 seconds, it automatically goes back into the receiver.
- FLAT OFF: You can use the control panel normally.

Note:

When "FLAT ON" is selected, you can eject a CD by holding $\blacktriangleleft\triangleright\blacktriangledown\triangleright$.

Controlling the volume automatically (Audio Cruise)

You can select the proper cruise mode for your car.

This unit changes the volume level automatically (at 3 possible levels) based on the driving speed of your car by detecting the alternator's generating frequency (Audio Cruise).


If you want to use this mode, follow the procedure below. When shipped from the factory, this mode is set to "CRUISE OFF".

- CRUISE 1: Select this if your car is relatively quiet.
 - CRUISE 2: Select this if your car is relatively loud.
- The volume increase rate is twice as much as that of the CRUISE 1 setting.
- CRUISE OFF: Cancels Audio Cruise.

1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display. (See page 19.)




2 Select "CRUISE" if not shown on the display.

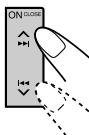

3 Select the desired setting.

As you turn the control dial, the Audio Cruise mode changes as follows:

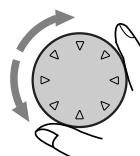

4 Finish the setting.



To adjust the volume increase rate

If you find Audio Cruise increases (or decreases) the volume either too much or too little as the driving speed changes, you can adjust the increase rate by changing the boost level. To change it, follow the procedure below.

- See also "Changing the general settings (PSM)" on page 18.

1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display.

2 Press ▲▶▶ or ▶◀◀▼ repeatedly until "CRUISE" appears on the display.

3 Turn the control dial to select either "CRUISE 1" or "CRUISE 2."

4 Press ▲▶▶ or ▶◀◀▼ to select "BOOST". The current boost level also appears on the display.

5 Turn the control dial to select the desired boost level (among 01 to 15).

6 Press SEL (S) to finish the setting.

If Audio Cruise does not function correctly

You may need to store the idling speed into memory to make Audio Cruise function correctly.

NOTICE that a number of factors, such as electric power steering, wipers, power windows, air conditioner, etc. do generate noises and, as a result, may cause Audio Cruise not to function correctly. If this is the main cause of malfunction, connect the memory backup lead (yellow lead) directly to the car battery to prevent these noises from affecting Audio Cruise.

- 1 Start the engine and let it warm up.
- 2 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display.
- 3 Press $\Delta \gg \gg$ or $\ll \ll \nabla$ repeatedly until "CRUISE" appears on the display.
- 4 Turn the control dial to select either "CRUISE 1" or "CRUISE 2".
- 5 Press $\Delta \gg \gg$ (or $\ll \ll \nabla$) to select "+OR- SET".
- 6 Turn the control dial to select the desired idling speed.
- 7 Press SEL (S) to finish the setting.

When the setting is complete, the unit automatically checks to see if Audio Cruise functions correctly with this new idling setting. If it does not function correctly, Audio Cruise is canceled automatically and the idling setting becomes invalid.

- If this happens, see the **NOTICE** above.

Assigning names to the sources

You can assign names to station frequencies, CDs and the external component. After assigning a name, it will appear on the display when you select the source.


Sources	Maximum number of the characters
Station frequencies	Up to 10 characters (up to 25 station frequencies including both FM and AM)
CDs* and CD changer*	Up to 32 characters (up to 40 discs)
External component	Up to 10 characters

* You cannot assign a name to a CD Text.


- 1 Select a source you want to assign a name to.



- 2 Press and hold SEL (S) for more than 2 seconds while pressing DISP (D).

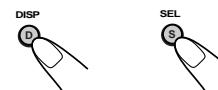

Ex.: When you select a station frequency as the source.

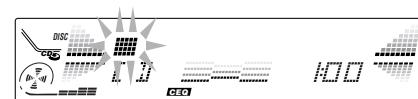

Ex.: When you select the CD as the source.




Ex.: When you select the external component as the source.


3 Select the character set you want while "##" is flashing.



Each time you press the button, the character set changes as follows:

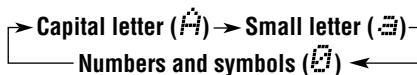


4 Select a character.

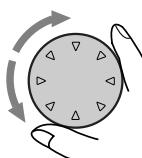

- See right column for available characters.

5 Move the cursor to the next (or previous) character position.

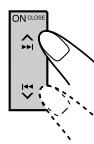

6 Repeat steps 3 to 5 until you finish inputting the name.

7 Press the button while the last selected character is flashing.



The input name is stored in memory.

To erase the input characters

Insert spaces using the same procedure described above.

Available characters

Capital letters

A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	space			

Small letters

a	b	c	d	e	f	g	h	i	j
k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	space			

Numbers and symbols

0	1	2	3	4	5	6	7	8	9
!	"	#	\$	%	&	'	()	*
+	,	-	.	/	:	;	<	=	>
?	@	-	`	space					

Notes:

- When you try to assign a name to the 41st disc, "NAME FULL" appears on the display. (In this case, delete unwanted names before assignment.)
- When the CD changer is connected, you can assign names to CDs in the CD changer. These names can also be shown on the display if you insert the CDs in this unit.


CD CHANGER OPERATIONS



ENGLISH



Press ON CLOSE to turn on the power.

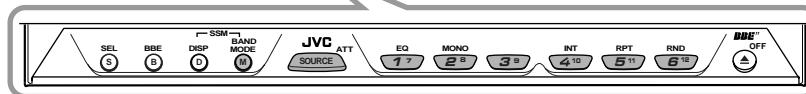

We recommend that you use one of the CH-X series with your unit.

If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If no magazine is loaded in the CD changer, "NO MAG" appears on the display. If this happens, insert the magazine in the CD changer.
- If "RESET 1" – "RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs


Select the CD automatic changer (CD-CH).




Each time you press the button, the source changes as described on page 7.

Playback starts from the first track of the first disc.

All tracks of all discs are played back.

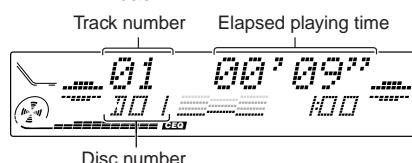

To fast-forward or reverse the track

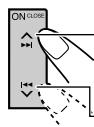


Press and hold **▲ ▶▶**, while playing a CD, to fast-forward the track.




Press and hold **◀◀ ▼**, while playing a CD, to reverse the track.

To go to the next tracks or the previous tracks

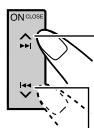

Press **▶▶** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.

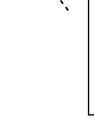


Press **◀◀** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

To go to a particular disc directly

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).



- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

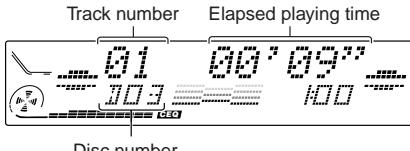

Ex.: When disc number 3 is selected.

To show the CD Text information

This is possible only when connecting a JVC CD automatic changer equipped with CD Text reading capability.

See "Playing a CD Text" on page 14.

Selecting CD playback modes


- There is a time limit in doing the following procedure. If the setting is cancelled before you finish, start from step 1 again.

To play back tracks at random (Random Play)



- 1 Press BAND MODE (M) while playing a CD.
"MODE" appears on the display.

- 2 Press RND (random), while "MODE" is still on the display, so that the RND indicator lights up on the display.
Each time you press the button, CD random play mode changes as follows:

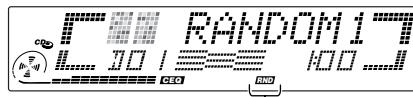


RND indicator



Mode	RND Indicator	Plays at random
RANDOM1	Lights.	All tracks of the current disc, then the tracks of the next disc, and so on.
RANDOM2	Flashes.	All tracks of all discs inserted in the magazine.



To play back tracks repeatedly (Repeat Play)

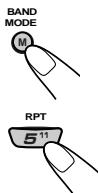

- 1 Press BAND MODE (M) while playing a CD.
“MODE” appears on the display.
- 2 Press RPT (repeat), while “MODE” is still on the display, so that the RPT indicator lights up on the display.
Each time you press the button, CD repeat play mode changes as follows:

Track number of the currently playing track




RPT indicator




Mode	RPT Indicator	Plays repeatedly
REPEAT1	Lights.	The current track (or specified track).
REPEAT2	Flashes.	All tracks of the current disc (or specified disc).

To play back only intros (Intro Scan)

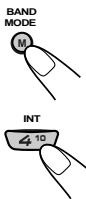

- 1 Press BAND MODE (M) while playing a CD.
“MODE” appears on the display.
- 2 Press INT (intro scan), while “MODE” is still on the display. Each time you press the button, CD intro scan mode changes as follows:

Track number of the currently playing track

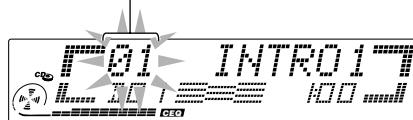


Mode	Indication	Plays the beginnings (15 seconds)
INTRO1	Track number flashes.	Of all tracks on all inserted discs.
INTRO2	Disc number flashes.	Of the first track on inserted disc.




EXTERNAL COMPONENT OPERATIONS

ENGLISH

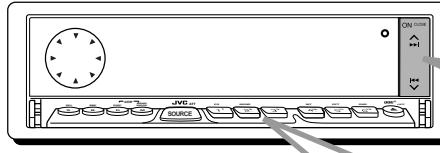

Press ON CLOSE to turn on the power.

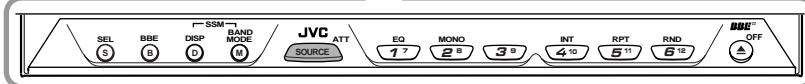

Playing an external component

When connecting an external component, you can select the component as the sound source.

Notes for KD-LX333:

- For the external component connection, see the Installation/Connection Manual (separate volume).
- If the input level of the external component connected to the LINE INPUT plug is not high enough, increase the input level properly. Without adjusting the input level, you may be surprised at a loud sound when you change the source from the external component to another. (See "To adjust the line input level — LINE ADJ" on page 21.)

Notes for KD-LX111:

- For connecting the external component, you need to use the Line Input Adaptor KS-U57 (not supplied). See the Installation/Connection Manual (separate volume).
- Before operating the external component using the following procedure, select the external input correctly. (See "To select the external component to use — EXT INPUT" on page 21.)

Using a subwoofer

This section is only for KD-LX333.

By connecting a subwoofer to the SUBWOOFER OUT plugs on the rear, you can enjoy enhanced bass sounds and a more realistic theater atmosphere in your car.

- Refer also to the instructions supplied with your subwoofer.

When a subwoofer is connected to this unit, do the following as required.

To set the subwoofer cutoff frequency, see "To select the subwoofer cutoff frequency — WooferFreq" on page 21.

To adjust the subwoofer output volume, see "Adjusting the sound" on page 15.

1 Select the external component.



Each time you press the button, the source changes as described on page 7.

2 Operate the external component.

TROUBLESHOOTING



What appears to be trouble is not always serious. Check the following points before calling a service centre.

ENGLISH

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving on rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• CD-R/CD-RW cannot be played back. • Tracks on the CD-R/CD-RW cannot be skipped.	CD-R/CD-RW is not finalized.	<ul style="list-style-type: none"> Insert a finalized CD-R/CD-RW. Finalize the CD-R/CD-RW with the component which you used for recording.
• "EJECT ERR" appears on the display and CD cannot be ejected.	The CD player may function incorrectly.	Press and hold for more than 5 seconds.
• No message appears on the display but CD cannot be ejected.		While holding , press the reset button. Release the reset button, then release . (Be careful not to drop the CD when ejecting.)
• Sound cannot be heard from the speakers.	The volume level is set to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• "NO DISC" appears on the display.	No CD is in the magazine.	Insert CD.
• "RESET 8" appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• "RESET 1" – "RESET 7" appears on the display.	_____	Press the reset button of the CD changer.
• When "ERR 20" to "ERR 40" appears on the display.	There is something blocking the control cover movement.	Press the reset button on the front panel. (See page 2.) If the reset button does not work, check the Installation/Connection Manual (separate volume). (Ex.: You have used a longer screws than specified.)
• This unit does not work at all. • The CD changer does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the front panel. (See page 2.)



MAINTENANCE

Handling CDs

This unit has been designed to reproduce the CDs bearing the following marks.




You can play back your original CD-Rs (Recordable) and CD-RWs (Rewritable) on this receiver.

This unit is not compatible with MP3.

How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

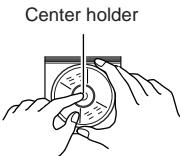


When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.


To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.

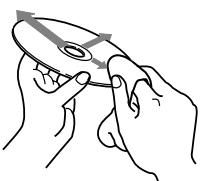

To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD. To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

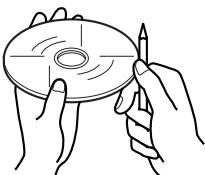

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

When playing a CD-R or CD-RW

User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized."

- You can play back your original CD-Rs or CD-RWs recorded in music CD format. (However, they may not be played back depending on their characteristics or recording conditions.)
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player's lens is dirty.
- CD-Rs or CD-RWs are susceptible to high temperatures or high humidity; so do not leave them inside your car.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.)

CAUTIONS:

- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape – like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 50 W per channel

Rear: 50 W per channel

Continuous Power Output (RMS):

Front: 19 W per channel into 4 Ω, 40 Hz
to 20 000 Hz at no more than
0.8% total harmonic distortion.

Rear: 19 W per channel into 4 Ω, 40 Hz
to 20 000 Hz at no more than
0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Tone Control Range:

Bass: ±10 dB at 100 Hz

Treble: ±10 dB at 10 kHz

Frequency Response: 40 Hz to 20 000 Hz

Signal-to-Noise Ratio: 70 dB

Line-In Level/Impedance (only for KD-LX333):

1.5 V/20 kΩ load

Line-Out Level/Impedance:

KD-LX333: 4.0 V/20 kΩ load (full scale)

KD-LX111: 2.0 V/20 kΩ load (full scale)

Output Impedance: 1 kΩ

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 107.9 MHz
(with channel interval set to 200 kHz)

87.5 MHz to 108.0 MHz
(with channel interval set to 50 kHz)

AM: 530 kHz to 1 710 kHz
(with channel interval set to 10 kHz)
531 kHz to 1 602 kHz
(with channel interval set to 9 kHz)

[FM Tuner]

Usable Sensitivity:

11.3 dBf (1.0 μV/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μV/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μV

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical
pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 V

(11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:
0°C to +40°C (32°F to 104°F)

Dimensions (W × H × D):

Installation Size:

182 mm × 52 mm × 160 mm
(7-3/16" × 2-1/16" × 6-5/16")


Panel Size:

188 mm × 58 mm × 8 mm
(7-7/16" × 2-5/16" × 3/8")

Mass: 1.8 kg (4.0 lbs)
(excluding accessories)

Design and specifications subject to change without notice.

If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.

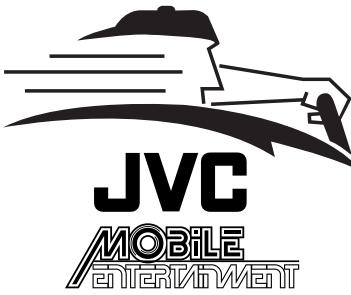

<http://www.jvcmobile.com>

*Visit us on-line for
Technical Support & Customer Satisfaction Survey.*

US RESIDENTS ONLY

**Having TROUBLE with operation?
Please reset your unit**

Refer to page of How to Reset
Still having trouble??

USA ONLY

Call 1-800-252-5722

<http://www.jvc.com>

We can help you!

JVC

VICTOR COMPANY OF JAPAN, LIMITED





EN, SP, FR



1201MNMMDDTTKR

Cancelling the demonstration / Cancelación de la demostración / Annulation de la démonstration

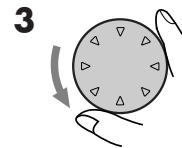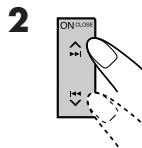

ENGLISH

When shipped from the factory, demonstration has been activated, and starts automatically when no operations are done for about 20 seconds.

- It is recommended to cancel the demonstration before you use the unit for the first time.

To cancel the demonstration, follow the procedure below.

- 1 Press and hold SEL (S) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Select "DEMO MODE" if not shown on the display.
- 3 Select "DEMO OFF".
- 4 Finish the setting.

To activate the demonstration again, repeat the same procedure and select "DEMO ON" in step 3.

ESPAÑOL

La unidad se expide de fábrica con la demostración activada para que se inicie automáticamente tras un período de inactividad de 20 segundos.

- Se recomienda cancelar la demostración antes de usar la unidad por primera vez.

Para cancelar la demostración, siga el procedimiento de abajo.

- 1 Pulse y mantenga pulsado SEL (S) durante más de 2 segundos para que aparezca uno de los ítems de PSM en la indicación.
- 2 Seleccione "DEMO MODE" si no está visualizado en la indicación.
- 3 Seleccione "DEMO OFF".
- 4 Finalice el ajuste.

Para activar la demostración otra vez, repita el mismo procedimiento y seleccione "DEMO ON" en el paso 3.

FRANÇAIS

À l'expédition de l'usine, la démonstration est en service et celle-ci démarre automatiquement quand aucune opération n'est effectuée pendant environ 20 secondes.

- Il est recommandé d'annuler la démonstration avant d'utiliser l'appareil pour la première fois.

Pour annuler la démonstration, suivez la procédure ci-dessous.

- 1 Maintenez pressée SEL (S) pendant plus de 2 secondes de façon que l'un des éléments PSM apparaisse sur l'affichage.
- 2 Choisissez "DEMO MODE" s'il n'apparaît pas sur l'affichage.
- 3 Choisissez "DEMO OFF".
- 4 Terminez le réglage.

Pour mettre de nouveau la démonstration en service, répétez la même procédure et choisissez "DEMO ON" à l'étape 3.




CAUTION / ATENCION / ATTENTION

ENGLISH

To install this unit, attach the trim plate to the unit first, then fit the unit into the mounting sleeve by pressing the four corners of the trim plate.

DO NOT press the panel (shaded in the illustration); otherwise the panel may become unable to open or close.

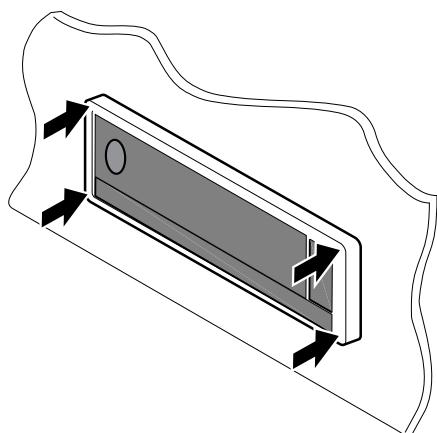

ESPAÑOL

Para instalar esta unidad, en primer lugar fije la placa de guarnición en la unidad y póngala en la manga de montaje presionando las cuatro esquinas de la placa de guarnición. NO presione el panel (rayado en la ilustración) pues podría suceder que sea imposible abrirla o cerrarla después.

FRANÇAIS

Pour installer cet appareil, fixez d'abord la plaque d'assemblage à l'appareil, puis ajustez l'appareil dans le manchon en appuyant sur les quatre coins de la plaque d'assemblage. N'APPUYEZ PAS sur le panneau (partie ombrée sur l'illustration); sinon le panneau risque de ne pas pouvoir s'ouvrir ou se fermer.

Notice the following information will help you solve the problems.
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.


- **After installing the unit**
→ Follow the procedure **A** described below.
- **If the unit does not operate**
→ Follow the procedure **A** described below.
- **If a CD is not ejected from the loading slot**
 - ① “EJECT ERR” or “EJECT ERROR” appears on the display
→ Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)
 - ② No message appears on the display
→ Follow the procedure **C** described below.
- **If a CD is not recognized (the source does not change to the CD) even though there is a CD in the loading slot**
→ Follow the procedure **C** described below. (If the procedure **C** does not work, try the procedure **A**.)

A To reset the microcomputer

Press the reset button on the front panel using a ball-point pen or a similar tool.
This will reset the built-in microcomputer.


NOTE: Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

Reset button

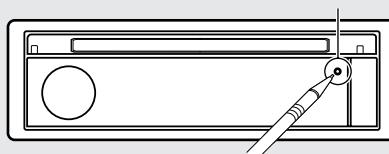

B To eject a CD by force


Press and hold $\blacktriangleleft \triangleright \blacktriangledown$ button until CD ejects.

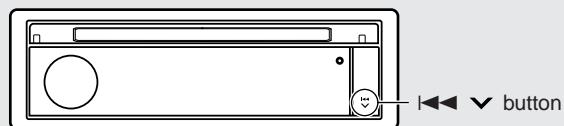


C To eject a CD by force

While holding $\wedge \blacktriangleright \lrcorner$, press the reset button. Release the reset button, then release $\wedge \blacktriangleright \lrcorner$. (Be careful not to drop the CD when ejecting.)

Reset button

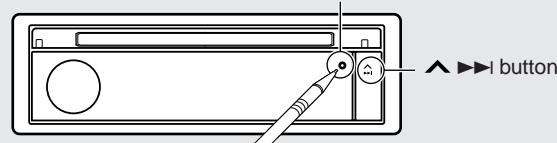

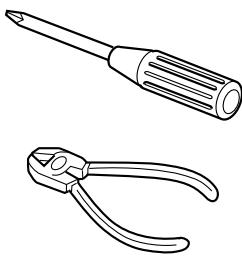

ENGLISH

- This unit is designed to operate on 12 V DC, NEGATIVE ground electrical systems.

INSTALLATION (IN-DASH MOUNTING)

The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

- Remove the trim plate.
 - Remove the sleeve after disengaging the sleeve locks.
 - Stand the unit.
 - Note:** When you stand the unit, be careful not to damage the fuse on the rear.
 - Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.
 - Remove the sleeve.
 - Note:** Be sure to keep the handles for future use after installing the unit.
 - Attach the trim plate.
 - Install the sleeve into the dashboard.
 - * After the sleeve is correctly installed into the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.
 - Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.
 - Do the required electrical connections.
 - Slide the unit into the sleeve until it is locked by pressing the four corners of the trim plate.
- Note:** Do not press the panel (shaded in the illustration); otherwise the panel may become unable to open or close.

ESPAÑOL

- Esta unidad está diseñada para funcionar con 12 V de CC, con sistemas eléctricos de masa NEGATIVA.

INSTALACION (MONTAJE EN EL TABLERO DE INSTRUMENTOS)

La siguiente ilustración muestra una instalación típica. Sin embargo usted deberá efectuar los ajustes correspondientes a su automóvil. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.

- Retire la placa de guarnición.
 - Retire la cubierta después de desenganchar los retenes de la cubierta.
 - Ponga la unidad vertical.
 - Nota:** Al poner la unidad vertical, tenga cuidado de no dañar el fusible provisto en la parte posterior.
 - Inserte las dos manijas entre la unidad y la cubierta tal como en la ilustración y desenganche los retenes de la cubierta.
 - Retire la cubierta.
 - Nota:** Despues de instalar la unidad, asegúrese de guardar las manijas para uso futuro.
 - Instale la placa de guarnición.
 - Instale la cubierta en el tablero de instrumentos.
 - * Despues de que la cubierta esté correctamente instalada en el tablero de instrumentos, doble las lengüetas correspondientes para sostener la cubierta firmemente en su lugar, tal como se muestra.
 - Fije el perno de montaje en la parte trasera del cuerpo de la unidad y coloque el cojín de goma sobre el extremo del perno.
 - Realice las conexiones eléctricas requeridas.
 - Deslice la unidad dentro de la cubierta hasta que quede bloqueada al presionar contra las cuatro esquinas de la placa de guarnición.
- Nota:** No presione el panel (sombreado en la ilustración); de lo contrario, podría suceder que no se pueda realizar su apertura o cierre.

FRANÇAIS


- Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 V à masse NEGATIVE.

INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)


L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

- Retirer la plaque d'assemblage.
 - Libérer les verrous du manchon et retirer le manchon.
 - Poser l'appareil à la verticale.
 - Remarque:** Lorsque vous mettez l'appareil à la verticale, faire attention de ne pas endommager le fusible situé sur l'arrière.
 - Insérer les 2 poignées entre l'appareil et le manchon comme indiqué pour désengagé les verrous de manchon.
 - Retirer le manchon.
 - Remarque:** S'assurer de garder les poignées pour une utilisation ultérieure, après l'installation de l'appareil.
 - Fixez la plaque d'assemblage.
 - Installer le manchon dans le tableau de bord.
 - * Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.
 - Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.
 - Réalisez les connexions électriques.
 - Faites glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé en appuyant sur les quatre coins de la plaque d'assemblage.
- Remarque:** N'appuyez pas sur le panneau (ombré sur l'illustration); sinon le panneau risquerait de ne pas pouvoir s'ouvrir ou se fermer.




1

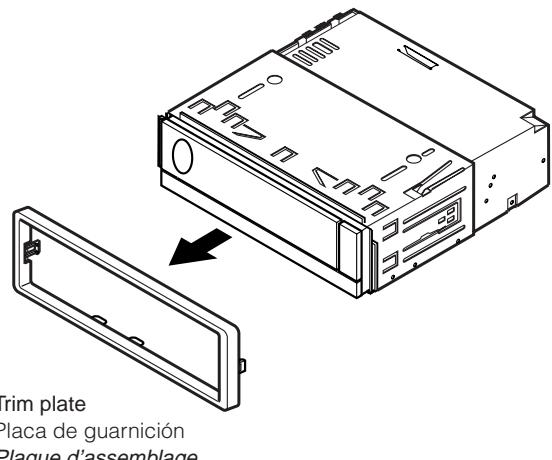

2

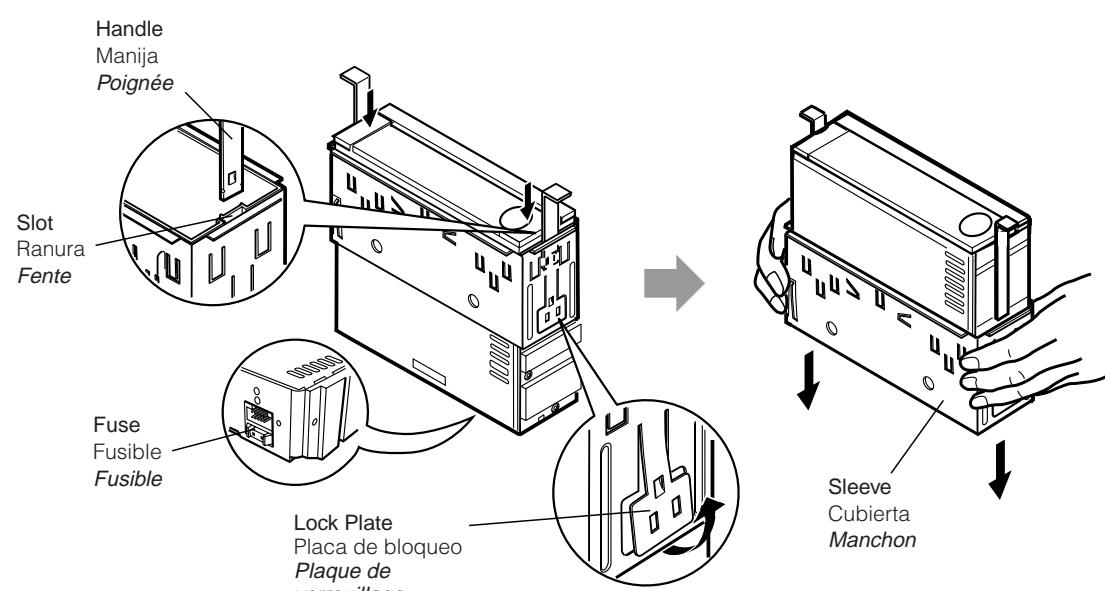


3

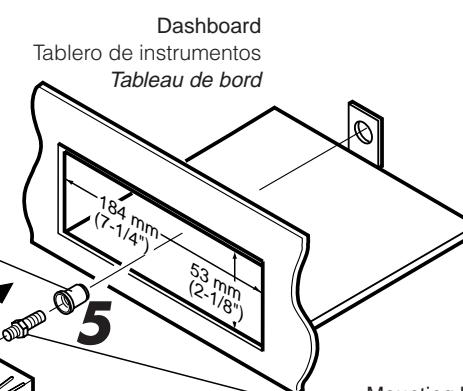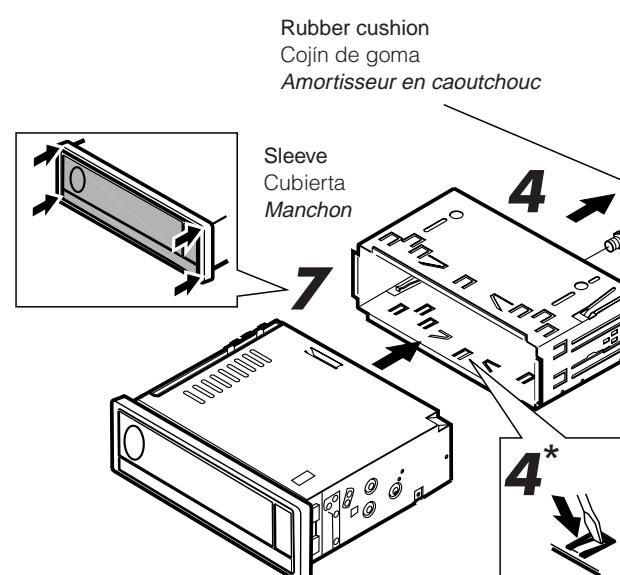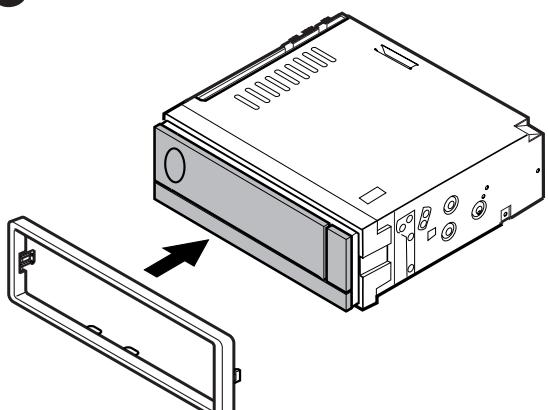

6

See "ELECTRICAL CONNECTIONS."
Véase "CONEXIONES ELECTRICAS".
Référez-vous "RACCORDEMENTS ELECTRIQUES".

- When using the optional stay
- Cuando emplea un soporte opcional
- Lors de l'utilisation du hauban en option

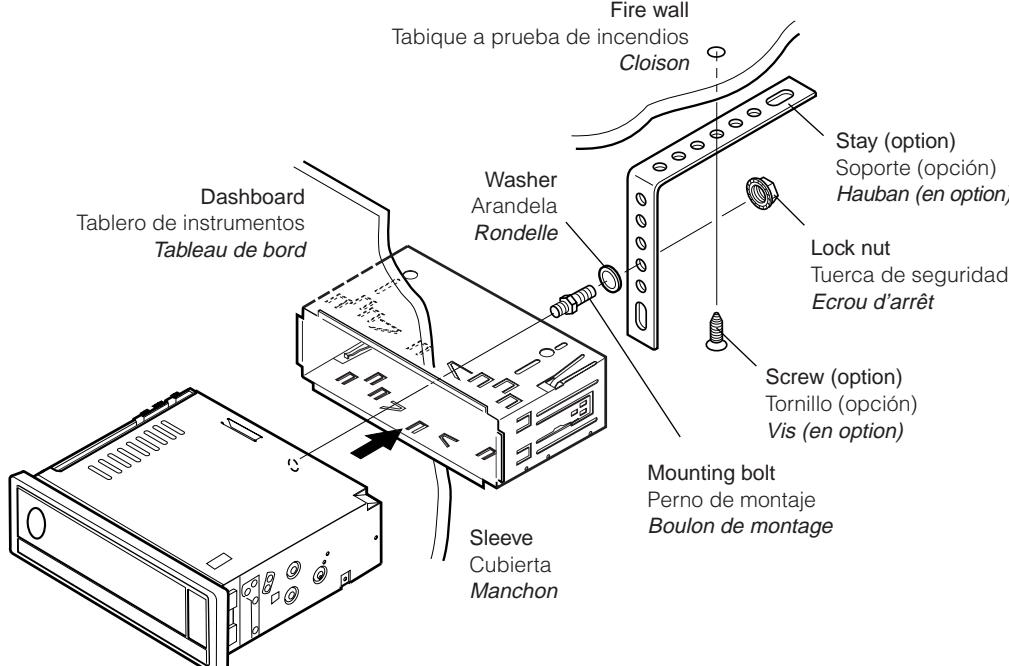


Removing the unit

- Before removing the unit, release the rear section.
- 1 Remove the trim plate.
 - 2 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. (Be sure to keep the handles after installing it.)

Extracción de la unidad


- Antes de extraer la unidad, libere la sección trasera.

 - 1 Retire la placa de guarnición.
 - 2 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. (Asegúrese de conservar las manijas después de instalarlo.)

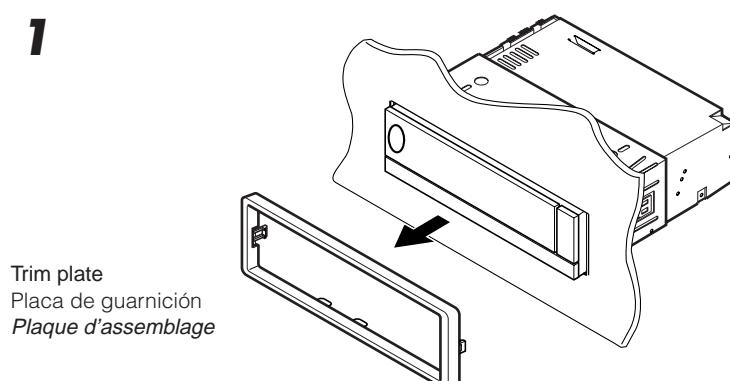

- When installing the unit without using the sleeve
- Instalación de la unidad sin utilizar la cubierta
- Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota for example, first remove the car radio and install the unit in its place. En un Toyota por ejemplo, primero extraiga la radio del automóvil y luego instale la unidad en su lugar. Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

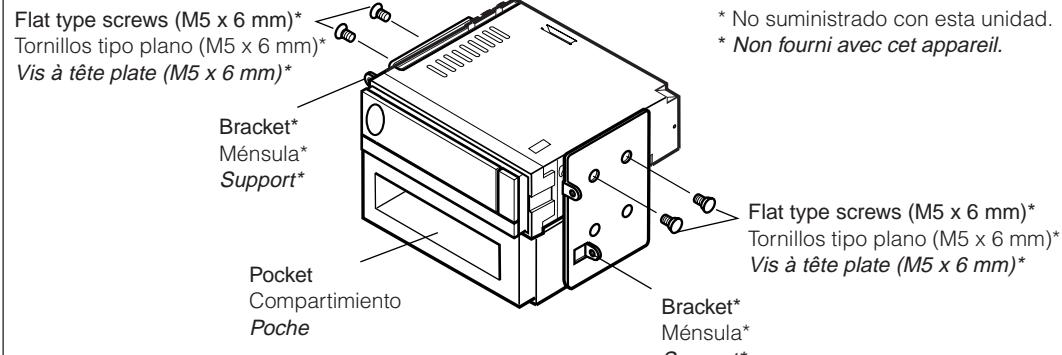

* Not included with this unit.
* No suministrado con esta unidad.
* Non fourni avec cet appareil.

Note: When installing the unit on the mounting bracket, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.


Nota: Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 6 mm de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

Remarque: Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

Retrait de l'appareil

- Avant de retirer l'appareil, libérer la section arrière.


 - 1 Retirer la plaque d'assemblage.
 - 2 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. (S'assurer de conserver les poignées après l'installation de l'appareil.)

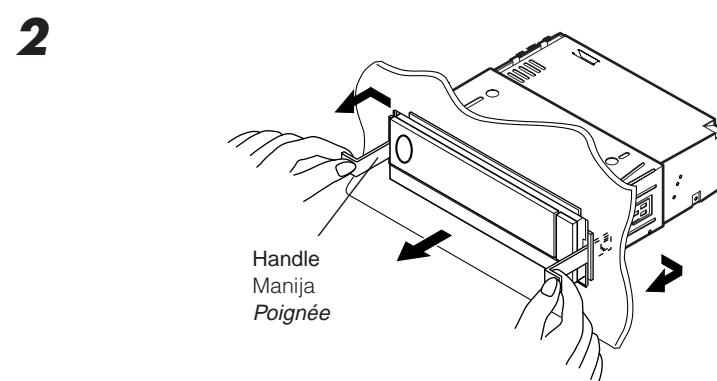

Parts list for installation and connection

The following parts are provided with this unit.

After checking them, please set them correctly.

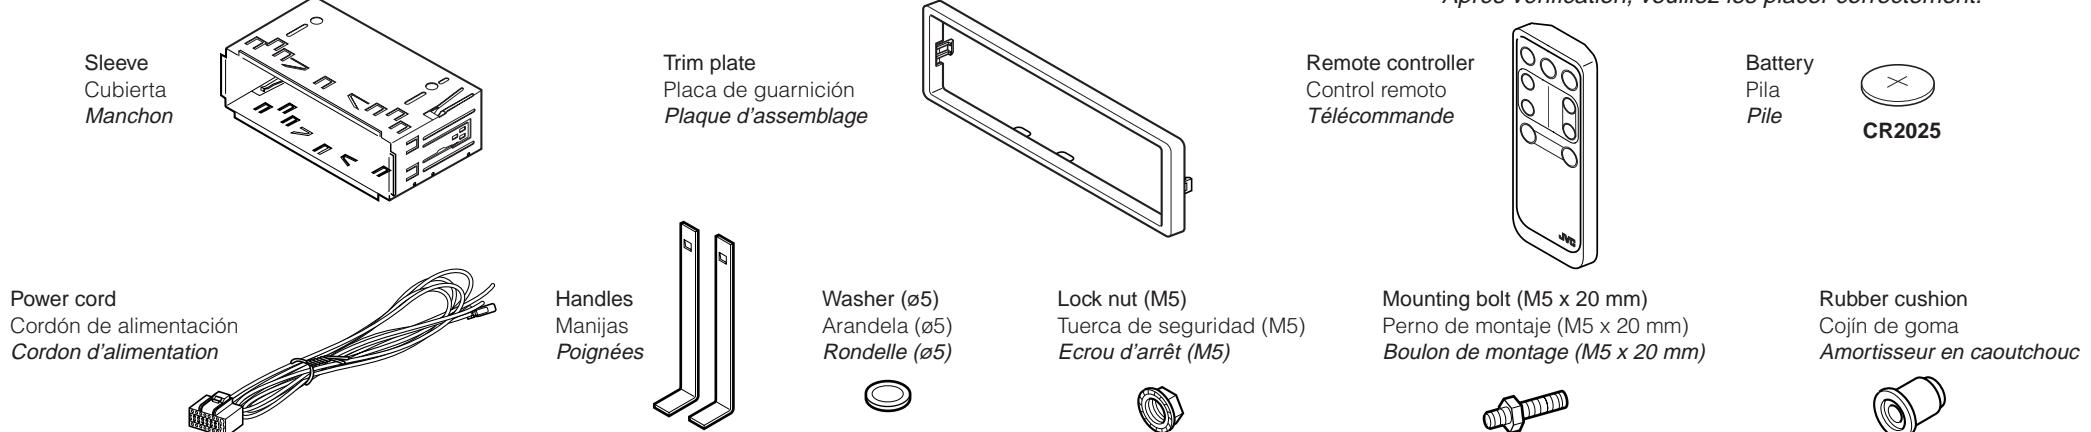


ELECTRICAL CONNECTIONS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Note:

This unit is designed to operate on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- If noise is a problem... This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's **rear ground terminal** (See connection diagram.) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC car audio dealer.
- Maximum input of the speakers should be more than 50 W at the rear and 50 W at the front, with an impedance of **4 Ω to 8 Ω**.
- Be sure to ground this unit to the car's chassis.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

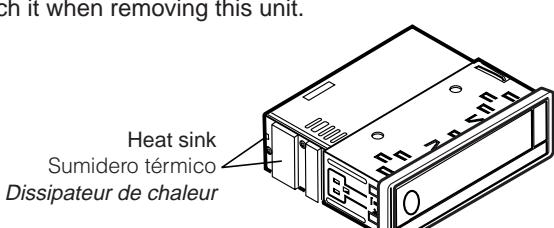

CONEXIONES ELECTRICAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad. Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

Nota:

Esta unidad está diseñada para funcionar con **12 V de CC, con sistemas eléctricos de masa NEGATIVA**. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Si el ruido fuese un problema... Esta unidad tiene un filtro de ruido en el circuito de alimentación. Sin embargo, en algunos vehículos, pueden producirse chasquidos u otros ruidos indeseados. En tal caso conecte el **terminal de tierra posterior** (Véase diagrama de conexión.) del receptor al chasis del automóvil, utilizando cordones más gruesos y cortos tales como alambre de cobre trenzado o de grueso calibre. Si el ruido persiste, consulte a su concesionario de JVC de equipos de audio para automóvil.
- La entrada máxima de los altavoces traseros debe ser mayor de 50 W y la de los delanteros de 50 W, con una impedancia de **4 Ω a 8 Ω**.
- Asegúrese de conectar esta unidad a tierra en el chasis del automóvil.
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

RACCORDEMENTS ELECTRIQUES

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Remarque:

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 V à masse NEGATIVE**. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème... Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la **borne arrière de masse** de l'appareil au châssis de la voiture (voir le schéma de raccordement) en utilisant des cordons les plus gros et les plus courts possibles telle qu'une barre de cuivre ou une tresse. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.
- La puissance admissible des enceintes doit être supérieure à 50 W à l'arrière et à 50 W l'avant, avec une impédance de **4 Ω à 8 Ω**.
- S'assurer de raccorder la mise à la masse de cet appareil au châssis de la voiture.
- Le dissipateur de chaleur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

ENGLISH

PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- Connect the black lead (ground), yellow lead (to car battery, constant 12 V), and red lead (to an accessory terminal) correctly.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
- If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, DO NOT connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
- If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
- If you are not sure of the speaker wiring of your car, consult your car dealer.

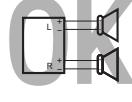
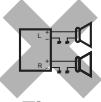
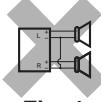


Fig. 1

Fig. 2

Fig. 3

ESPAÑOL


PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:

- NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.
- Conecte correctamente el conductor negro (a tierra), el conductor amarillo (a la batería del automóvil, 12 V constantes), y el conductor rojo (a un terminal de accesorio).
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.
- Si el conexionado de altavoz de su automóvil es como se indica en las Fig. 1 y Fig. 2 de abajo, NO conecte la unidad utilizando ese conexionado de altavoz original. Si lo hace, se producirán daños graves en la unidad.**
Vuelva a efectuar el conexionado de altavoz de manera que pueda conectar la unidad a los altavoces de la manera indicada en la Fig. 3.
- Si el conexionado de altavoz de su automóvil es como se indica en la Fig. 3, podrá conectar la unidad utilizando el conexionado de altavoz original de su automóvil.**
- Si tiene dudas sobre el conexionado de altavoz de su automóvil, consulte con su concesionario.

Connecting the leads / Conexión de los conductores / Raccordement des fils

Twist the core wires when connecting.
Retuerce los alambres de alma para conectarlos.


Torsader les âmes des fils en les raccordant.

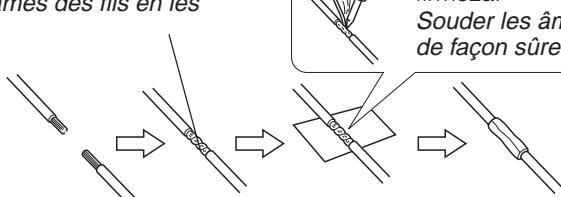

Solder the core wires to connect them securely.
Suelde los alambres de alma para conectarlos con firmeza.
Souder les âmes des fils pour les raccorder entre eux de façon sûre.

CAUTION / PRECAUCION / PRECAUTION:

- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante.

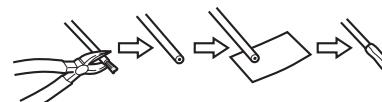

A Typical Connections / Conexiones típicas / Raccordements typiques

Before connecting: Check the wiring in the vehicle carefully not to fail in connecting this unit. Incorrect connection may cause serious damage to this unit.

1 Connect the colored leads of the power cord to the car battery, speakers and power antenna (if any) in the following sequence.

- ① Black: ground
- ② Yellow: to car battery (constant 12 V)
- ③ Red: to an accessory terminal
- ④ Blue with white stripe: to power antenna (200 mA max.)
- ⑤ Orange with white stripe: to car light control switch
- ⑥ Others: to speakers

2 Connect the antenna cord.

3 Finally connect the wiring harness to the unit.

Antes de la conexión: Verifique atentamente el conexionado del vehículo. Una conexión incorrecta podría producir daños graves en la unidad.

1 Conecte los conductores de color del cable de alimentación a la batería del automóvil, altavoces y antena motriz (si la hubiere) en la secuencia siguiente.

- ① Negro: a tierra
- ② Amarillo: a la batería del automóvil (12 V constantes)
- ③ Rojo: a un terminal de accesorio
- ④ Azul con rayas blancas: a la antena motriz (máx. 200 mA)
- ⑤ Naranja con rayas blancas: al interruptor de control de las luces del automóvil
- ⑥ Otros: a los altavoces

2 Conecte el cable de antena.

3 Por último, conecte el cable de alimentación a la unidad.


Avant de commencer la connexion: vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil.

1 Connectez les fils de couleur du cordon d'alimentation à la batterie de la voiture, aux enceintes et à l'antenne automatique (s'il y en a une) dans l'ordre suivant.

- ① Noir: à la masse
- ② Jaune: à la batterie de la voiture (12 V constant)
- ③ Rouge: à la prise accesseoire
- ④ Bleu avec bande blanche: à l'antenne automatique (200 mA max.)
- ⑤ Orange avec bande blanche: à l'interrupteur d'éclairage de la voiture
- ⑥ Autres: aux enceintes

2 Connectez le cordon d'antenne.

3 Finalement, connectez le faisceau de fils à l'appareil.

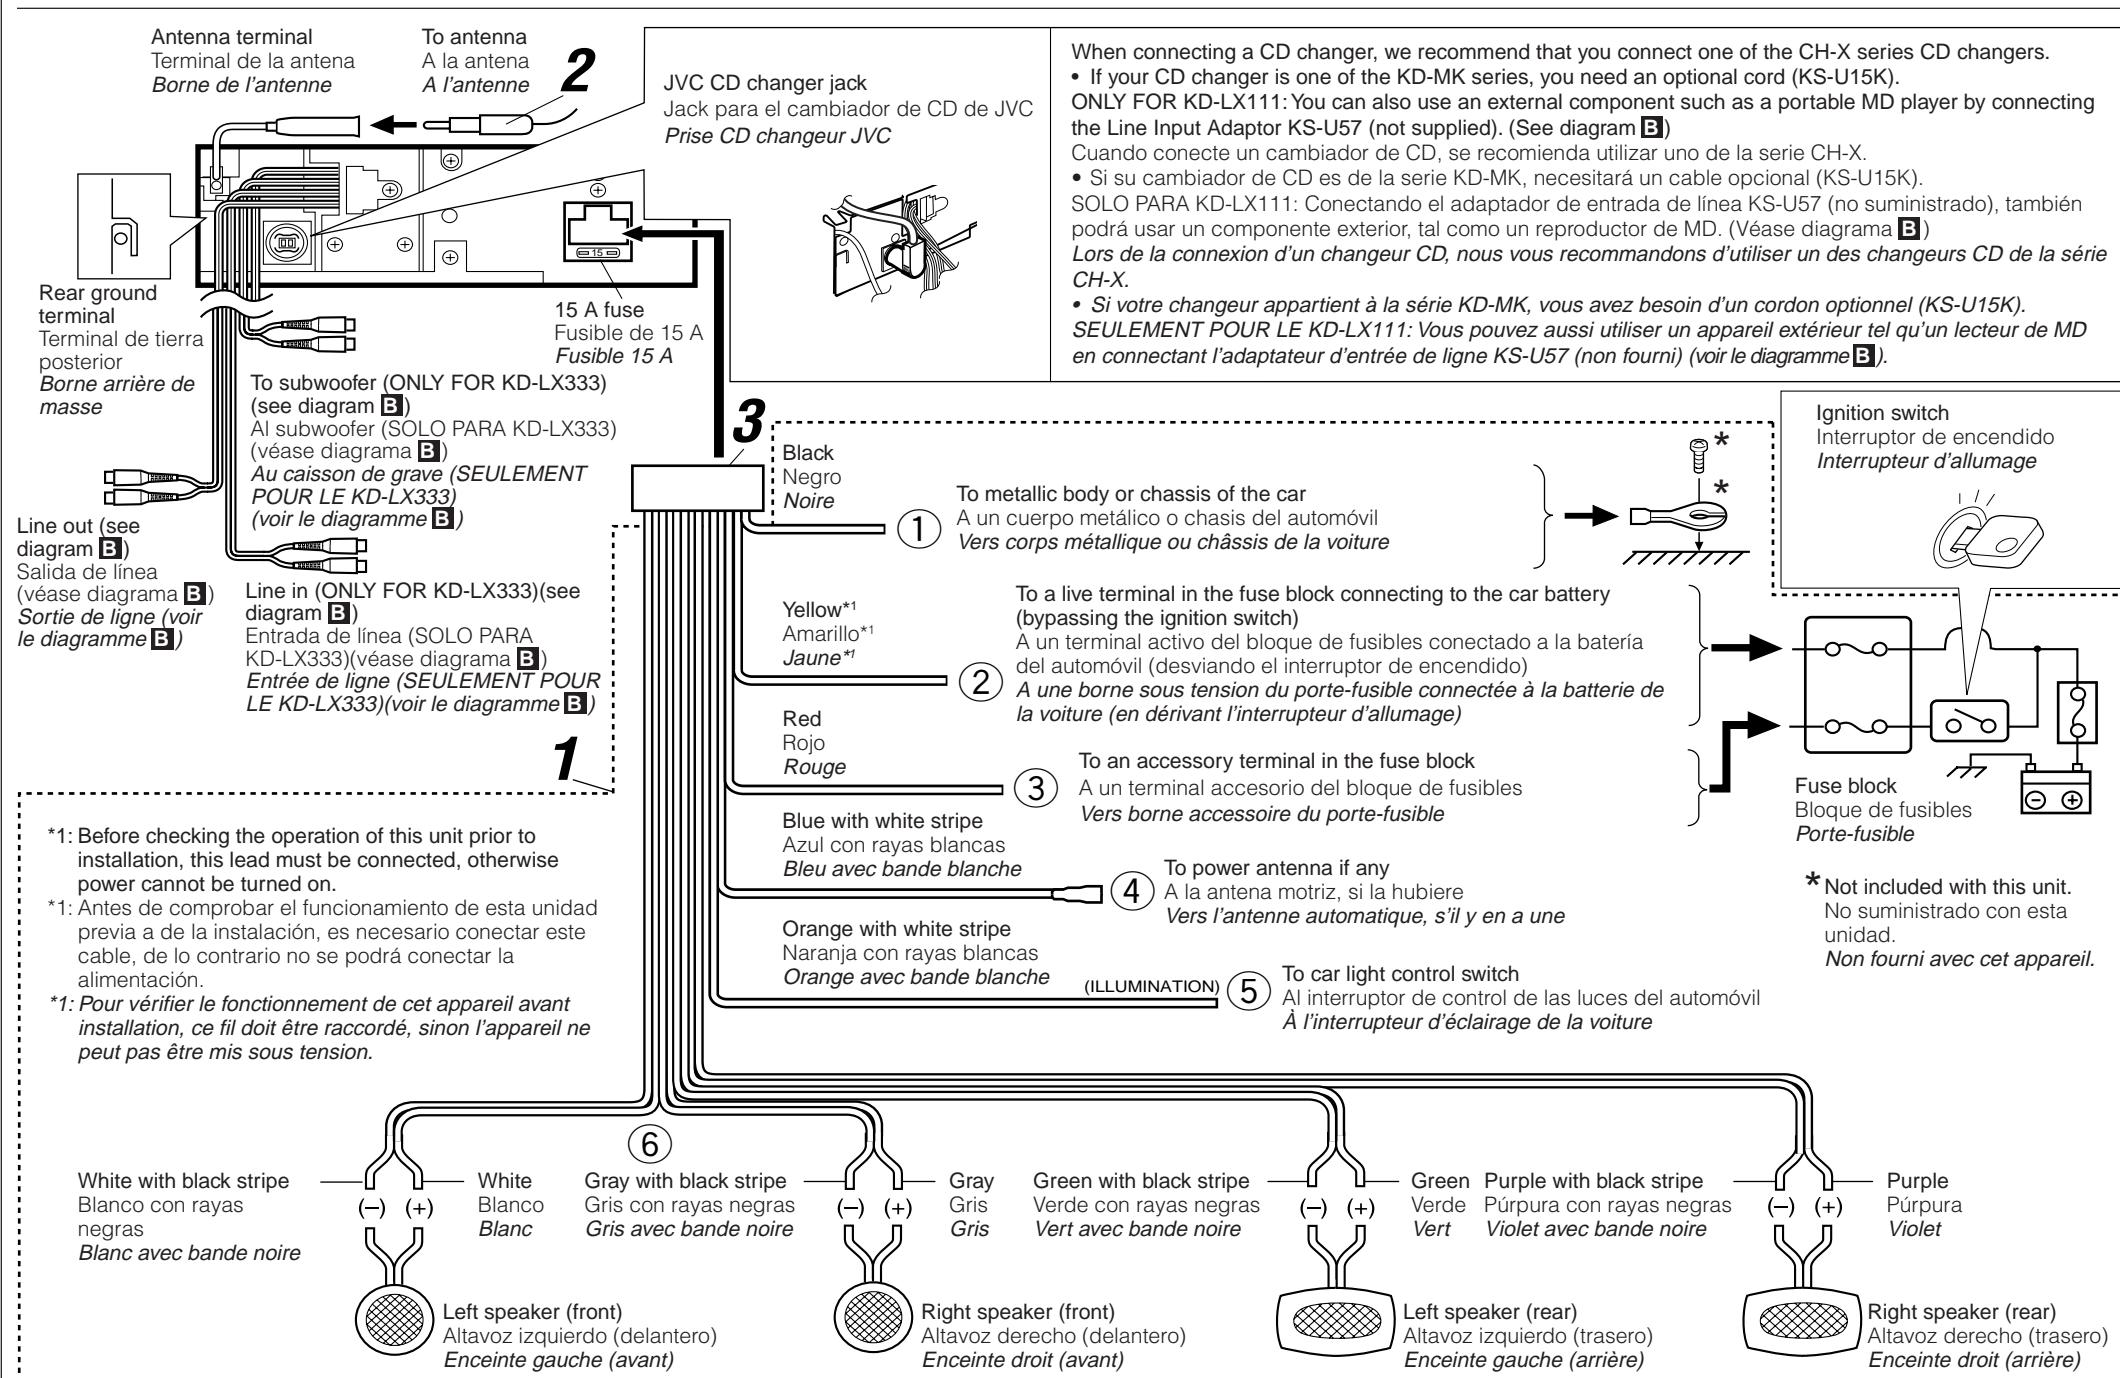

B Connections Adding Other Equipment / Conexiones para añadir otros equipos / Raccordement pour ajouter d'autres appareils

You can connect an amplifier and other equipment to upgrade your car stereo system. For their connections, refer to the instructions supplied with each component.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- For amplifier only:
 - **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**
 - **ONLY FOR KD-LX333:** The line output level of this unit is kept high to maintain the hi-fi sounds reproduced from this unit.
 - When connecting an external amplifier to this unit,** turn down the gain control on the external amplifier to obtain the best performance from this unit.
- **ONLY FOR KD-LX333:** Connect this unit's SUBWOOFER OUT plugs to the amplifier's line-in jacks.


Usted podrá conectar un amplificador y otros equipos para mejorar el sistema estéreo de su automóvil. Para las conexiones, refiérase a las instrucciones suministradas con cada componente.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- Sólo para el amplificador:
 - **Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar.**
 - **SOLO PARA KD-LX333:** El nivel de salida de línea de esta unidad permanece alto para que corresponda con los sonidos de alta fidelidad reproducidos por esta unidad.
 - Cuando conecte un amplificador externo a esta unidad,** disminuya el control de ganancia del amplificador externo para obtener un óptimo rendimiento de esta unidad.
- **SOLO PARA KD-LX333:** Conecte las clavijas SUBWOOFER OUT de esta unidad a los jack de entrada de línea del amplificador.

Vous pouvez connecter un amplificateur ou autre appareil pour améliorer votre système autoradio. Pour leur connexion, référez-vous aux instructions fournies avec chaque appareil.


- Connectez le fil de commande à distance (bleu avec bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- Pour l'amplificateur seulement:
 - Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés.
 - **SEULEMENT POUR LE KD-LX333:** Le niveau de sortie de ligne de cet appareil est maintenu à un niveau élevé pour maintenir une qualité Hi-Fi pour les sons reproduits par cet appareil.
 - Lors de la connexion d'un amplificateur extérieur à cet appareil,** diminuez le réglage du gain sur l'amplificateur extérieur pour obtenir les meilleures performances de cet appareil.
- **SEULEMENT POUR LE KD-LX333:** Connectez les fiches SUBWOOFER OUT de cet appareil aux prises d'entrée de ligne de l'amplificateur.

Amplifier / Amplificador / Amplificateur

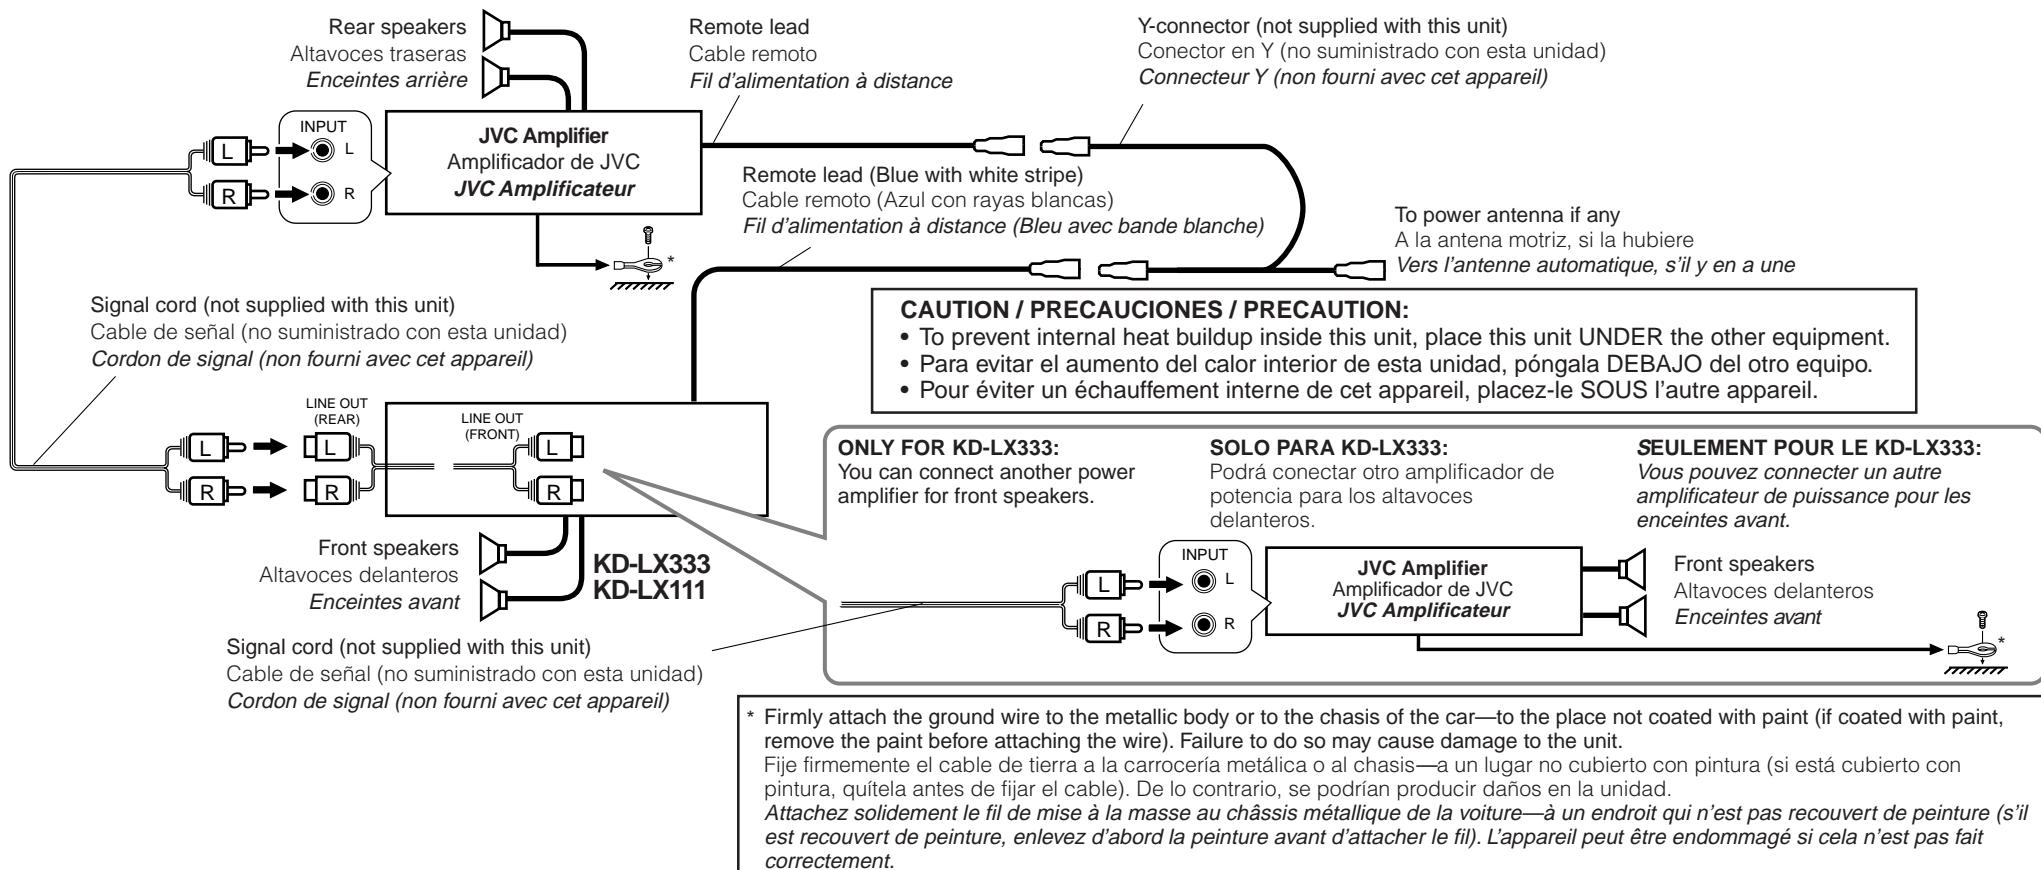


External component / Componente exterior / Appareil extérieur


FOR KD-LX333/PARA KD-LX333/POUR LE KD-LX333

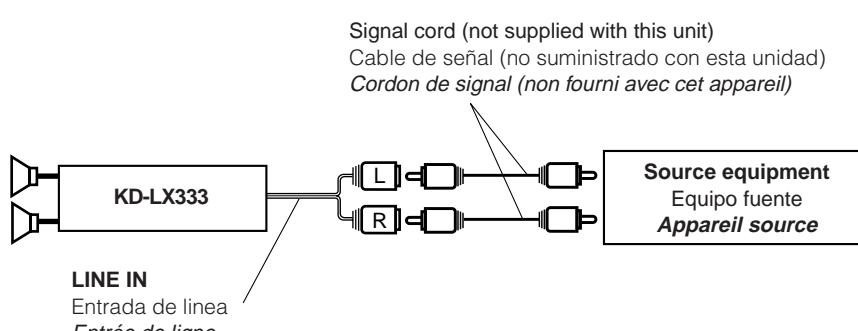

Signal cord (not supplied with this unit)
Cable de señal (no suministrado con esta unidad)
Cordon de signal (non fourni avec cet appareil)

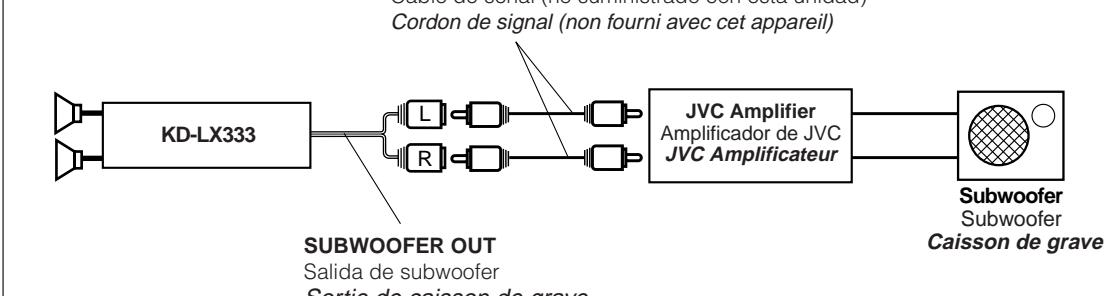

FOR KD-LX111/PARA KD-LX111/POUR LE KD-LX111

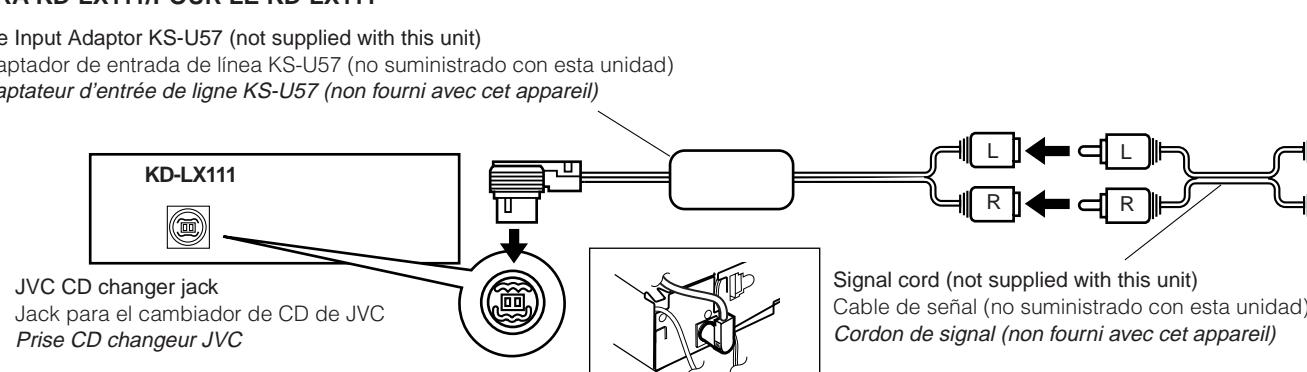

TROUBLESHOOTING

- The fuse blows.
* Are the red and black leads connected correctly?
- Power cannot be turned on.
* Is the yellow lead connected?
- No sound from the speakers.
* Is the speaker output lead short-circuited?
- Sound is distorted.
* Is the speaker output lead grounded?
* Are the “–” terminals of L and R speakers grounded in common?
- The unit becomes hot.
* Is the speaker output lead grounded?
* Are the “–” terminals of L and R speakers grounded in common?

LOCALIZACION DE AVERIAS

- El fusible se quema.
* ¿Están los conductores rojo y negro correctamente conectados?
- No es posible conectar la alimentación.
* ¿Está el cable amarillo conectado?
- No sale sonido de los altavoces.
* ¿Está el cable de salida del altavoz cortocircuitado?
- El sonido presenta distorsión.
* ¿Está el cable de salida del altavoz conectado a masa?
* ¿Están los terminales “–” de los altavoces L y R conectados a una masa común?
- La unidad se calienta.
* ¿Está el cable de salida del altavoz conectado a masa?
* ¿Están los terminales “–” de los altavoces L y R conectados a una masa común?

EN CAS DE DIFFICULTES

- Le fusible saute.
* Les fils rouge et noir sont-ils raccordés correctement?
- L'appareil ne peut pas être misé sous tension.
* Le fil jaune est-elle raccordée?
- Pas de son des enceintes.
* Le fil de sortie d'enceinte est-il court-circuité?
- Le son est déformé.
* Le fil de sortie d'enceinte est-il à la masse?
* Les bornes “–” des enceintes gauche et droit sont-elles mises ensemble à la masse?
- L'appareil devient chaud.
* Le fil de sortie d'enceinte est-il à la masse?
* Les bornes “–” des enceintes gauche et droit sont-elles mises ensemble à la masse?