


JVC

DR-MV100B DVD VIDEO RECORDER Basic Operation


QUICK START GUIDE

Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>


Included Accessories

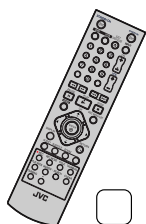

☐ Remote control

 

 ☐ "AAA" battery x 2
(For remote control)



☐ RF cable




☐ Video cable




☐ Audio cable

Connection : Antenna or Wall jack (Cable TV) INSTRUCTIONS →pg. 10

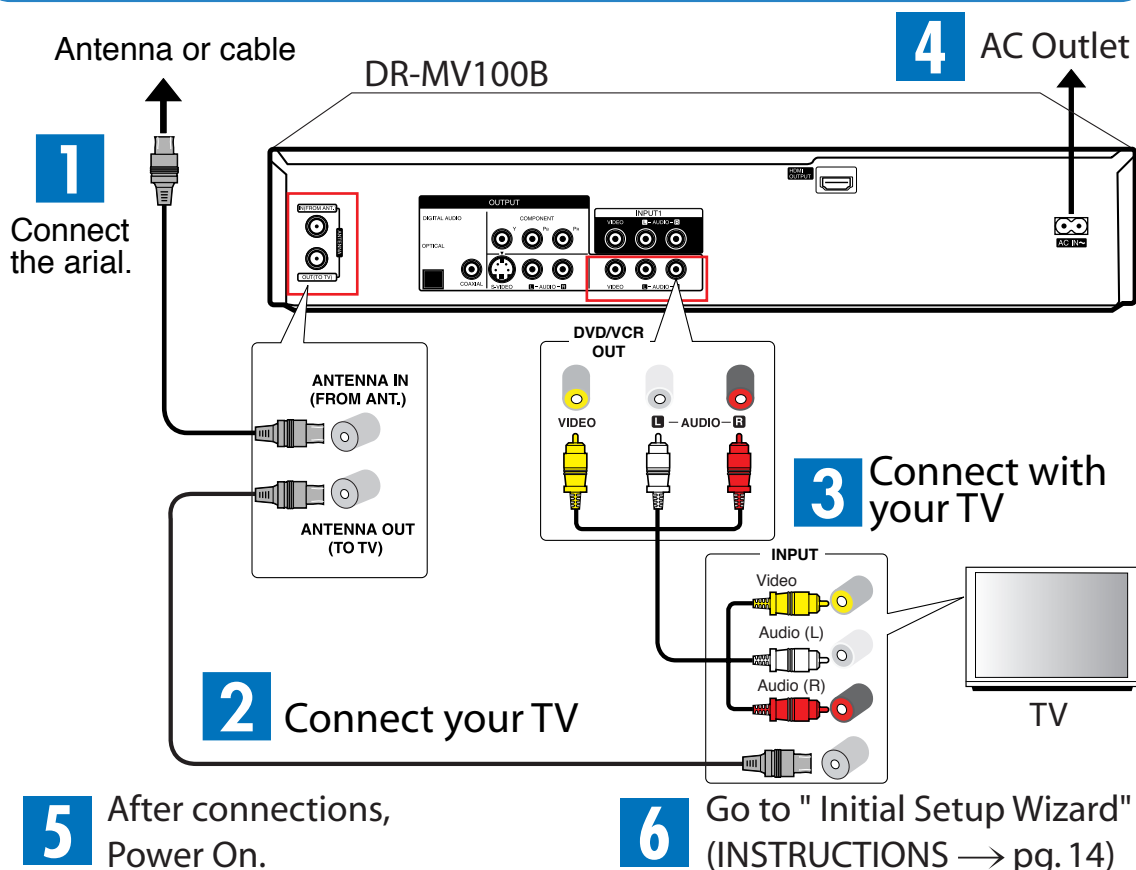

Connection: With Cable Box Or DBS Receiver


INSTRUCTIONS
→ pg. 9

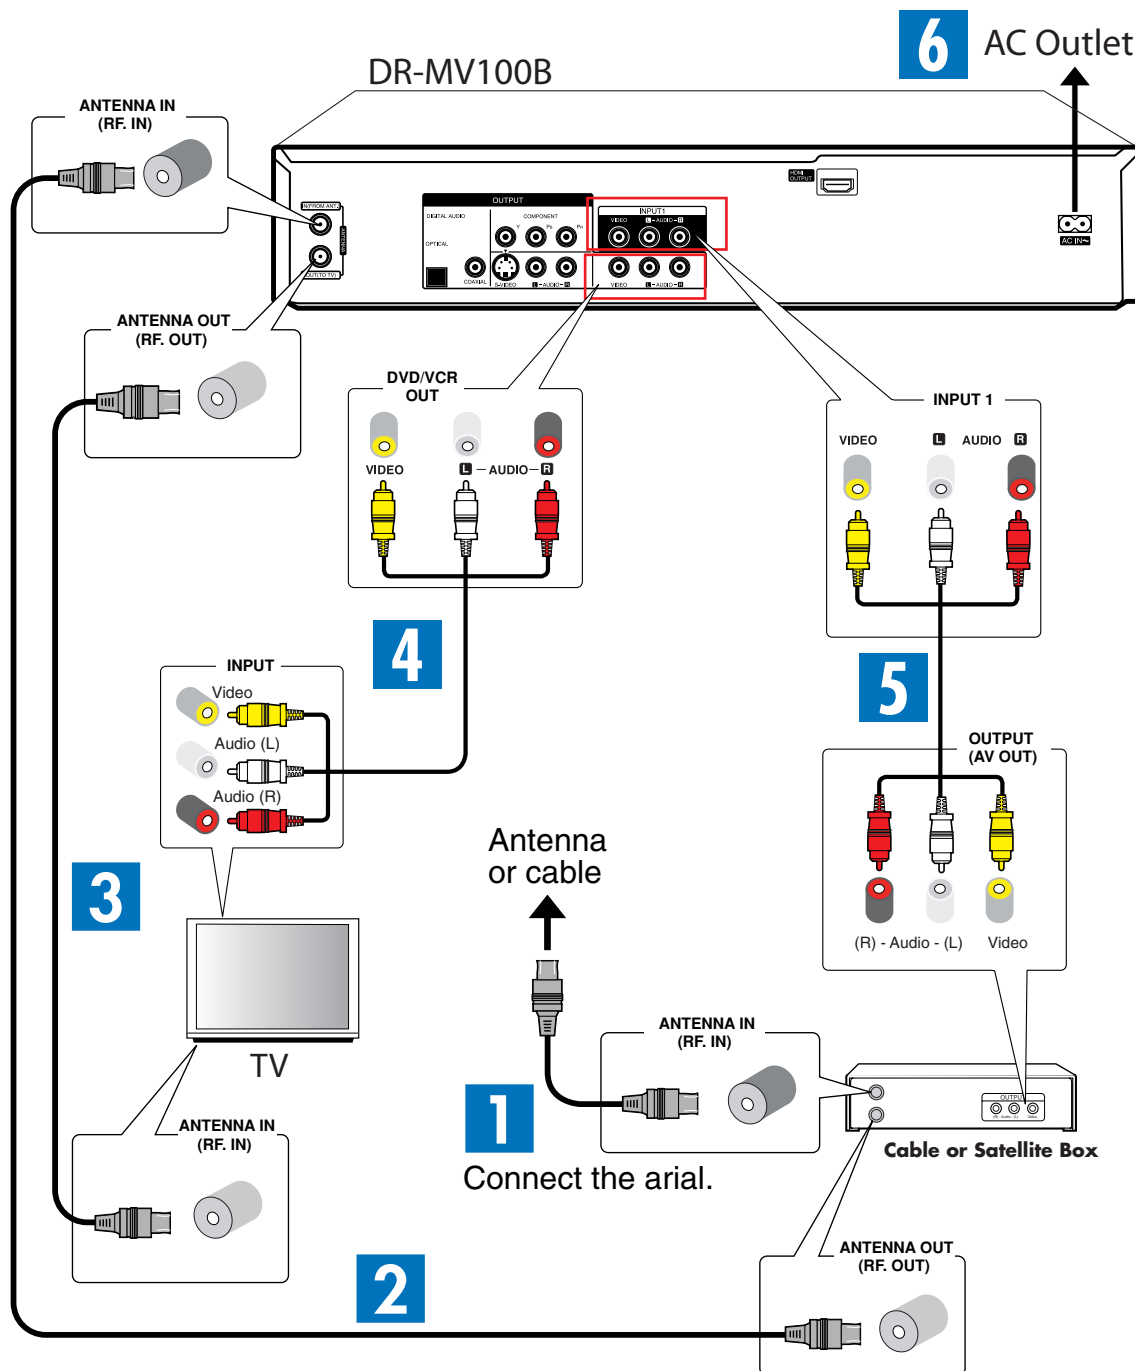

Initial Setup Wizard


INSTRUCTIONS

→ pg. 14

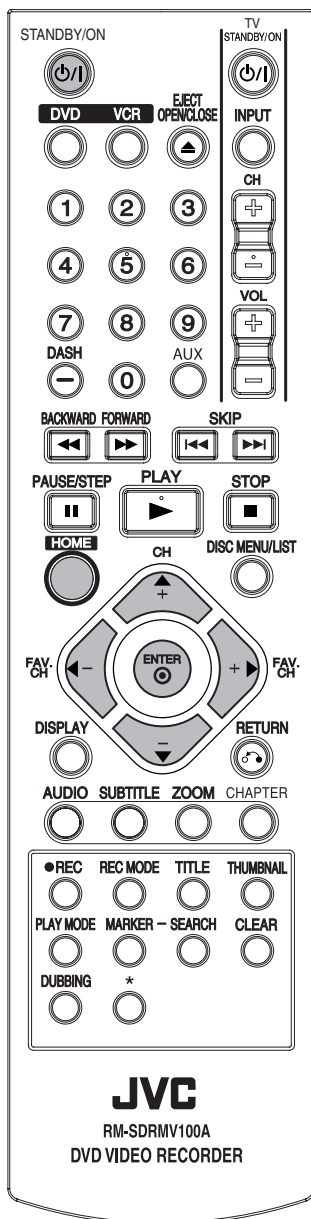


Select Language

 2




Move next step

3

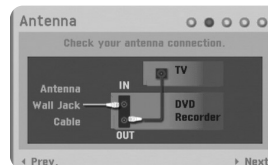


Select "Tuning Band"

 4





Press "ENTER"

5

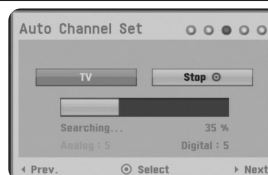


Set the "Date, Year and Time"

 6

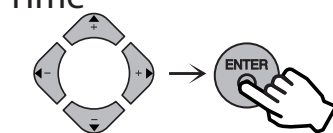

 Moves the cursor to the previous or next column.



Changes the setting at the current cursor position.

Press "STANDBY/ON"

1

STANDBY/ON



Press "ENTER" Finish

7



BASIC PLAYBACK

INSTRUCTIONS

→ pg. 24

DVD

Select "DVD"

1




Start Playback

2



Stop Playback

3

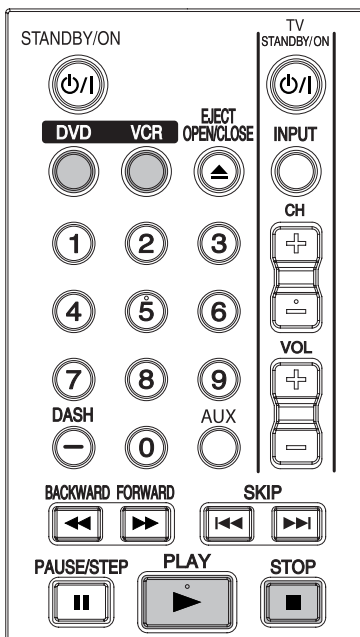

VHS

Select "VCR"

1



Start Playback

2



Stop Playback

3



Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, CD-R, CD-RW, Video CD, Audio CD

BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 34

Select "DVD or VCR"

1



Select Input
(AV1, AV2, DV IN or Ch)

2




Select Mode

3



DVD: XP, SP, LP or EP
VCR: SP or SLP

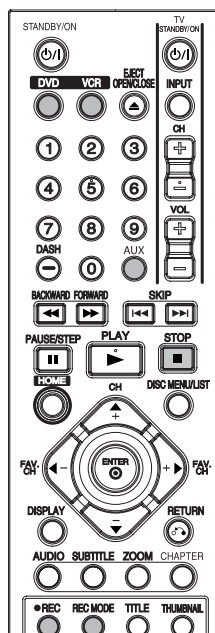

4

Start Recording



5

Stop Recording



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc.
(INSTRUCTIONS → pg. 21)

Recordable Discs: DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM

TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS
→ pg. 35


Select "HOME"

1



Select "Timer
Record"

2

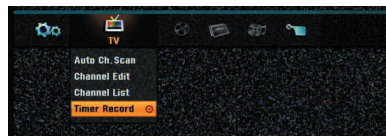

Press "ENTER"

3




Select "NEW" and
Press "ENTER"


4




5

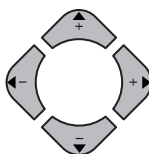

 Enter the necessary information for you timer recording(s).




Changes the setting at the current cursor position.

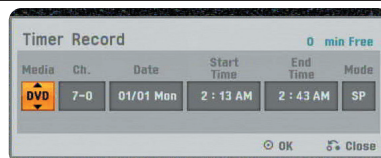

Press "ENTER"
to check on the
Timer Record List

6

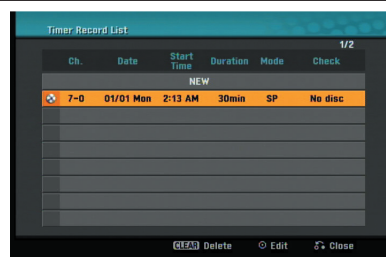


Press "RETURN"
Finish

7



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 21)

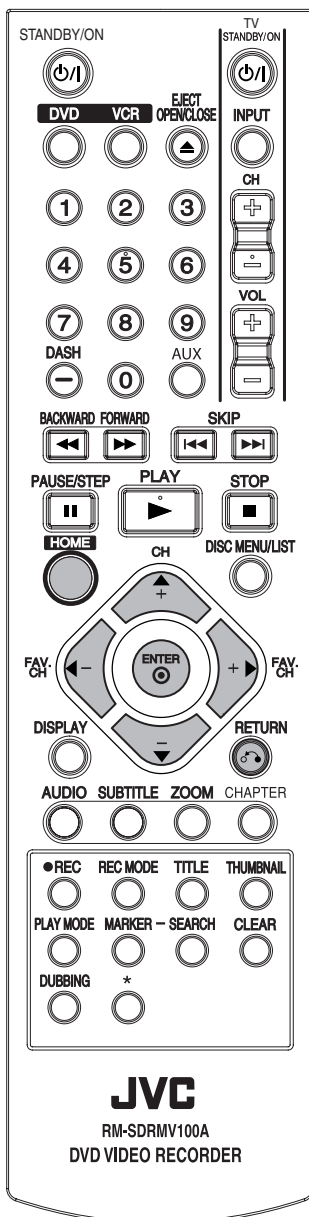

Dubbing from VCR to DVD

INSTRUCTIONS


→ pg. 37




You can copy the contents of a VHS tape to a DVD using the **DUBBING** button. This allows you to archive your old VHS tapes to DVD.

Preparation : • Set the resolution to 480i using the **OUTPUT STATUS** button before dubbing.
• Press **VCR** button to set the VCR mode.


1 Insert Blank Disc and Cassette

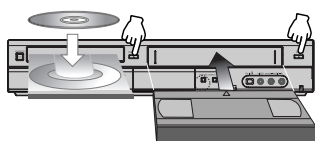


2 Find the place on the VHS tape from which you want to start dubbing.

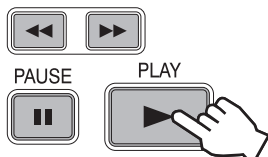

3 Access the Dubbing menu screen.

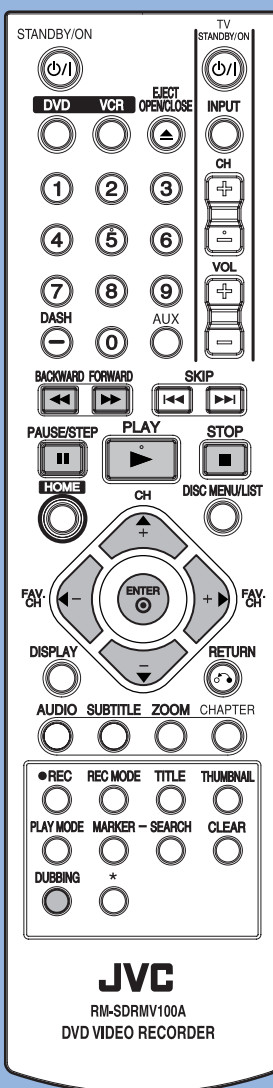


4 Select the desired Record Mode.

 

Select XP, SP, LP or EP

5 Select [Dubbing].

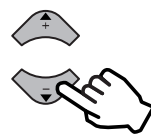

6 Start Dubbing.



7 Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 21)