



MICRO COMPONENT SYSTEM

UX-LP5

—Consists of CA-UXLP5 and SP-UXLP5

For turning off the demonstration display, see "Display Demonstration" on page 3.



ENGLISH

MP3/WMA

Thank you for purchasing a JVC product.



For customer use:
Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.
Model No.
Serial No.

For U.S.A.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

 
Getting Started

Supplied Accessories


- After unpacking, check to be sure that you have all the following items.
 - Remote control, RM-UXLP5J (x 1)
 - Lithium coin battery CR2025 (x 1)
 - The battery has been installed in the remote control when shipped from the factory.
 - AM loop antenna (x 1)
 - FM antenna (x 1)
 - Protection sheet (x 1)
- If anything is missing, consult your dealer immediately.

Prepare the Remote Control

When you use the remote control for the first time, pull out the insulation sheet.

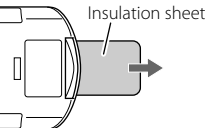

 To Replace the Battery in the Remote Control

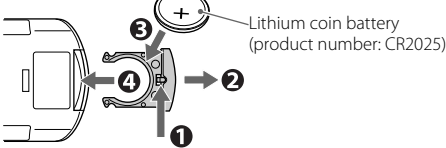

NOTES:

- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- To prevent the battery from overheating, cracking, or starting a fire:
 - Do not recharge, short, disassemble or heat the battery or dispose of it in a fire.
 - Do not leave the battery with other metallic materials.
 - Wrap the battery with tape and insulate when throwing away or saving it.
 - Do not poke the battery with tweezers or similar tools.
- Dispose of battery in the proper manner, according to federal, state, and local regulations.

For USA-California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate

CAUTION:

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warnings, Cautions and Others

Mises en garde, précautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Le symbole de l'éclair à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'une "tension dangereuse" non isolée dans le boîtier du produit. Cette tension est suffisante pour provoquer l'électrocution de personnes. Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'opérations d'entretien importantes au sujet desquelles des renseignements se trouvent dans le manuel d'instructions.

CAUTION:
Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION
To reduce the risk of electrical shocks, fire, etc.:
1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION
Afin d'éviter tout risque d'électrocution, d'incendie, etc.:
1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

IMPORTANT FOR LASER PRODUCTS

- CLASS 1 LASER PRODUCT
- CAUTION:** Do not open the top cover or cabinet. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION:** Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

IMPORTANT POUR PRODUITS LASER

- PRODUIT LASER CLASSE 1
- ATTENTION:** N'ouvrez pas le couvercle supérieur ni le coffret de l'appareil. Il n'y a aucune pièce réparable par l'utilisateur à l'intérieur de l'appareil; confiez toute réparation à un personnel qualifié.
- ATTENTION:** Rayonnement laser visible et/ou invisible de classe 1M une fois ouvert. Ne pas regarder directement dans le faisceau avec des instruments optiques. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
- REPRODUCTION DE L'ÉTIQUETTE: ÉTIQUETTE DE PRÉCAUTION PLACÉE À L'INTÉRIEUR DE L'APPAREIL.



CAUTION

The button in any position does not disconnect the mains line.

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).
The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp goes off. The power can be remote controlled.

ATTENTION

La touche , quelle que soit sa position, ne coupe pas la ligne principale.

Débrancher la fiche principale pour couper complètement l'alimentation du secteur (le témoin STANDBY s'éteint).
La fiche secteur ou un coupleur est utilisé comme dispositif de déconnexion de l'appareil, et l'appareil déconnecté doit être prêt à être utilisé.

- Quand l'appareil est en mode d'attente, le témoin STANDBY est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY s'éteint.

L'alimentation peut être commandée à distance.

CAUTION: Excessive sound pressure from earphones or headphones can cause hearing loss.

ATTENTION: Une pression acoustique excessive des écouteurs ou du casque d'écoute peut entraîner une perte auditive.

CAUTION: Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

ATTENTION: Les piles ne doivent en aucun cas être exposées à une chaleur excessive (lumière du soleil, feu, etc.).

CAUTION: Proper Ventilation

 
- To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:
 - Front: No obstructions and open spacing.
 - Sides/Top/Back: No obstructions should be placed in the areas shown by the dimensions below.
 - Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

ATTENTION: Aération correcte


Pour prévenir tout risque de décharge électrique ou d'incendie et éviter toute détérioration, installez l'appareil de la manière suivante:

- Avant: Bien dégagé de tout objet.
- Côtés/dessus/dessous: Assurez-vous que rien ne bloque les espaces indiqués sur le schéma ci-dessous.
- Dessous: Posez l'appareil sur une surface plane et horizontale. Veillez à ce que sa ventilation correcte puisse se faire en le plaçant sur un support d'au moins dix centimètres de hauteur.

Front view/Face

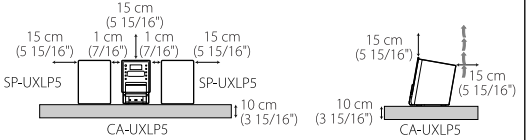

Side view/Côté

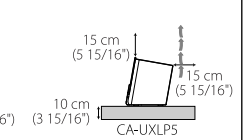 

CAUTION:

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

 
ATTENTION:

- Ne bloquez pas les orifices ou les trous de ventilation. (Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.



(European Union only)
(Union européenne seulement)

Basic and Common Operations

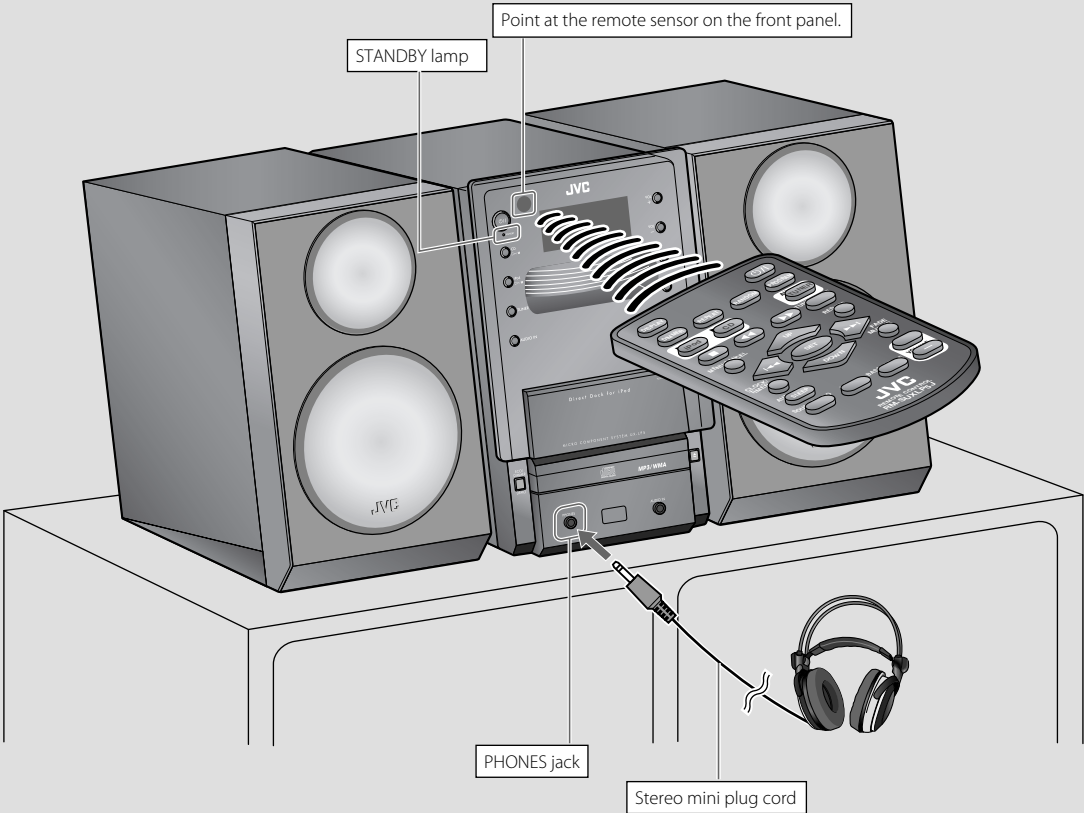

Display Demonstration

When you plug in the System, the display demonstration automatically starts.
To cancel the display demonstration, press and hold DEMO until "DEMO CLR" is displayed while the System is on standby.

- When the ECO Mode is activated, the display demonstration does not work (and you cannot deactivate it).
- When the display demonstration is activated, it also starts if no operation is done for about 2 minutes while the System is turned on.

Using Headphones

- Be sure to turn down the volume before connecting or putting on the headphones.
- Connecting the headphones will deactivate the speakers.
- Sound adjustments also affect the sound through the headphones.

NOTE:

DO NOT turn off (standby) the System with the volume set to an extremely high level; otherwise, the sudden blast of sound can damage your hearing, speakers and headphones when you turn on the System or start playback.

The operations on pages 4 to 6 are explained using the remote control, unless mentioned otherwise. However, if the System has the same or similar button names, they can also be used for the operations.

To	Press	Indication/Result
Turn on or off (standby) the power	System Remote	The STANDBY lamp on the System turns off/on.
Select a source		See "Playing Back a Disc on page 4 and "Listening to an iPod/Viewing Images on the iPod" on page 5.
Adjust the volume		Adjustable range: Level 0 ("VOL MIN") to level 40 ("VOL MAX").
Drop the volume in a moment		To restore the volume, press again, or adjust the volume level.
Emphasize the sound (Sound Turbo)		The S.TURBO indicator lights up. To cancel this function, press again.
Reinforce the bass sound (Hyper Bass Sound)		The BASS indicator lights up. To cancel this function, press again.
Adjust the tone (Bass/Treble)		Press once for adjusting the bass level; twice for treble level, then, press VOLUME +/-. Adjustable range: -3 to +3.
Dim the display		You can dim the display window and illumination lamp. While the System is turned on... DIM 1 → DIM 2 → DIM OFF (Canceled)
Set the clock and timer		For setting the clock, see "Setting the Clock and Using Timers" on page 6.
Change the display information		The display information changes as follows: FM: Clock → Frequency AM: Clock → Frequency CD: Current track elapsed time → CD total remaining time → Current track remaining time MP3/WMA: Current track elapsed time → ID3 tag → Current group/track
Set the ECO (Ecology) Mode		Press when the System is on standby. Setting the ECO (Ecology) Mode allows you to reduce power consumption by turning the display (clock display) off while on standby. To cancel this function, press again when the System is on standby.

3

Playing Back a Disc

This System can play back...

- CD.
- CD-R/CD-RW recorded in audio CD format (CD-DA) or recorded MP3/WMA files in ISO 9660 format.
- When playing back an MP3 or WMA track, MP3 or WMA indicator lights up.

Loading a Disc (on the System only)

- Press to open the disc tray.
- When using an 8 cm (3 3/16 inch) disc, place it on the inner circle of the disc tray.
- Press to close the disc tray.

Prohibiting Disc Ejection (on the System only)

You can lock the disc tray so that no one can eject the loaded disc while the System is on standby.

- Press these buttons for 2 seconds while the System is on standby.
To cancel the prohibition, repeat the same procedure.

Basic Disc Operations

To	Press	Indication/Result
Play back the disc		Current track number and elapsed playing time appear. During playback, press again to pause.
Stop playback		While playback is stopped, total track number and total playing time (for MP3/WMA files, group number and track number) appear.
Select a track		Select the next tracks.
		To go back to the beginning of the current or previous tracks.
Select a group (MP3/WMA only)		Select the next groups. Select the previous groups.
Forward search/Reverse search		Press and hold to fast-forward the track during playback. To stop searching, release the button. Press to fast-forward the track during playback. To stop searching, press . Press and hold to fast-reverse the track during playback. To stop searching, release the button. Press to fast-reverse the track during playback. To stop searching, press .
Change display information		Press repeatedly.

NOTES:

- If no disc is inserted, "NO DISC" appears on the main display.
- If MP3/WMA files are not recorded on the disc, "NO PLAY" appears on the main display.

RESUME Play

Press RESUME to activate RESUME Play so that the RESUME indicator lights up. When you stop the playback by one of the following operations, this System stores the beginning of the stopped track on the disc.

- Pressing once
- Changing the source

When you start playback again, playback starts from the beginning of the stopped track.

To clear the memory, open the disc tray.

- When you clear the memory and start playback, playback starts from the first track

To deactivate RESUME Play, press RESUME again.

NOTE:

This function does not work in Program Play.

Playing Repeatedly—Repeat Play

- Press repeatedly to specify the repeat mode as follows:
 - : Repeats the current (or specified) track.
 - : Repeats all tracks in the current group (MP3/WMA only).
 - : Repeats all tracks.
 - No indicator (Off): Normal playback
-

Programming the Playing Order—Program Play

- During stops, press so that the PRGM (program) indicator lights up.
- Select a track number.
or
Press to program the selected track.
- Repeat steps 2 and 3 to program other tracks you want.
 - If you try to program a 32nd track, "PRG FULL" will appear.
- The tracks are played back in the programmed order.

Operations for Program Play (while program stop mode)

- To check the programmed contents, press SET repeatedly.
- To add tracks, after " - - - " appears on the display by pressing SET repeatedly, repeat steps 2 and 3 above.
- To erase or exit the program, press .
 - The stored program is not kept.

Playing at Random—Random Play

- Press so that the RND (random) indicator lights up and playback starts in random order.

Operations for Random Play

- To skip a track, press .
- To go back to the beginning of the current track, press .
- To exit from random play, press RANDOM so that the RND (random) indicator disappears during playback.

2

4

