

 


**DR-MV80B
DVD VIDEO RECORDER
Basic Operation**


**QUICK
START
GUIDE**

**Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>**

Included Accessories

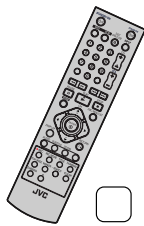

Remote control

 

"AAA" battery x 2
(For remote control)



 
Video cable



Audio cable

Basic Connection : AV (RCA) Cable

INSTRUCTIONS
→pg. 10

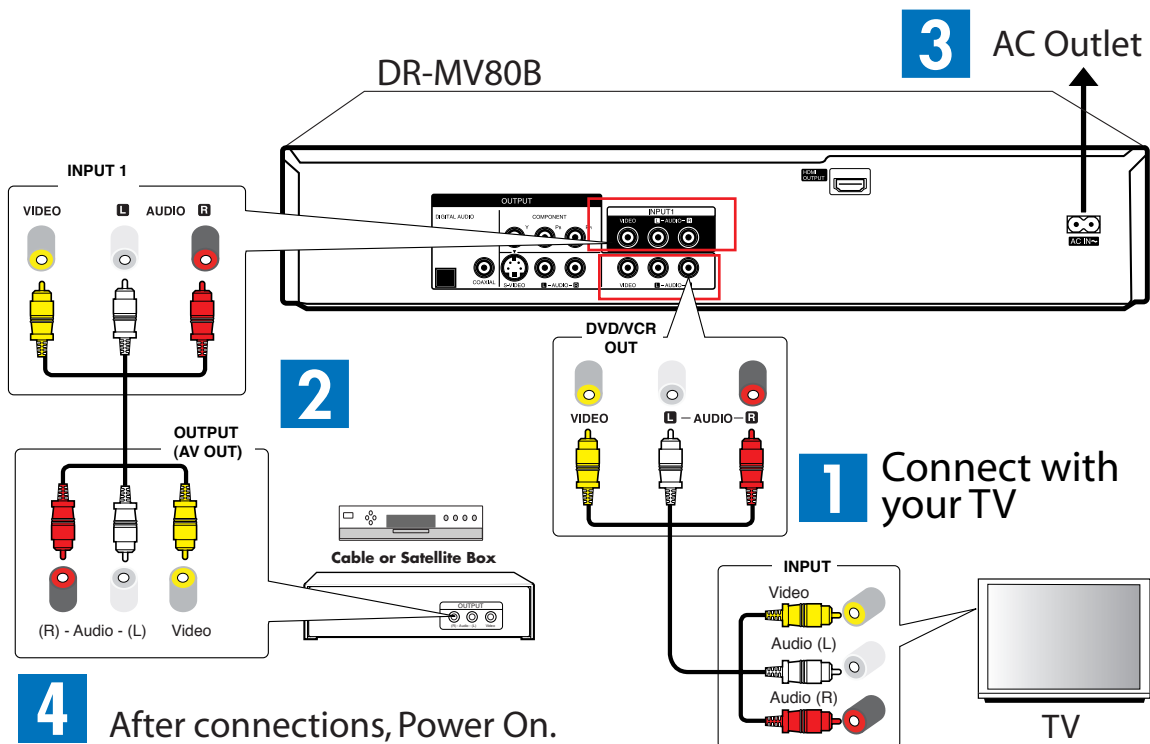


The TV must be set to EXT-Video, AUX, Video 1, or etc to watch VCR/DVD.

Initial Setup Wizard

INSTRUCTIONS

 → pg. 14

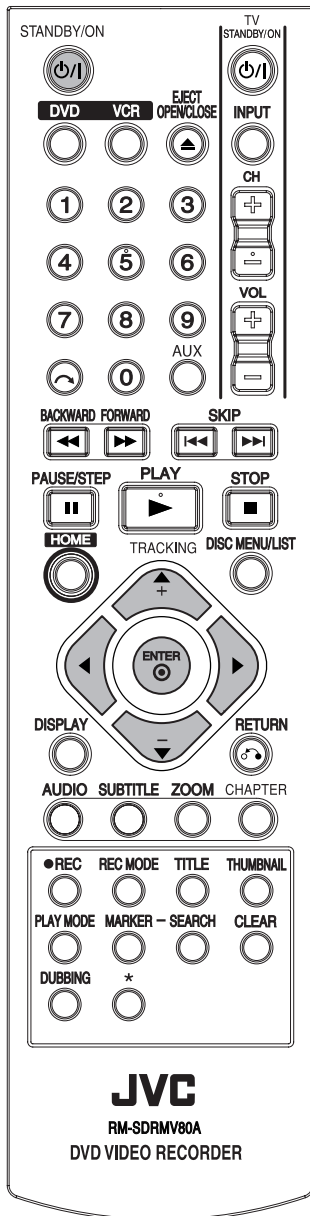

Press "STANDBY/ON"

1

STANDBY/ON



Select Language

2



 
 
Press "ENTER"

3




Set the "Date, Year and Time"

4

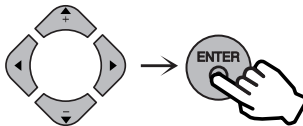

 Moves the cursor to the previous or next column.




Changes the setting at the current cursor position.

Press "ENTER"

Finish

 5

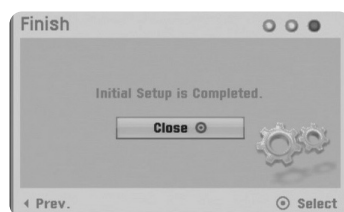

BASIC PLAYBACK

INSTRUCTIONS

→ pg. 20

DVD

 
Select "DVD"



Start Playback




Stop Playback

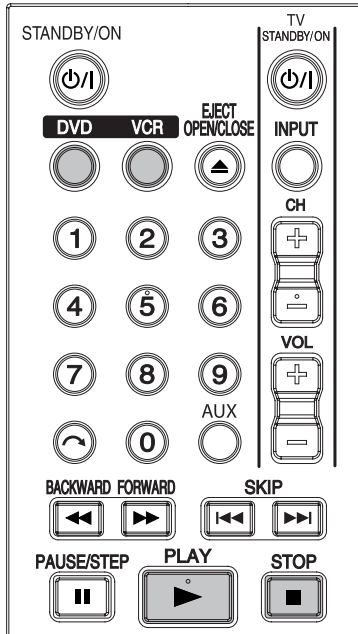

VHS

 Select "VCR"



Start Playback



Stop Playback

 


Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, CD-R, CD-RW, Video CD, Audio CD, DVD+R DL


BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 29


Select "DVD or VCR"




Select Input
(AV1, AV2 or DV IN)

 

Select Mode

 

DVD: XP, SP, LP or EP
VCR: SP or SLP

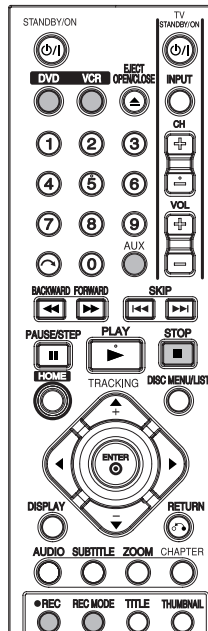 

Start Recording



Stop Recording



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)

Recordable Discs: DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM

TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS

→ pg. 31

 
Select "HOME"

1



Select "Timer Record"

2

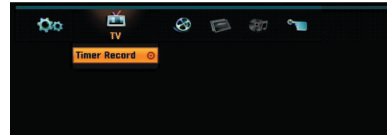

Press "ENTER"

3

 


Select "NEW" and Press "ENTER"

4



5

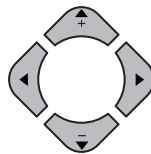


Enter the necessary information for your timer recording(s).



Moves the cursor left/right.



 Changes the setting at the current cursor position.

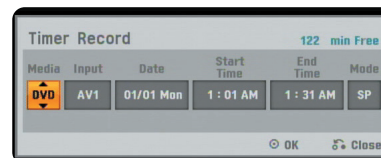

Press "ENTER" to check on the Timer Record List

6



 
Press "RETURN" Finish

7



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)

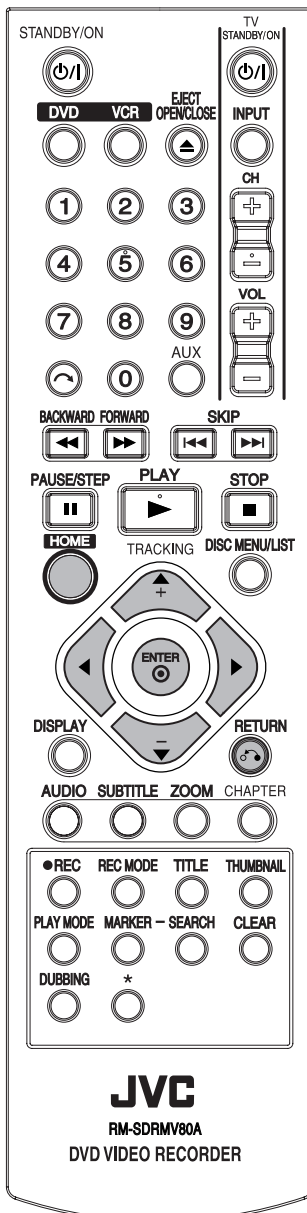


Timer-Link Recording

INSTRUCTIONS



→ pg. 30

Timer Link

 Note: Timer-Link works by using the timer function of most Cable/Satellite Boxes. Please check whether your current box has a "Timer" function.



  Note: Timer-Link doesn't work, if Cable/Satellite Box keeps a "Screen Saver" in "Power Off".
Timer-Link works only with "Input 1" connector.

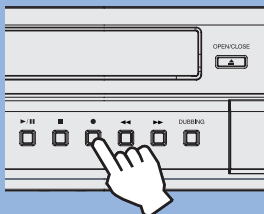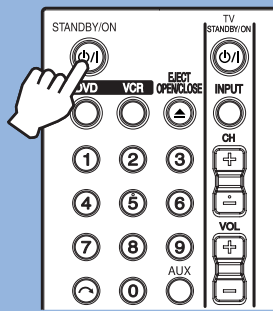

Note: If the Timer-Link "On", "🕒" indicator blinks on the JVC deck's display window.



1 Set Up Timer of Cable/Satellite Box

2 Power Off Cable/Satellite Box

3 Select "DVD or VCR"

4 Select Mode
REC MODE

 
5 Power Off DR-MV80B

6 Hold "● (REC)" Button for 3 seconds

1. When your Cable/Satellite Box is powered on by the timer function, DR-MV80B is also powered on and starts to record (It takes about 1 seconds) automatically.

2. When your Cable/Satellite Box is powered off using the timer function, DR-MV80B also stops recording (It takes about 3 seconds) and then powers off automatically.

Timer-Link mode: Deactivate

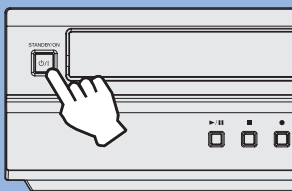

This operation makes "Timer-Link" been off after finishing Timer-Link record. If you keep "Timer-Link" on, you don't need this step.

7 Power On DR-MV80B

Dubbing from VCR to DVD

 
INSTRUCTIONS
→ pg. 32




You can copy the contents of a VHS tape to a DVD using the DUBBING button. This allows you to archive your old VHS tapes to DVD.

Preparation : Press VCR button to set the VCR mode.


1 Insert Blank Disc and Cassette

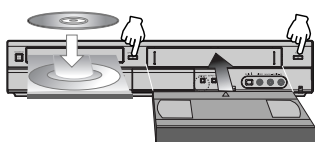

 
2 Find the place on the VHS tape from which you want to start dubbing.

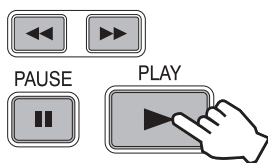

3 Access the Dubbing menu screen.

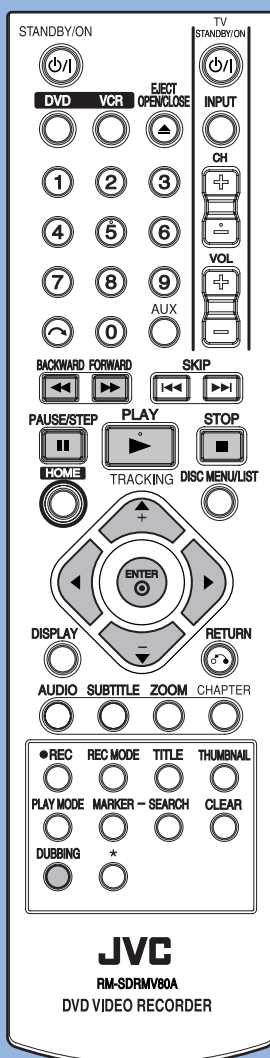 


4 Select the desired Record Mode.

 

Select XP, SP, LP or EP

 5 Select [Dubbing].

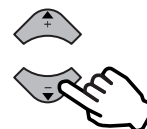

6 Start Dubbing.



7 Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)