



DR-MV150B
DVD VIDEO RECORDER
Basic Operation

**QUICK
 START
 GUIDE**


Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>

Connections


INSTRUCTIONS
 →pg. 10

1 Connect the Antenna, Cable TV, Cable Box

Basic-1 : Antenna or Wall Jack (Cable TV)

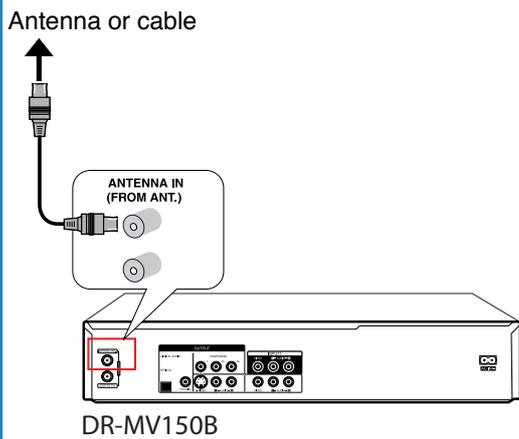

Basic-2 : Cable or Satellite Box

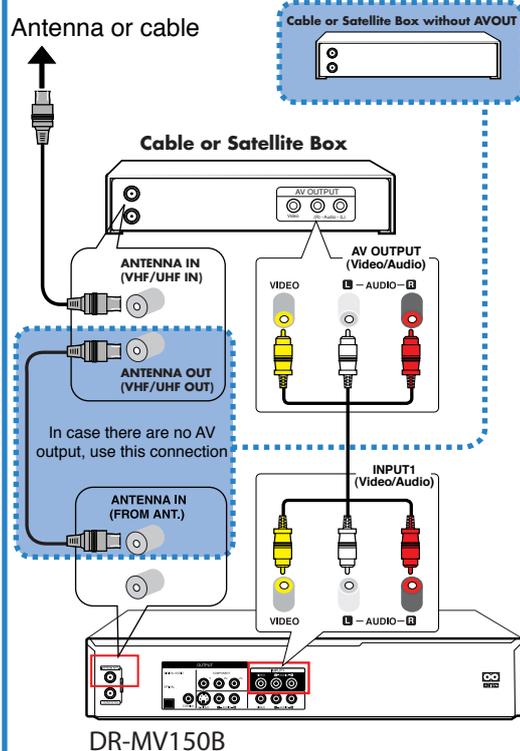

Included Accessories


- Remote control
- "AAA" battery x 2 (For remote control)
- RF cable
- Video cable
- Audio cable

Basic-3 : Connecting To TV

INSTRUCTIONS
→ pg. 11


2 Connect with your TV

3 AC Outlet

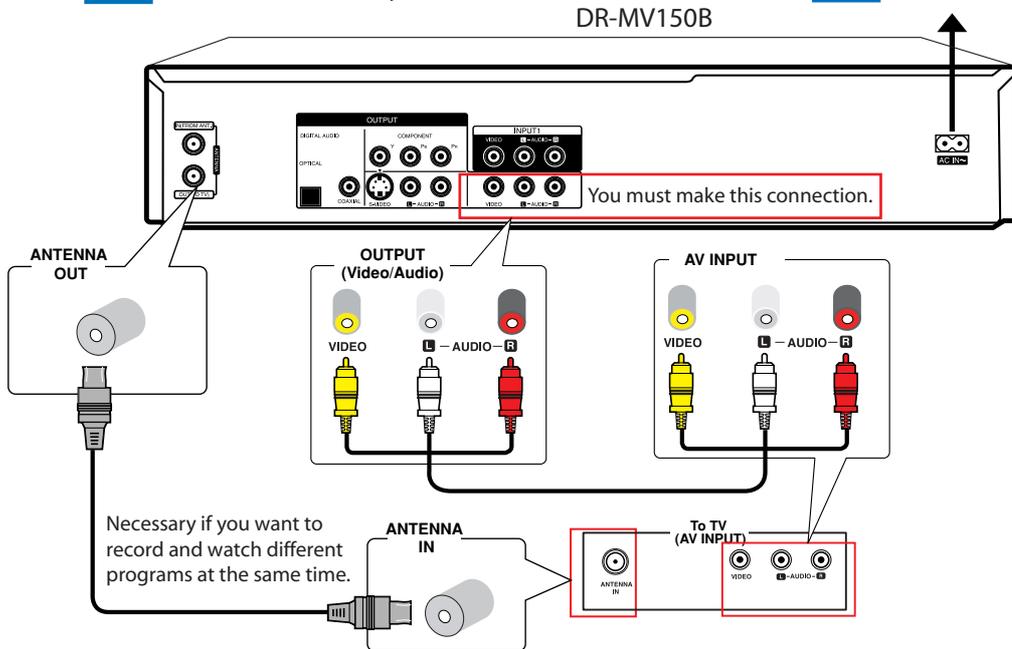

The TV must be set to EXT-Video, Aux, Video 1, or etc to watch DVD, VCR or Tuner.

Basic-4 : If your TV has Antenna In Jack only.

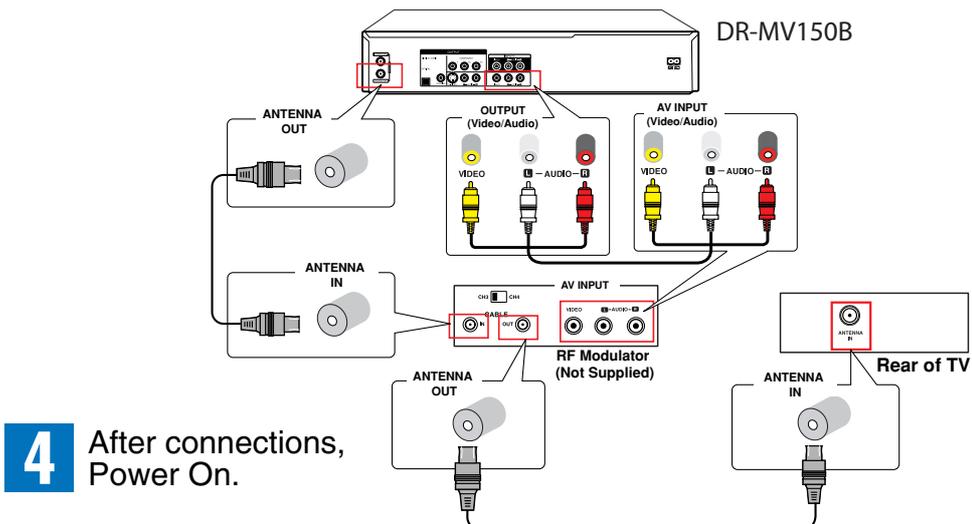


The TV must be set to the same channel as the output of the RF Modulator.

Initial Setup Wizard

INSTRUCTIONS

→ pg. 15

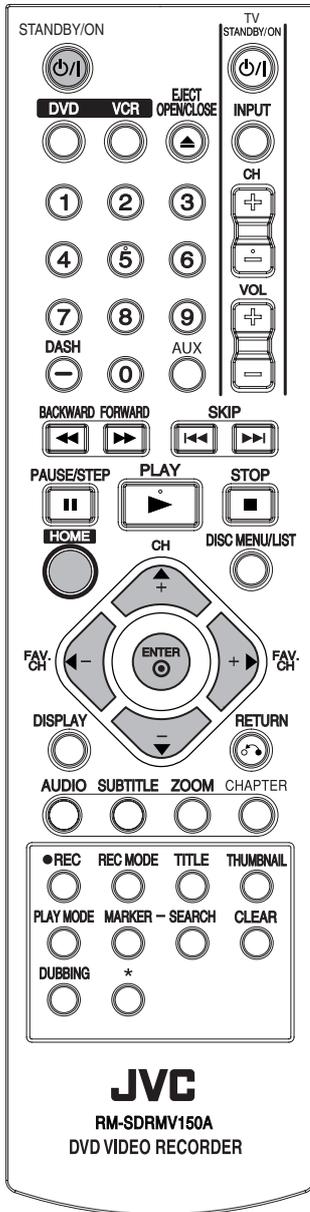


JVC

RM-SDRMV150A
DVD VIDEO RECORDER


Select Language

2

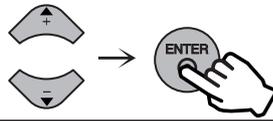


Move next step

3

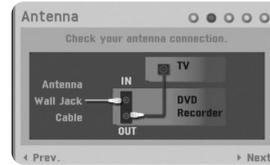

Select "Tuning Band"

 4




Press "ENTER"

5



Set the "Date, Year and Time"

6

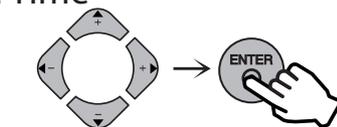

  Moves the cursor to the previous or next column.

  Changes the setting at the current cursor position.

Press "STANDBY/ON"

1

STANDBY/ON



Press "ENTER"

Finish

7



The Remote code must be set correctly. Refer to page 8 of the Instruction.

BASIC PLAYBACK

INSTRUCTIONS
→ pg. 25

DVD


Select "DVD"



Start Playback



Stop Playback

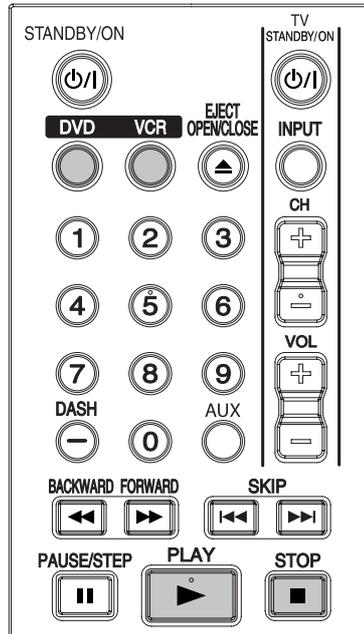

VHS

Select "VCR"



Start Playback



Stop Playback



Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, CD-R, CD-RW, Video CD, Audio CD, DVD+R DL

 
BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 34



Select "DVD or VCR"




Select Input
(AV1, AV2, DV IN or Ch)




Select Mode

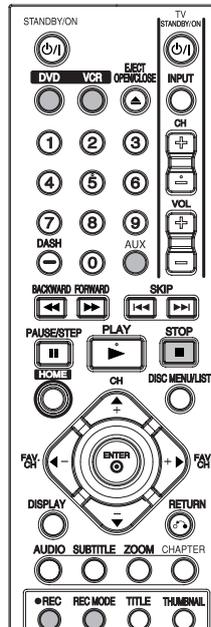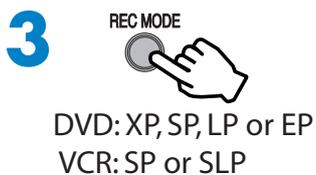

Start Recording

 

Stop Recording

 

Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)

Recordable Discs: DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM

TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS


→ pg. 35

1 Select "HOME"



2 Select "Timer Record"

2

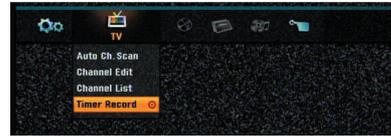

3 Press "ENTER"

3




4 Select "NEW" and Press "ENTER"


4



5

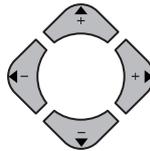

 Enter the necessary information for you timer recording(s).



Changes the setting at the current cursor position.



6 Press "ENTER" to check on the Timer Record List

6




7 Press "RETURN" Finish

7



Note:
To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)

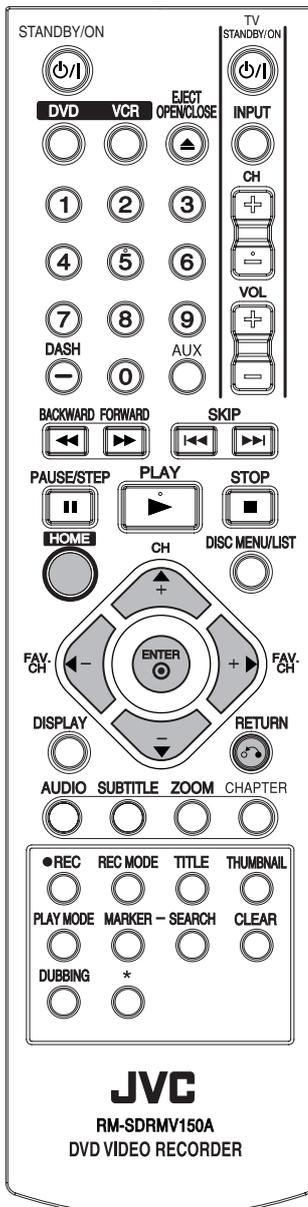

Dubbing from VCR to DVD


INSTRUCTIONS
→ pg. 37




You can copy the contents of a VHS tape to a DVD using the DUBBING button. This allows you to archive your old VHS tapes to DVD.

Preparation : • Set the resolution to 480i using the OUTPUT STATUS button before dubbing.
• Press VCR button to set the VCR mode.


1 Insert Blank Disc and Cassette

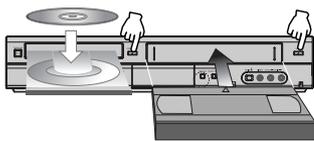


2 Find the place on the VHS tape from which you want to start dubbing.

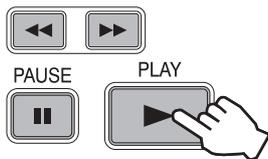

3 Access the Dubbing menu screen.

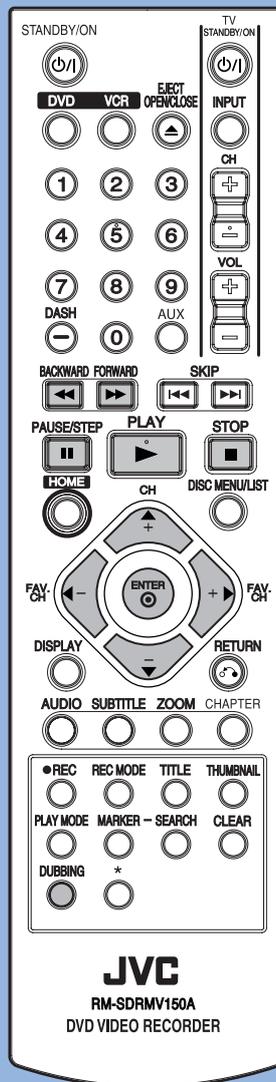


4 Select the desired Record Mode.

 

Select XP, SP, LP or EP


5 Select [Dubbing].

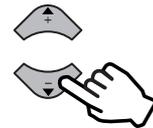

6 Start Dubbing.



 7 Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 22)