

KD-HDR30 and KD-AHD39 firmware update procedure:

CREATING UPDATE DISC:

Please download **CD3_3706-V0037-06.zip** from: <http://support.jvc.com/consumer/custrel/index.jsp> and save it on your desktop.

- Unzip it onto your desktop. Depending on the settings of your computer you will see unzipped file as CD_3706 or CD_3706.BIN
- Prepare blank CD-R or CD-RW (don't use DVD)
- Using your computer burning software (like NERO or ROXIO for example), create a disc containing only this file (no folders or other files).

Please make sure that the following settings are observed for burning the disc:

Format of CD should be set at **Disc at Once** (DAO). If CD is burned in any other than DAO mode, update may not be successful.

UPDATING KD-HDR30/KD-AHD39 WITH NEW FIRMWARE:

With engine running and no CD in your radio, insert this disc into CD slot. Update process will take only a few seconds.

You will see the following displays on your KD-HDR30 / KD-AHD39: CD UPG, then CD UPG OK and finally PLEASE EJECT.

NOTE : (If after inserting the disc only PLEASE EJECT is displayed and clicking is still there when playing a CD please forward your unit to nearest authorized JVC service center. You can find the list of service centers here: <http://maps.jvc.com/cAsclList/>)

After ejecting upgrade disc try playing a regular CD and verify if the clicking noise is gone.