

# JVC AMERICAS CORPORATION

---

---

## PRODUCT NOTICE

---

---

**SUBJECT:** Improvement on sound quality and iPod playability

**PN111-A**

**MODELS:** RV-NB50/RV-NB52

---

---

### Issue

Improvement for Connection with iPod Touch  
Improvement in sound quality  
Improvement of method of setting timer

---

---

### Resolution

Download firmware Ver.59 from [www.jvc.com](http://www.jvc.com)

---

---

### Preparation

USB Flash Drive (formatted in FAT16 or FAT32) and 10MB of free space  
Original remote for unit

---

---

### Procedure



- 1) Download the firmware and save it to your PC Desktop.
- 2) Insert a USB Flash Drive into your PC and format in FAT16 or FAT32.
- 3) Unzip and open the Downloaded file. Copy and Paste the file "host.h16" to USB Drive folder.
- 4) Turn off the unit and insert the USB Flash Drive in the USB port on the front of the unit.
- 5) While the unit is OFF, press **[9], [1], [4]** on the remote control.
- 6) RV-NB unit will turn on automatically, and "HELLO" and "MCU UPGR" will appear on the clock display.



7) While updating the software, the clock display will be blank. Please wait about 2 minutes and **DO NOT TURN OFF (or pull out USB Flash Drive) during updating.**



8) The clock display will appear when the update is complete.  
9) Gently remove the USB Flash Drive  
10) Done

---

#### To confirm the version of software

---

- 1) Press buttons [9], [1], and [3] on the remote control.
- 2) "MCU0059" should appear on the clock display.
- 3) If "MCU0059" does not appear, unplug the unit for 10 minutes and confirm that the USB Flash Drive is formatted in FAT16 or FAT32

Repeat the Update procedure.

---