



The Perfect Experience

Customer Care Center 800-252-5722

Firmware Update Instructions for (KD-R610/KD-A615/KD-R618)

This update is performed via CD-R or CD-RW and will correct the Missing FM Source Issue

CREATE UPDATE DISC:

- Please download the Firmware update file (SYS_1D_R618J107RC01W) and save it on your desktop.
- Unzip it onto your desktop. Depending on the settings of your computer you will see unzipped file as SYS_1D_R618J107RC01W.bin
- Prepare blank CD-R or CD-RW (Do not use DVD)
- Using your computer burning software (like NERO or ROXIO for example), create a disc containing only this file (no folders or other files).

Please make sure that the following settings are observed for burning the disc: Format of CD should be set at [Disc at Once (DAO)]. If CD is burned in any other than DAO mode update may not be successful.

Update procedure:

1. Power up unit and insert the update disc.
2. Unit will read and write ROM file. (takes about 3 seconds)
3. After ROM write is completed disc will automatically eject. (“OK xxxx” will be displayed)
4. Remove update disc.
5. Unit will display “PLEASE RESET”
6. Reset unit by pressing the “RESET” button located in front of face plate.