



The Perfect Experience

Customer Care Center (800)-252-5722

## Firmware Update Instructions for RD-N1\*

Corrects Toshiba LCD remotes affecting operation of this model

**This update is performed via USB Flash Drive**

**\*Only perform this update on model RD-N1**

### Procedure

---

#### 1. Download firmware Update data

- 1.1. Format the USB flash drive as FAT16 (or FAT32).
- 1.2. Download the "V41-JC.Zip" to your computer desktop
- 1.3. Extract software from the downloaded zip file.
- 1.4. Copy the extracted file "CA6812.bin" onto USB flash drive. (Do Not save **the file** into a folder on the flash drive, copy **the file** directly to the drive)

#### 2. Update procedure

- 2.1. Press the "Power" button to turn on the unit.
- 2.2. Select USB function by pressing the "Source" button on the unit.
- 2.3. Insert the USB flash drive into the USB slot on the unit.



- 2.4. The unit will start update automatically.
- 2.5. "MCU-UP" will be displayed during the update process.



- 2.6. Update process will take about 2 minutes to complete.

**Caution: Do not touch the unit and USB flash drive while update is in process.**

- 2.7. The unit will shut down automatically once the update is complete.
- 2.8. **After update is done,** remove the USB flash drive **from the unit.**



The Perfect Experience

Customer Care Center (800)-252-5722

**3. Confirm firmware update (option; not necessary to perform this confirmation)**

3.1. With unit in stand-by mode press and hold the “STOP” button located above volume knob on unit.

3.2. Current firmware version will be displayed as shown below.



3.3. If version is not indicated as shown above repeat update.