



Everio

Easy Start Guide

This easy start guide is designed to navigate you to using your new Everio quickly. Please refer to the owner's manual for a detailed listing of features.

For more details on operating this product, please refer to the "Detailed User Guide" at the following website:
<http://manual.jvc.co.jp/index.html>

For additional online video tutorials, please visit:
<http://camcorder.jvc.com/tutorials.jsp>



Customer Care Center

TOLL FREE 1-800-252-5722

For more details on operating this product, please refer to the "Detailed User Guide" at the following website:
<http://manual.jvc.co.jp/index.html>

For additional online video tutorials, please visit:
<http://camcorder.jvc.com/tutorials.jsp>


Register your EVERIO online at:
REGISTER.JVC.COM
and receive a special offer.

JVC U.S.A.
A Division of JVC Americas Corp.
1700 Valley Road, Wayne, NJ 07470
www.jvc.com



C1H 1210ASR-SW-VM

SUPPLIED ACCESSORIES FOR THE CAMERA

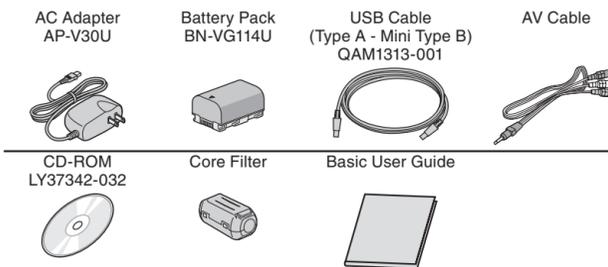

AVAILABLE ACCESSORIES FOR THE CAMERA

Product Name	Description
Battery Pack • BN-VG121U • BN-VG138U	• Provides a longer recording time than the battery pack that comes with this unit or it can also be used as a spare battery pack.
Battery Charger • AA-VG1U	• Enables the battery pack to be charged without using this unit.

To order any of these accessory please visit www.JVC.com or call 1-800-858-6442

TYPES OF USABLE microSD CARDS

Memory Cards	Capacity	Video (UXP)	Still images (1920x1080/FINE)
microSDHC Cards <SD High-capacity>	Supports 4GB to 8GB	8GB	44min.
		4GB	22min.
microSD Cards	Supports 256MB to 2GB	2GB	-
		1GB	-
		512MB	-
		256MB	-


Note: Operations are confirmed on the following microSD cards.

Manufacturer	Panasonic, TOSHIBA, SanDisk, ATP
Video	Class 4 or higher compatible microSDHC card (4 GB to 8 GB)
Still image	microSD card (256 MB to 2 GB), microSDHC card (4 GB to 8 GB)


• Using cards other than those specified above may result in recording failure or data loss.

CHARGING THE BATTERY

- Close the LCD to turn Off the Power
- Attach the battery
- Connect AC adapter into DC Terminal

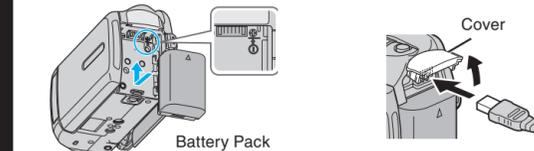

- Connect the AC adapter to outlet

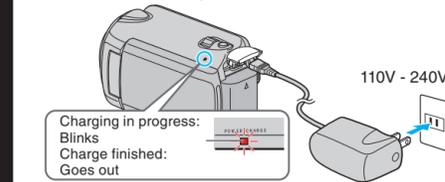

Battery Type	Charging Time	Continuous Recording	Actual Recording
BN-VG114U (Supplied)	2hr.30min.	1hr.30min.	50min.
BN-VG121U	3hr.30min.	2hr.15min.	1hr.15min.
BN-VG138U	6hr.10min.	4hr.05min.	2hr.15min.


Note: The battery pack is not charged at the time of purchase

CAUTION

- Be sure to use JVC battery packs. If you use any other battery packs besides JVC battery packs, safety and performance cannot be guaranteed.

INSERTING THE microSD CARD*


- Open the card slot cover
- Turn off the power before inserting or removing a microSD Card
- Install a microSD Card

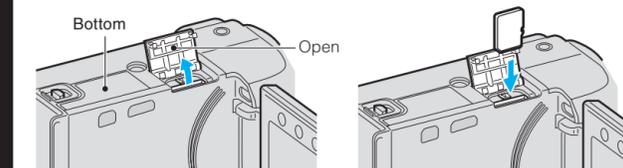

* SD card not included

PLAYBACK VIDEOS

- Open the LCD monitor to turn on the unit.
- Press [] button to select the playback mode.
- Press [] button to select the video or still image mode.

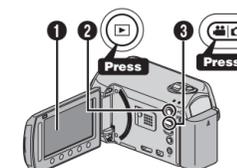

- Select from the index screen (highlight thumbnails) using the Slider.
- Touch the [] button.



PLAYBACK ON A TV

Preparation:

- Turn off both camera and TV.


To connect using the HDMI mini connector

- When connecting to a 1080p compatible TV, set [HDMI OUTPUT] to [AUTO].

Playback Operation

After the connection with TV is completed,

- Turn on the camera and the TV.
- Select the TV input switch.
- Start playback on the camera.

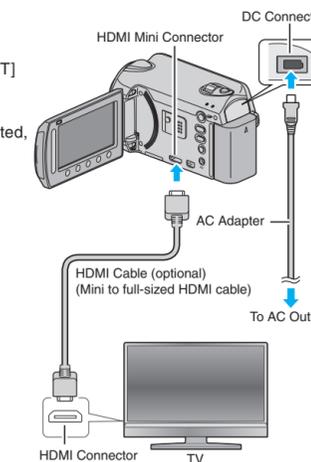

Accessories

Preparation

- Always check available memory space and battery power in advance.
- Make sure your battery is fully charged.
- A spare battery may be useful.

Stabilizing Your Picture

- Try these tips to improve the image:
- Look for a place to sit down and take your video.
- Look for something you can set your camera on.
- Consider using a tripod or a monopod to further steady your video.

Camera Movement

- The most enjoyable and professional looking videos generally have very little camera movement
- Treat all movements as a special effect.
- If you must move the camera, do it slowly.

Zooming

- As a general rule, your video will look better if you zoom the lens before you start your recording:
- Focus on the subject first, then begin recording.
- If you must zoom during a recording, treat it as a special effect and zoom slowly.

Exposure


- Remember to shoot with the sun or the primary light source behind you.
- Keeping the range of contrast in your scene to a reasonable level is the easiest way to improve the picture quality.
- Pay special attention to objects in the LCD screen that appear very washed out or over exposed.
- Making a simple change in how the camera is aimed or by zooming in slightly, you may reduce contrast to a reasonable range.

Length of Recording

- Many recordings are ruined by stopping the recording too soon and missing the best moment:
- Always try for at least a 10 second recording.
- When in doubt, let the recording continue longer.
- It is much easier to edit unneeded material later.


RECORDING FILES

- Open the LCD monitor to turn on the unit.
- Press [] button to select the recording mode.
- Press [] button to select the video or still image mode.

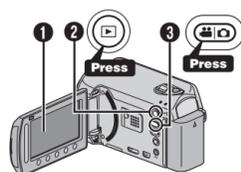


The Mode will be displayed in the LCD.

VIDEO RECORDING

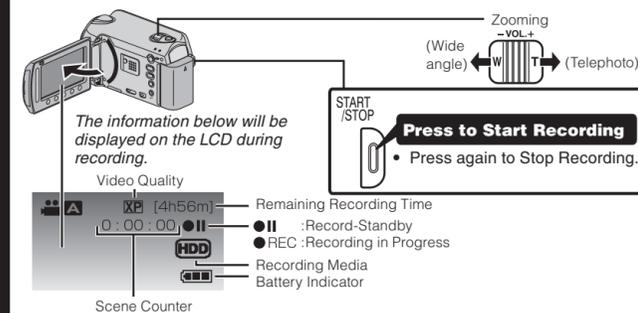

STILL IMAGE RECORDING

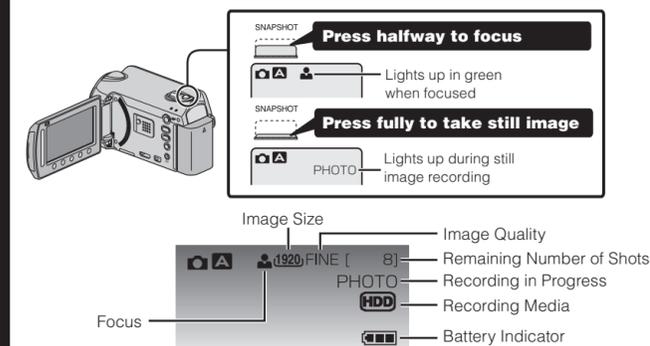

USING THE OPERATION BUTTONS


- To select an Operation icon appearing on the left side, touch the portion of the Slider next to Operation icon.
- To select an Operation icon appearing at the bottom of the screen, touch the buttons underneath them.



CHANGING MENU SETTINGS

Select an item from the menu screen.

- Touch the [] button.
- Slide your finger up and down on the Slider.
- Touch the [] button.

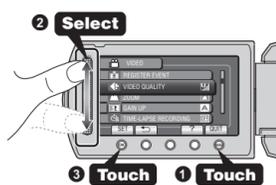

Using the Laser Touch Control

Recording Techniques

Recording Files

Playing Back Files

