

Notice the following information will help you solve your problems.
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.

- **After installing the unit**

→ Follow the procedure **A** described below.

- **If the unit does not operate**

→ Follow the procedure **A** described below.

- **If a CD is not ejected from the loading slot**

→ Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)


- **If a CD is not recognized (“NO DISC” or “EJECT ERR” appears on the display) even though there is a CD in the loading slot**

→ Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)


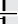
A To reset the microcomputer

Press the reset button on the front panel using a ball-point pen or a similar tool. This will reset the built-in microcomputer.

NOTE: Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

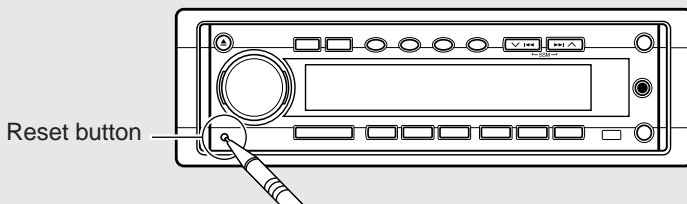

B To eject a CD by force

While pressing , press and hold  for more than 2 seconds. (Be careful not to drop the CD when ejecting.)

